



STEERING ANGLE SENSOR

COMPONENTS

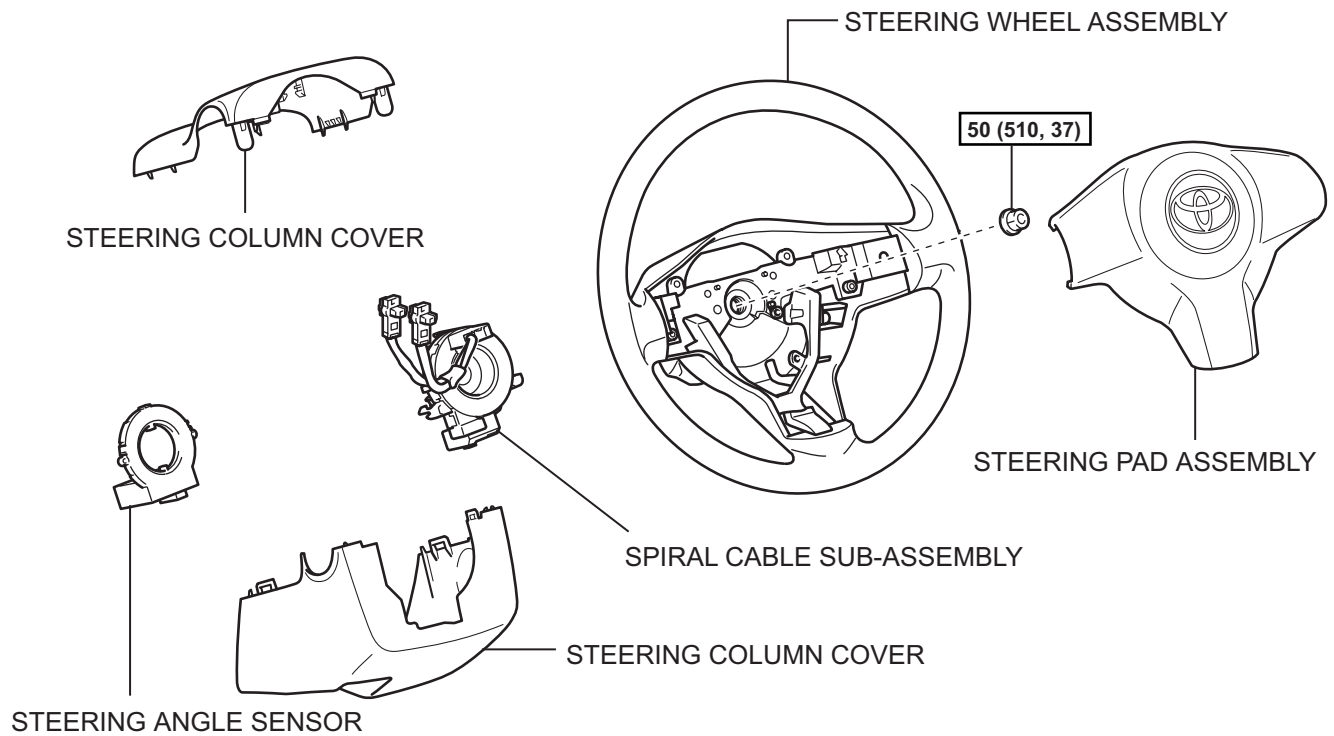

w/ Steering Pad Switch

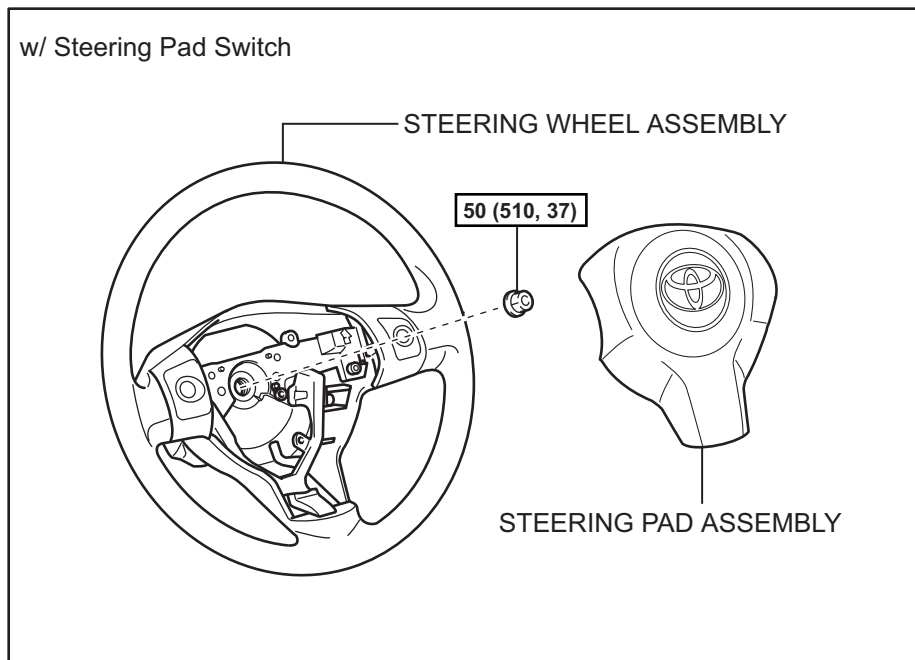

N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. PRECAUTION

CAUTION:

Be sure to read the "PRECAUTION" thoroughly before servicing (see page [RS-1](#)).

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD

4. REMOVE STEERING PAD ASSEMBLY (See page [RS-336](#))


5. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-12](#))

6. REMOVE STEERING COLUMN COVER (See page [SR-12](#))

7. REMOVE SPIRAL CABLE SUB-ASSEMBLY (See page [SR-13](#))

8. REMOVE STEERING ANGLE SENSOR

- (a) Detach the 6 claws and remove the sensor from the spiral cable.

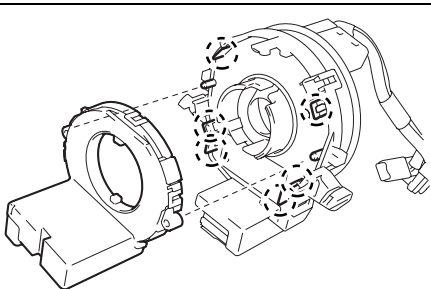

H

C128529