


TRACTION CONTROL SWITCH (for 2WD)

COMPONENTS


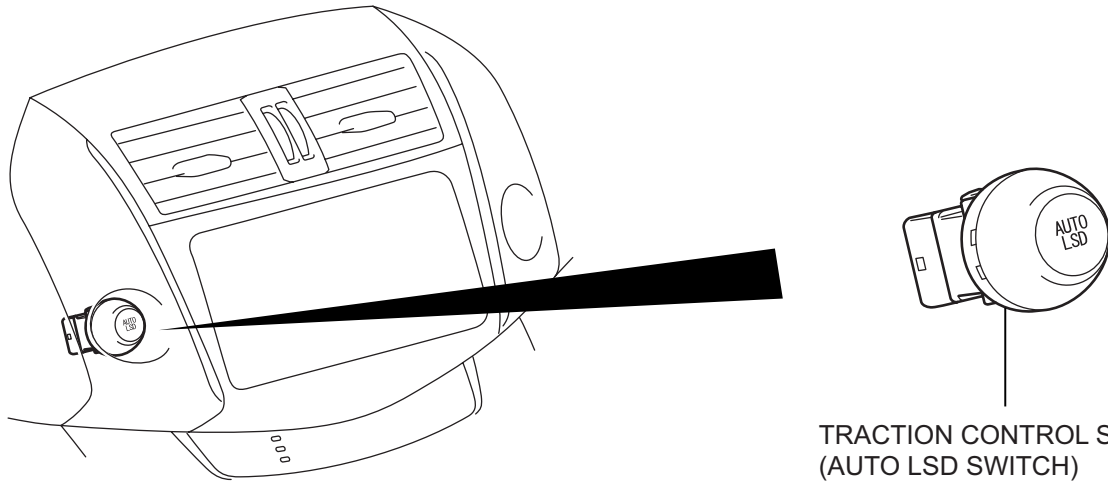


TRACTION CONTROL SWITCH
(AUTO LSD SWITCH)

BC

REMOVAL

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
- 2. REMOVE TRACTION CONTROL SWITCH (AUTO LSD SWITCH)
 - (a) Detach the 2 claws and remove the switch.

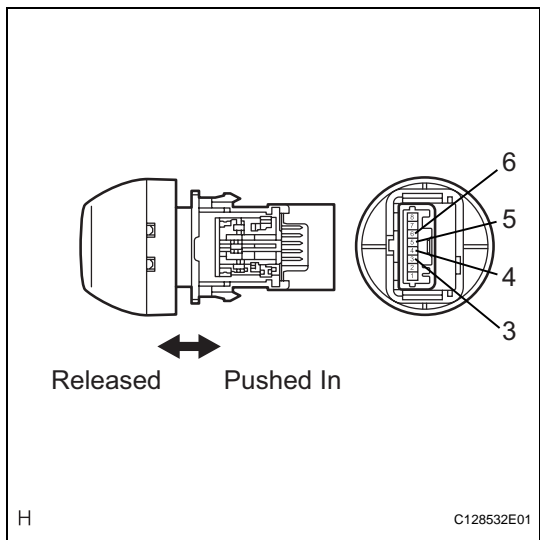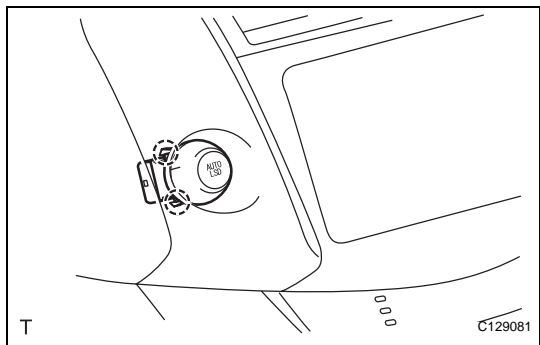

INSPECTION

- 1. CHECK TRACTION CONTROL SWITCH (AUTO LSD SWITCH)
 - (a) Measure the resistance of the switch.
Standard resistance

Tester Connection	Switch Condition	Specified Condition
3 - 6	Released	10 kΩ or higher
3 - 6	Pushed in	Below 25 Ω

- If the result is not as specified, replace the switch.
- (b) Check illumination operation.
 - (1) Connect the battery's positive (+) lead to terminal 5 and negative (-) lead to terminal 4. Then check that the bulb illuminates.
- OK:**
Bulb illuminates.
- If the result is not as specified, replace the switch.

INSTALLATION

- 1. INSTALL TRACTION CONTROL SWITCH (AUTO LSD SWITCH)
 - (a) Attach the 2 claws to install the switch.
- 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

