


INSTALLATION

HINT:


- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.

1. INSTALL REAR DISC BRAKE CYLINDER ASSEMBLY LH

- (a) Apply silicon grease (Multemp SI-B) on the contact surfaces of the cylinder parts indicated by the arrows.

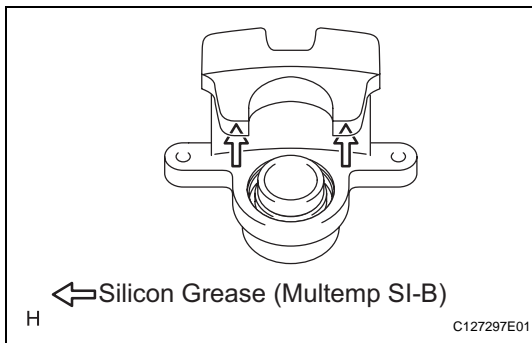


- (b) Install the cylinder with the 2 bolts.
Torque: 26.5 N*m (270 kgf*cm, 20 ft.*lbf)

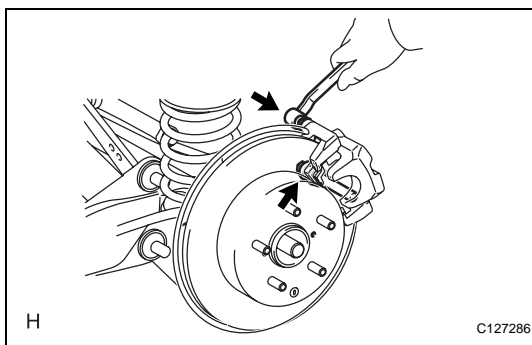


2. CONNECT REAR FLEXIBLE HOSE LH

NOTICE:

The gasket and union bolt must be used as a set, as shown in the illustration.

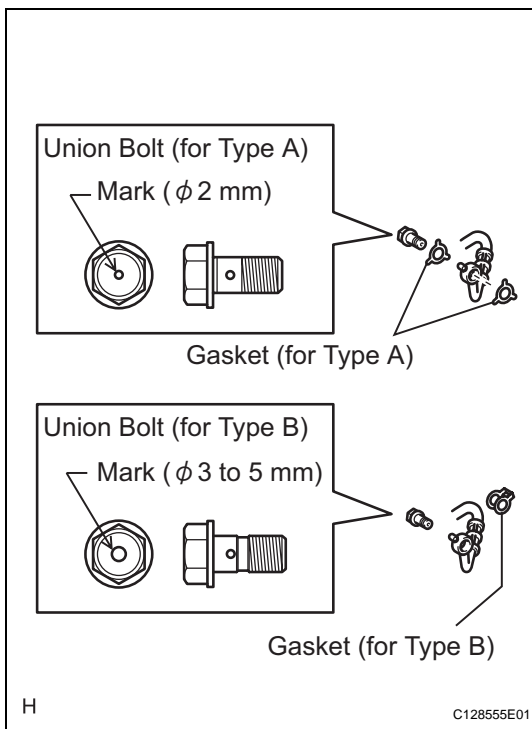

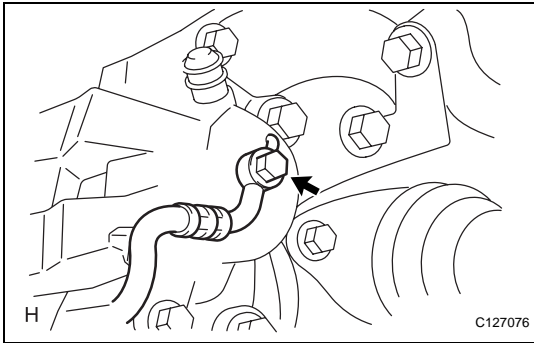

- (a) Connect the flexible hose with new gasket(s) and the union bolt.

Torque: 30.4 N*m (310 kgf*cm, 22 ft.*lbf)

HINT:

Install the flexible hose lock securely in the lock hole in the cylinder.

3. **FILL RESERVOIR WITH BRAKE FLUID (See page BR-6)**
4. **BLEED AIR FROM BRAKE MASTER CYLINDER (See page BR-7)**
5. **BLEED AIR FROM BRAKE LINE (See page BR-7)**
6. **BLEED AIR FROM ABS AND TRACTION ACTUATOR ASSEMBLY (See page BR-8)**
7. **CHECK BRAKE FLUID LEVEL IN RESERVOIR (See page BR-6)**
8. **CHECK FOR BRAKE FLUID LEAKAGE**
9. **INSTALL REAR WHEEL**
Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)