


REAR BRAKE FLEXIBLE HOSE

COMPONENTS

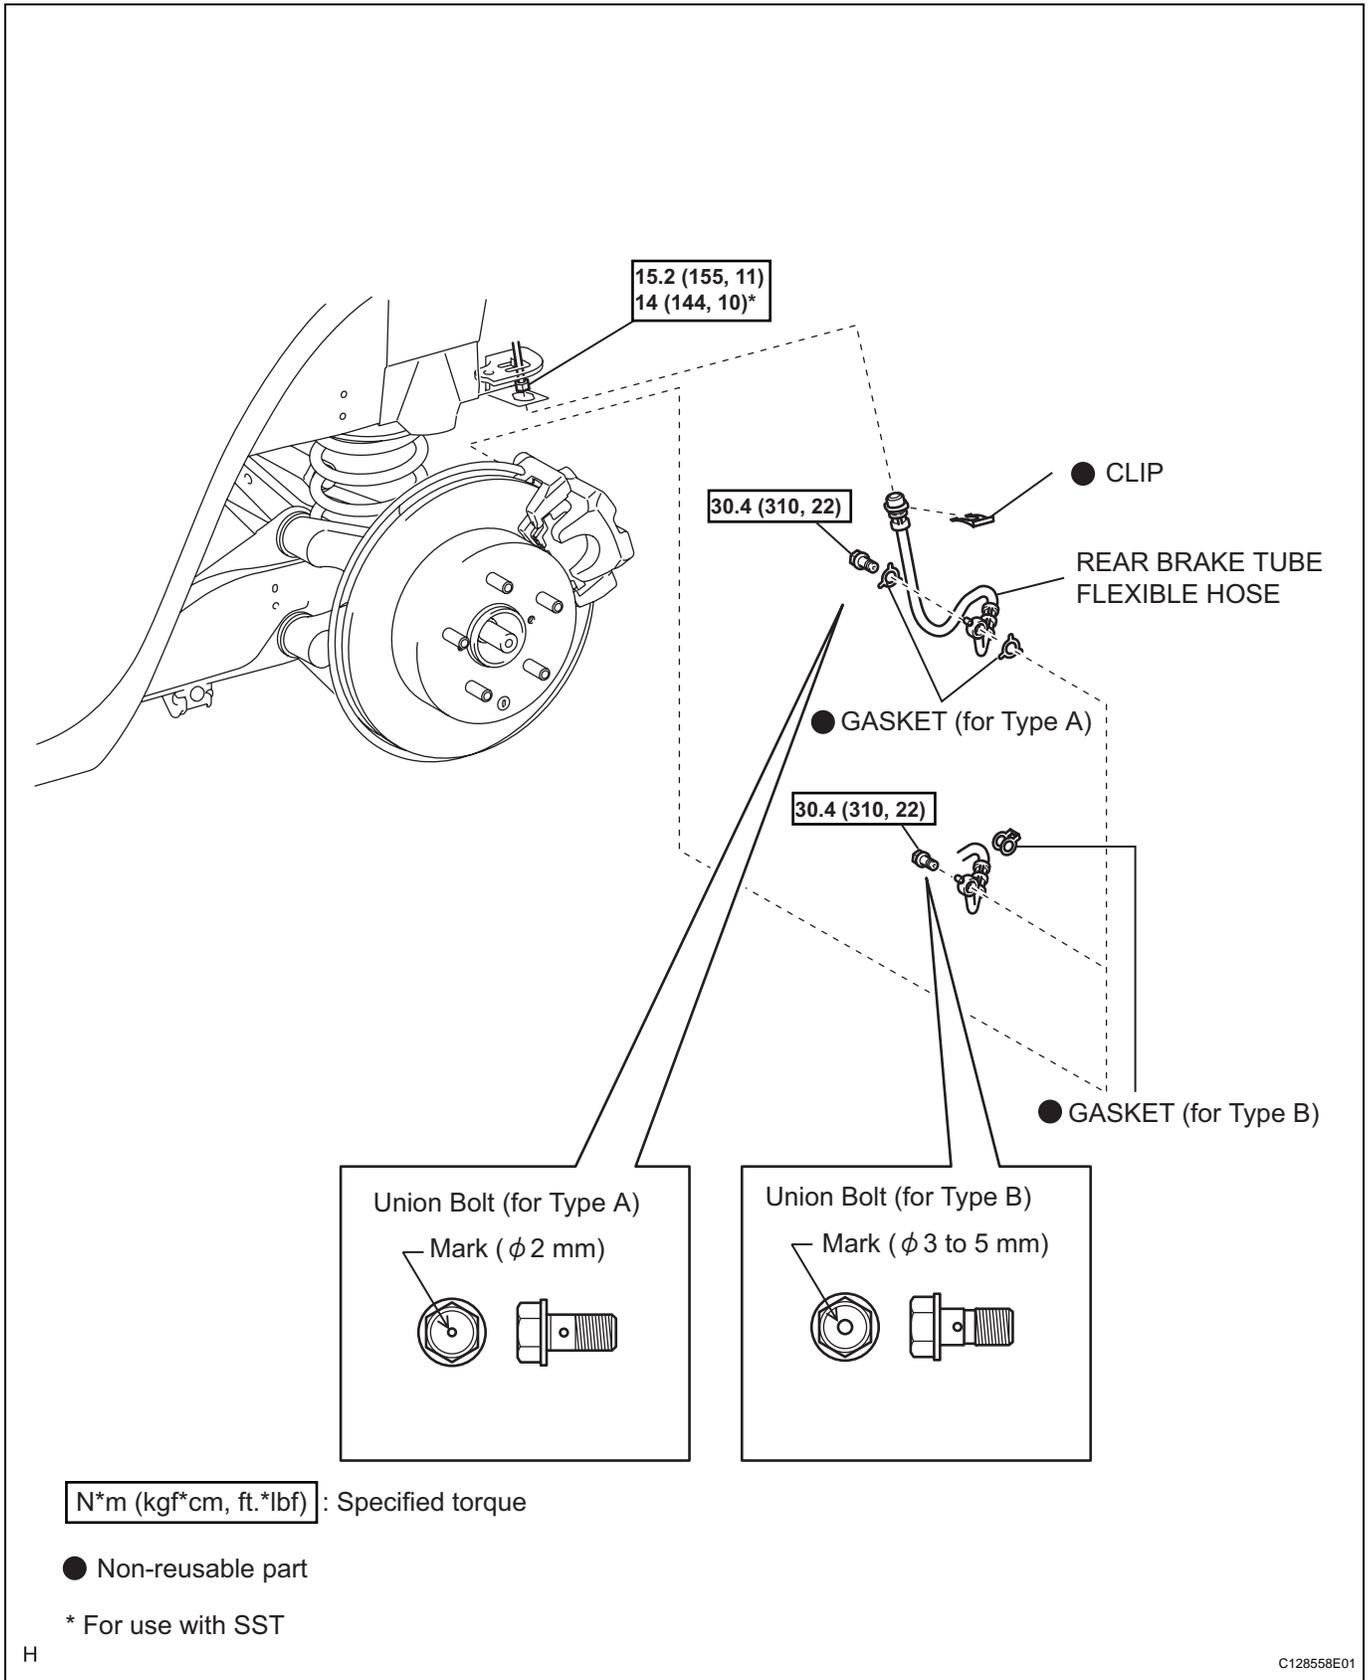

BR

REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.

1. REMOVE REAR WHEEL
2. DRAIN BRAKE FLUID

NOTICE:

Wash off brake fluid immediately if it comes in contact with any painted surface.

3. REMOVE REAR BRAKE TUBE FLEXIBLE HOSE

- (a) Disconnect the brake tube (labeled A) from the flexible hose with SST while holding the flexible hose with a wrench.

SST 09023-00101

NOTICE:

- Do not bend or damage the brake tube.
- Do not allow any foreign matter such as dirt and dust to enter the brake tube from the connecting point.

- (b) Remove the clip (labeled B).

- (c) Remove the union bolt and gasket(s), and then remove the flexible hose from the disc brake cylinder.

