

BACK DOOR LOCK

INSPECTION


1. INSPECT BACK DOOR WITH MOTOR LOCK ASSEMBLY

- (a) Apply the battery voltage to the door lock motor and check the operation of the door lock motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → 4 (ACT+) Battery negative (-) → 1 (ACT-)	Lock
Battery positive (+) → 1 (ACT-) Battery negative (-) → 4 (ACT+)	Unlock

If the result is not as specified, replace the door lock assembly.

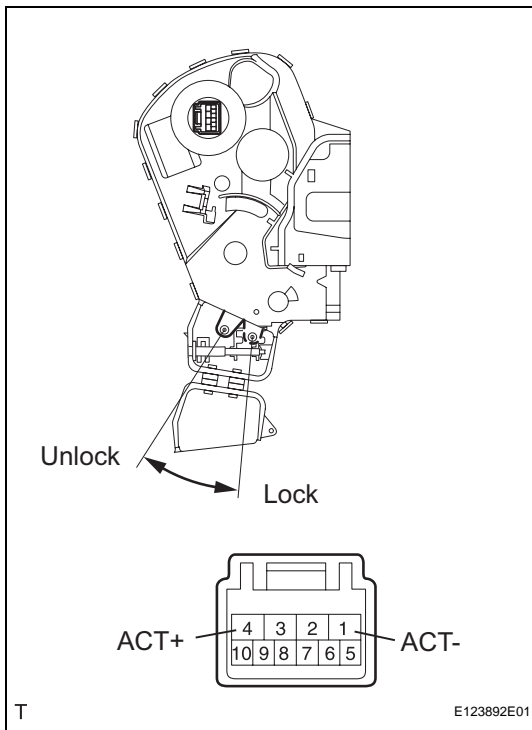

T

E123892E01