

DOOR CONTROL SWITCH

INSPECTION


1. INSPECT POWER WINDOW REGULATOR MASTER SWITCH ASSEMBLY (DOOR CONTROL SWITCH)

(a) Measure the resistance of the door control switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
2 (L) - 1 (E)	Lock	Below 80 Ω
2 (L) - 1 (E)	OFF	10 kΩ or higher
9 (UL) - 1 (E)	Unlock	Below 80 Ω
9 (UL) - 1 (E)	OFF	10 kΩ or higher

If the result is not as specified, replace the power window regulator master switch assembly.

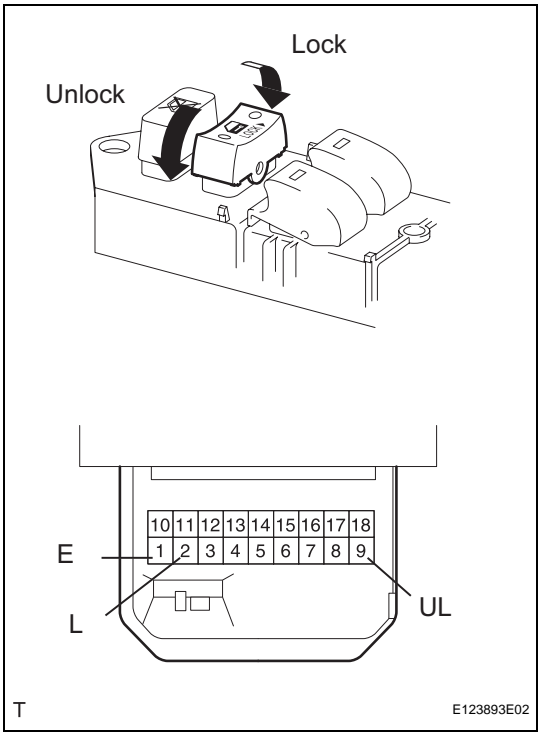

2. INSPECT DOOR CONTROL SWITCH ASSEMBLY

(a) Measure the resistance of the door control switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
4 (L) - 3 (E)	Lock	Below 200 Ω
4 (L) - 3 (E)	OFF	10 kΩ or higher
2 (UL) - 3 (E)	Unlock	Below 200 Ω
2 (UL) - 3 (E)	OFF	10 kΩ or higher

If the result is not as specified, replace the door control switch assembly.

