

DOOR CONTROL TRANSMITTER MODULE

COMPONENTS

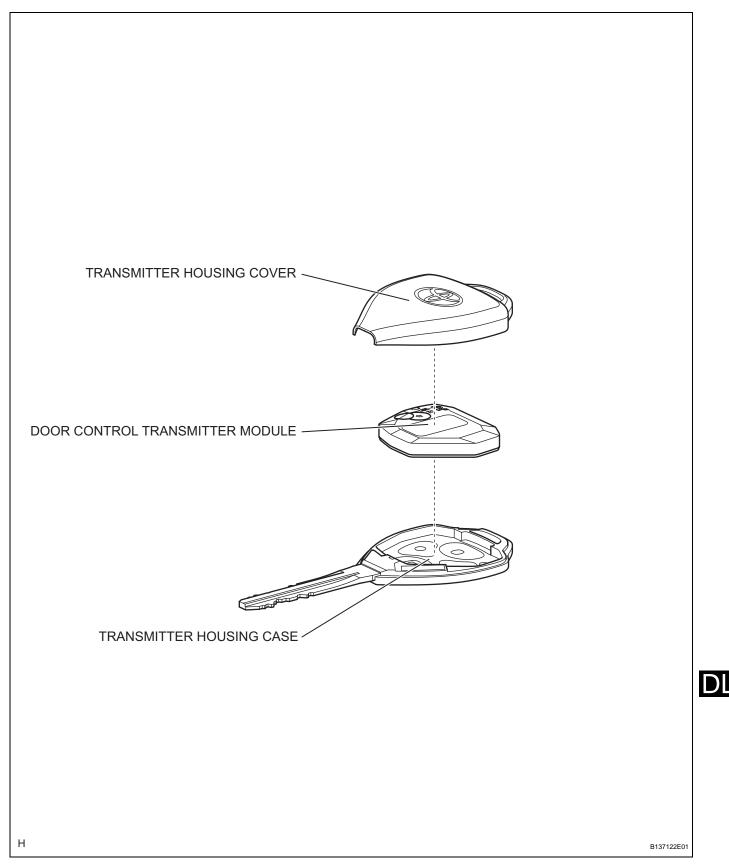

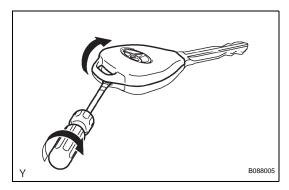

REMOVAL


- 1. REMOVE TRANSMITTER HOUSING COVER NOTICE: Take extra care when handling these precision electronic components.
 - (a) Twist the screwdriver in the direction of the arrow mark in the illustration, and open the transmitter housing cover.

NOTICE: Do not forcibly pry the cover.

HINT:

Tape the screwdriver tip before use.

2. REMOVE DOOR CONTROL TRANSMITTER MODULE

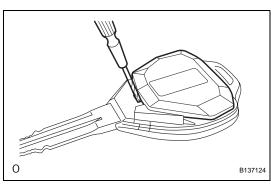

DL