

OPERATION CHECK

1. CHECK KEY REMINDER WARNING SYSTEM

- (a) Check that the key reminder warning buzzer sounds.
 - (1) With the driver side door closed, insert the key into the ignition key cylinder and then turn the ignition switch to LOCK or ACC.
 - (2) Check that the buzzer sounds intermittently when the driver side door is open.
- (b) Check that the key reminder warning buzzer stops.
 - (1) Check that the buzzer stops sounding if any of the following operations is performed while the buzzer is sounding:
 - Close the driver side door (front door courtesy light switch is off).
 - Turn the ignition switch ON.
 - Remove the key from the ignition key cylinder.

PROBLEM SYMPTOMS TABLE

HINT:
Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Key reminder warning system:

| Symptom | Suspected Area | See page |
|------------------------------------|--|-----------------------|
| Key reminder buzzer does not sound | 1. Unlock warning switch | DL-84 |
| | 2. Front door courtesy switch (Driver side) | DL-84 |
| | 3. Combination meter (Key reminder warning buzzer) | DL-84 |
| | 4. Instrument panel junction block (Main body ECU) | DL-84 |
| | 5. Wire harness | DL-84 |