

# REAR DOOR LOCK

## INSPECTION


### 1. INSPECT REAR DOOR WITH MOTOR LOCK ASSEMBLY LH

- (a) Apply the battery voltage to the door lock motor and check the operation of the door lock motor.

**OK**

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 4 (L)	Unlock

If the result is not as specified, replace the door lock assembly.

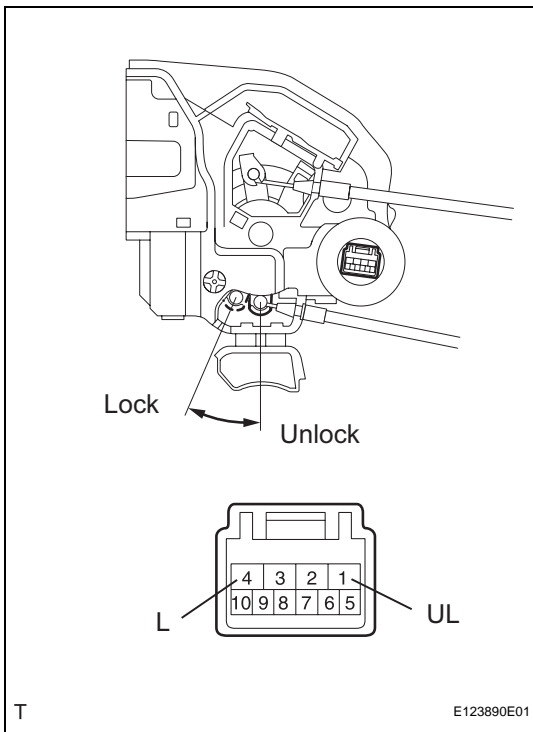

### 2. INSPECT REAR DOOR WITH MOTOR LOCK ASSEMBLY RH

- (a) Apply the battery voltage to the door lock motor and check the operation of the door lock motor.

**OK**

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 4 (L)	Unlock

If the result is not as specified, replace the door lock assembly.

