


TRANSFER CASE OIL SEAL (for RH Side)

COMPONENTS

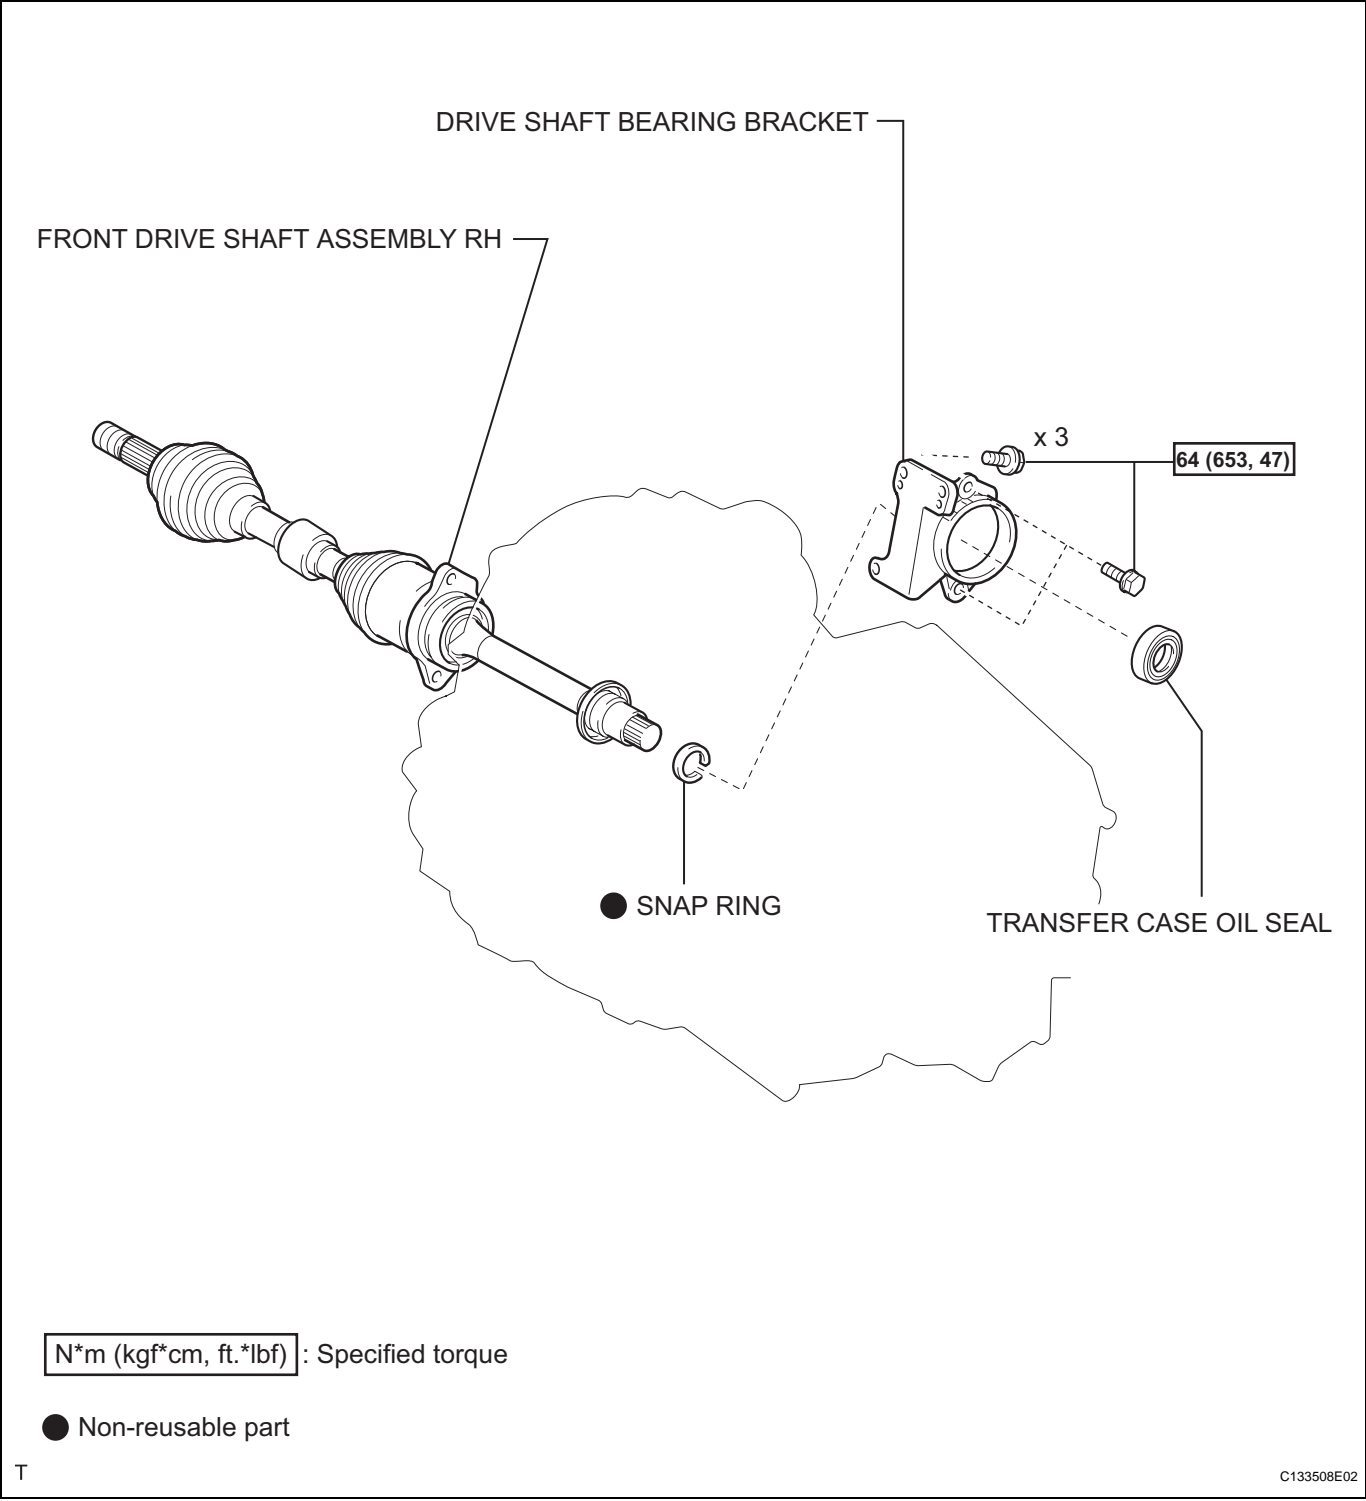

REPLACEMENT

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

NOTICE:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **DRAIN TRANSFER OIL**

- (a) Remove the drain plug and gasket, and drain the oil.
- (b) Install a new gasket and the drain plug.

Torque: 39 N*m (398 kgf*cm, 29 ft.*lbf)

3. **REMOVE FRONT DRIVE SHAFT ASSEMBLY RH (See page DS-41)**



4. **REMOVE DRIVE SHAFT BEARING BRACKET**

- (a) Remove the 3 bolts and bracket from the transaxle.

5. **REMOVE TRANSFER CASE OIL SEAL (for RH Side)**

- (a) Using SST, tap out the oil seal from the transfer.

SST 09308-00010

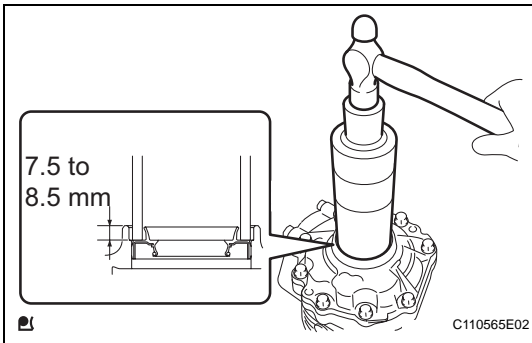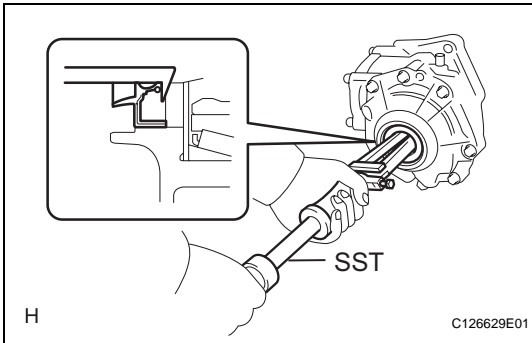

6. **INSTALL TRANSFER CASE OIL SEAL (for RH Side)**

- (a) Coat a new oil seal lip with MP grease.
- (b) Using SST and a hammer, tap in the oil seal.

SST 09316-60011 (09316-00011)

Standard depth:

7.5 to 8.5 mm (0.30 to 0.33 in.)

NOTICE:

Do not damage the oil seal lip.

7. **INSTALL DRIVE SHAFT BEARING BRACKET**

- (a) Install the bracket to the transaxle with the 3 bolt.

Torque: 64 N*m (653 kgf*cm, 47 ft.*lbf)

8. **INSTALL FRONT DRIVE SHAFT ASSEMBLY RH (See page DS-65)**

9. **ADD TRANSFER OIL**

10. **INSPECT TRANSFER OIL (See page TF-45)**

11. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**