



DISASSEMBLY

1. **REMOVE GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY**
2. **REMOVE STEREO JACK ADAPTER ASSEMBLY**
 - (a) Detach the 2 claws and remove the stereo jack adapter.

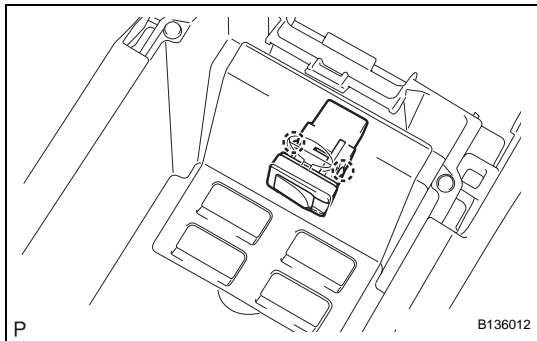

REASSEMBLY


1. **INSTALL STEREO JACK ADAPTER ASSEMBLY**
 - (a) Attach the 2 claws to install the stereo jack adapter.
2. **INSTALL GLOVE COMPARTMENT DOOR STOPPER SUB-ASSEMBLY**

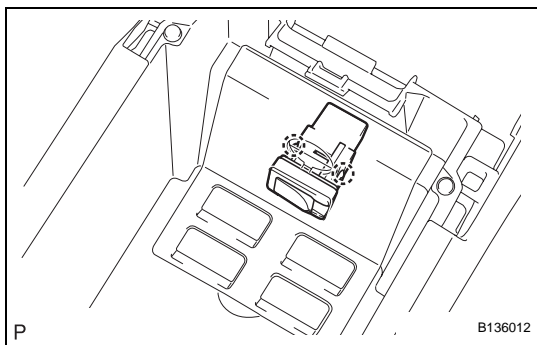

INSTALLATION


1. INSTALL LOWER INSTRUMENT PANEL

- Connect the connectors and clamps and install the lower instrument panel.
- Install the 2 bolts, 3 screws and 2 clips.

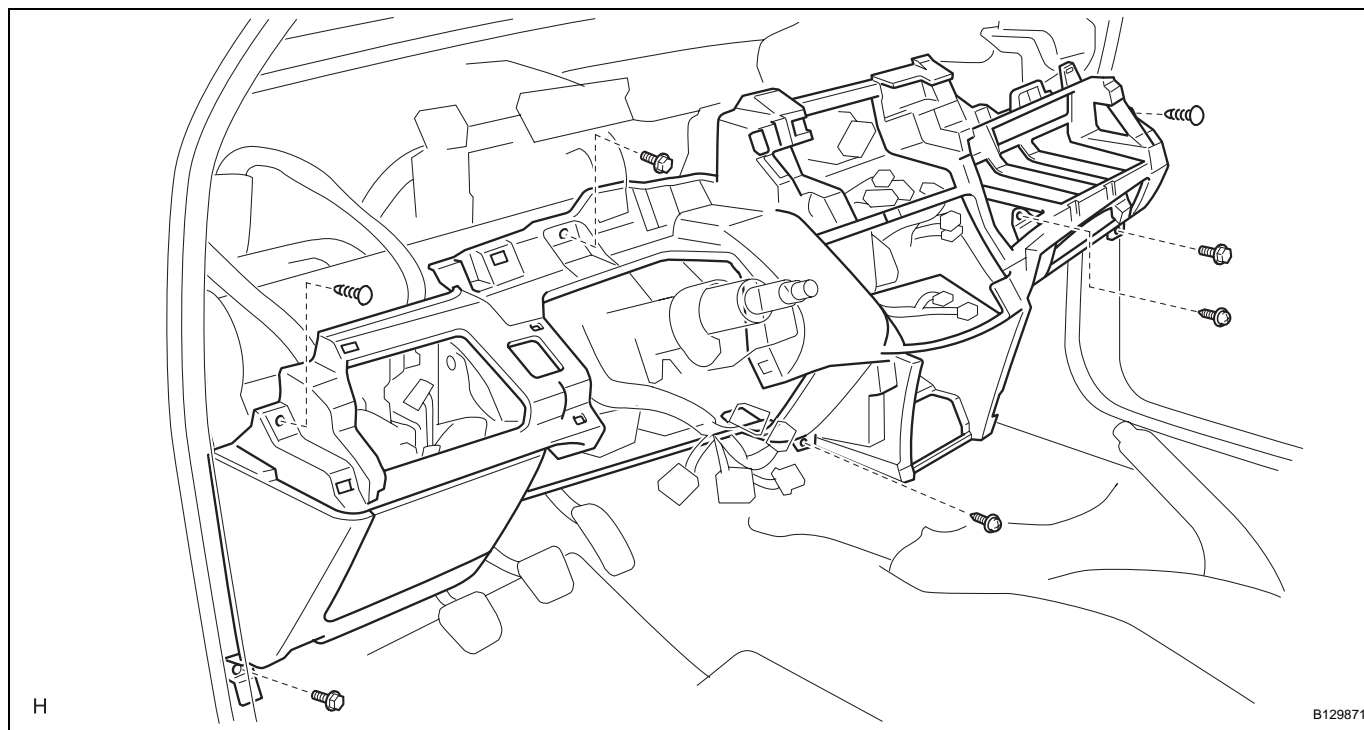


2. INSTALL POWER STEERING ECU ASSEMBLY


- Install the ECU with the 3 nuts.
- Connect the connectors.

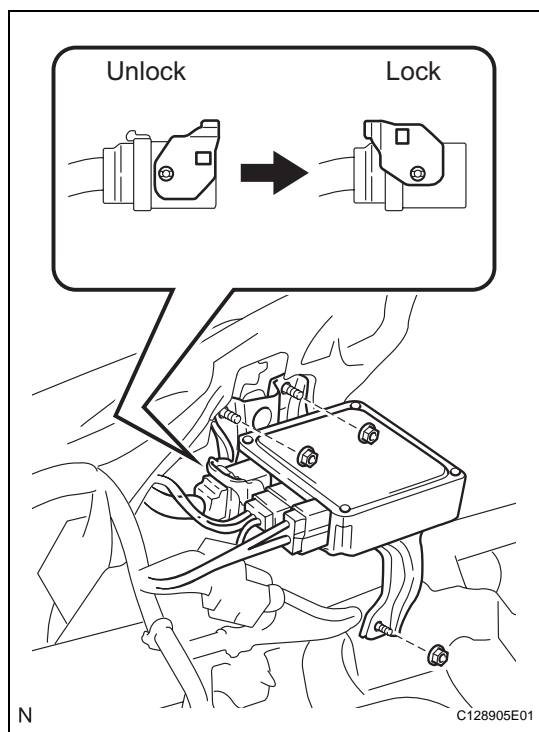


IP

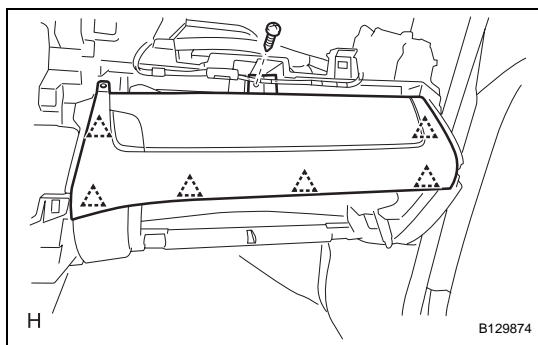**3. INSTALL INSTRUMENT PANEL BOX**


- (a) Attach the 6 clips to install the instrument panel box.
- (b) Install the screw.

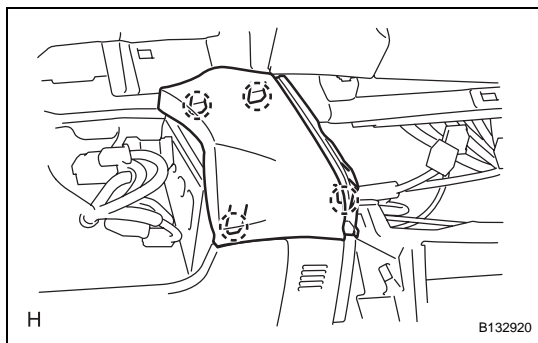**4. INSTALL INSTRUMENT PANEL SAFETY PAD COVER**


- (a) Attach the 4 claws to install the instrument panel safety pad cover.

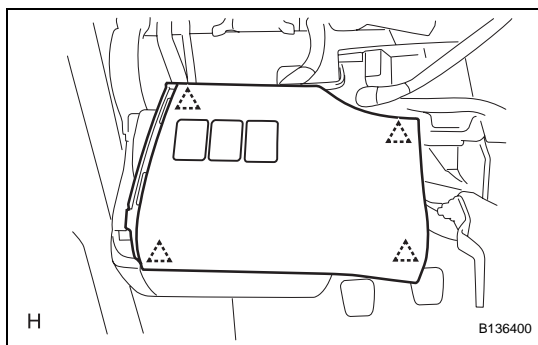**5. INSTALL NO. 1 SWITCH HOLE BASE**


- (a) Connect the connectors.
- (b) Attach the 4 clips to install the switch hole base.

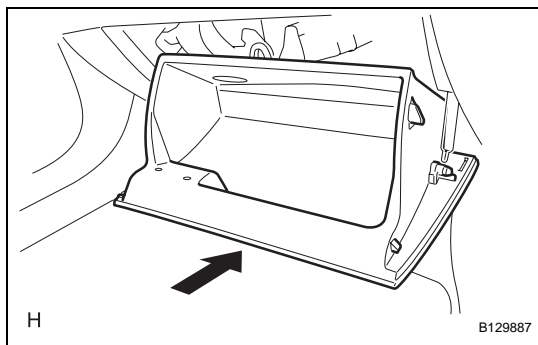**6. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY**

- (a) Attach the 2 hinges to install the door.

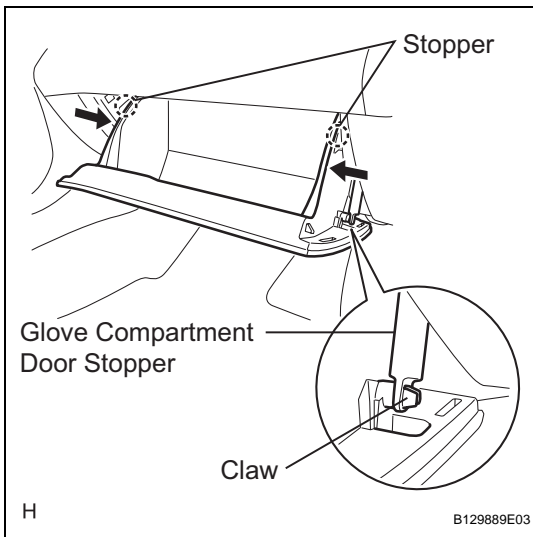


- (b) Attach the claw to the glove compartment door stopper.
- (c) While pushing in the sides of the glove compartment door as indicated by the arrows in the illustration, close the door to engage it to the 2 stoppers.

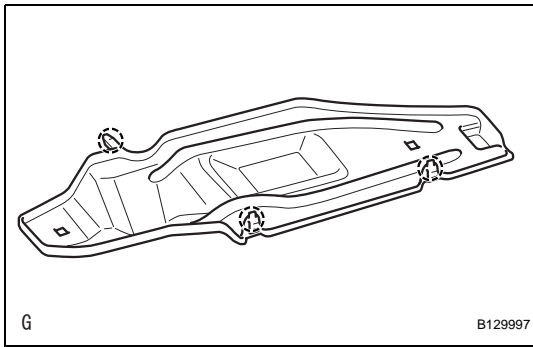


7. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY

- (a) Attach the 2 claws to install the instrument panel under cover.

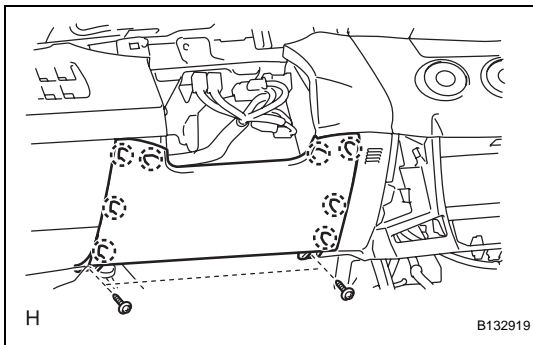


8. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL

- (a) Attach the 8 claws to install the lower instrument panel finish panel.
- (b) Install the 2 screws.

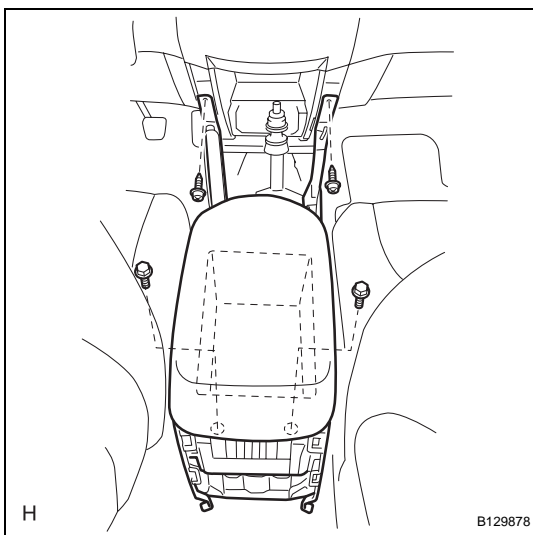


9. INSTALL REAR CONSOLE BOX SUB-ASSEMBLY

- (a) Connect the connector.
- (b) Install the rear console box with the 2 bolts and 2 screws.
- (c) Install the console box carpet.

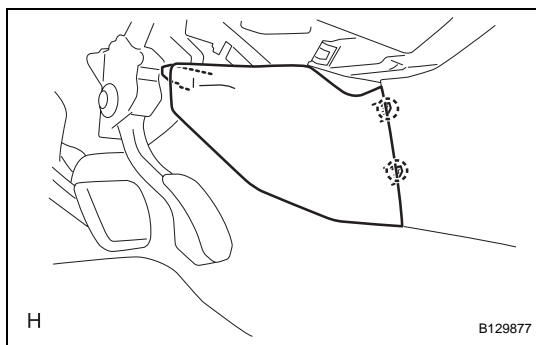


10. INSTALL NO. 1 INSTRUMENT PANEL BRACKET COVER INNER LH

- (a) Attach the 2 claws to install the instrument panel bracket cover.

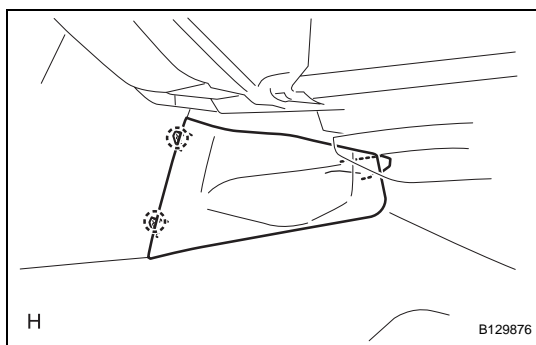


11. INSTALL NO. 1 INSTRUMENT PANEL BRACKET COVER INNER RH

- (a) Attach the 2 claws to install the instrument panel bracket cover.

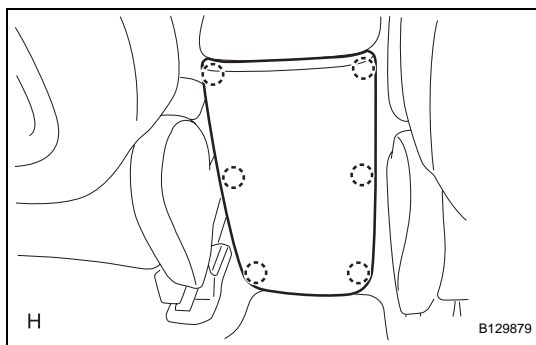


12. INSTALL CONSOLE REAR END PANEL

- (a) Attach the 6 claws to install the console rear end panel.

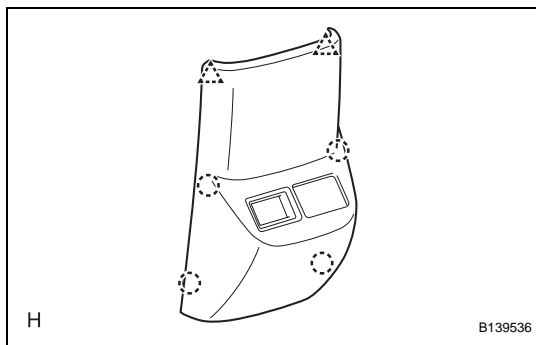


13. INSTALL CONSOLE REAR END PANEL (RSE Type)

- (a) Attach the 2 clips and 4 claws to install the console rear end panel.

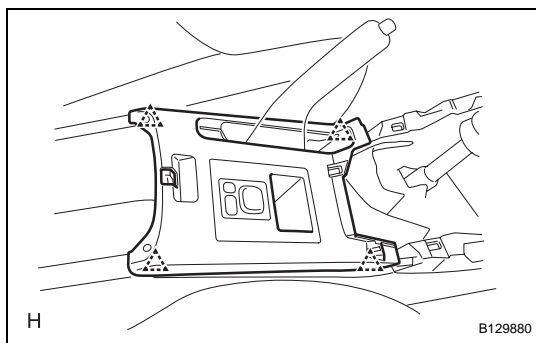


14. INSTALL UPPER REAR CONSOLE PANEL SUB-ASSEMBLY


- (a) Connect the connector.
(b) Attach the 4 clips to install the upper rear console panel.

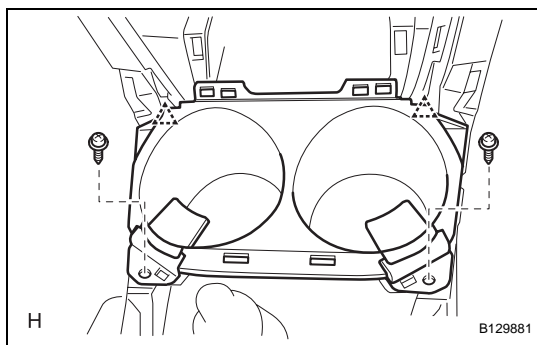**15. INSTALL CONSOLE CUP HOLDER BOX**


- (a) Attach the 2 clips to install the cup holder box.
- (b) Install the 2 screws.

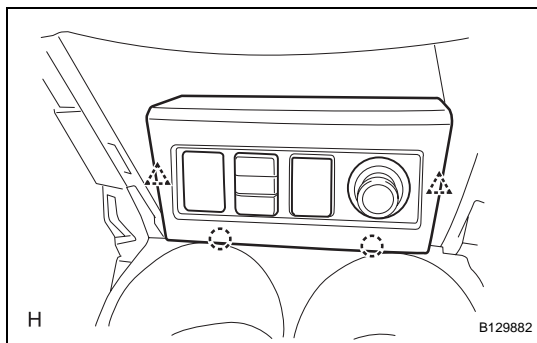**16. INSTALL SWITCH BASE**


- (a) Connect the connectors.
- (b) Attach the 2 clips and 2 claws to install the switch base.

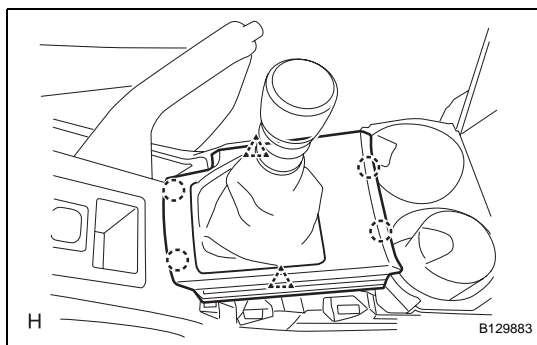**17. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY**

- (a) Connect the connector.
- (b) Attach the 2 clips and 4 claws to install the upper console panel.
- (c) Install the shift lever knob.

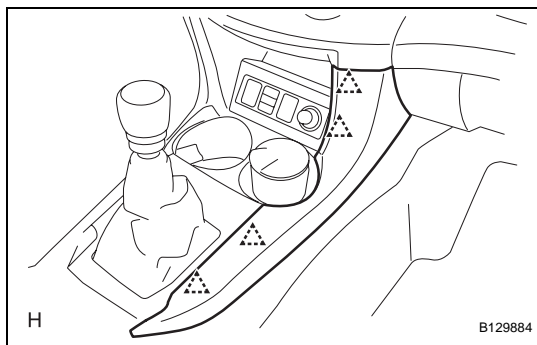**18. INSTALL NO. 2 CONSOLE UPPER PANEL GARNISH**

- (a) Attach the 4 clips to install the upper panel garnish.

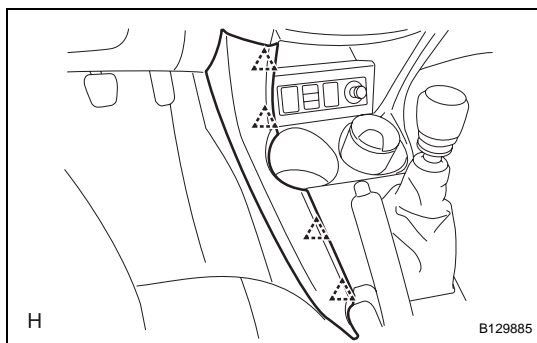**19. INSTALL NO. 1 CONSOLE UPPER PANEL GARNISH**

- (a) Attach the 4 clips to install the upper panel garnish.

20. INSTALL HEATER CONTROL SUB-ASSEMBLY (for Automatic Air Conditioning System) (See page AC-241)**21. INSTALL HEATER CONTROL SUB-ASSEMBLY (for Manual Air Conditioning System) (See page AC-244)****22. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY****23. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY**

24. **INSTALL SPIRAL CABLE SUB-ASSEMBLY** (See page [RS-347](#))
25. **INSTALL STEERING COLUMN COVER** (See page [SR-20](#))
26. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-21](#))
27. **INSTALL STEERING PAD ASSEMBLY** (See page [RS-336](#))
28. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY**
 - (a) Install the instrument panel (see page [IP-9](#)).
29. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
30. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-37](#)).