

REMOVAL

 
 
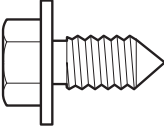
1. TABLE OF BOLT, SCREW AND NUT

HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet codes in the table below.

IP

mm (in.) (L=Length)

Code	Shape	Code	Shape	Code	Shape
A	 <div>φ=5 (0.20) L=14 (0.55)</div>	B	 <div>φ=8 (0.31) L=15 (0.59)</div>	C	 <div>φ=6 (0.24) L=16 (0.63)</div>

G

B129998E05

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

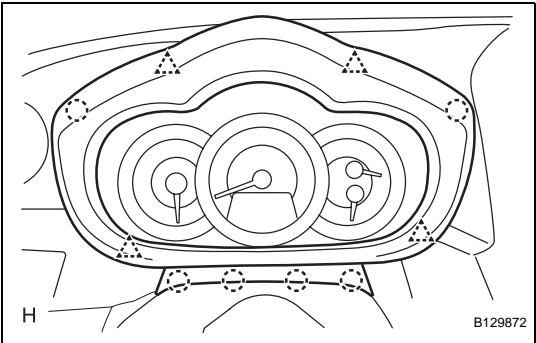
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

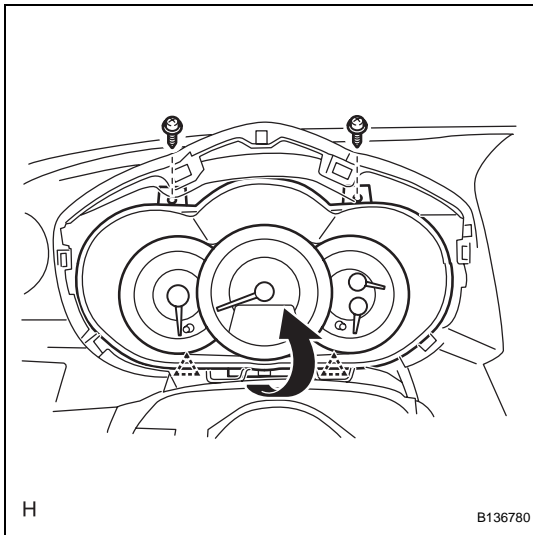
3. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

- (a) Using a screwdriver, detach the 4 clips, 6 claws and remove the instrument cluster finish panel.

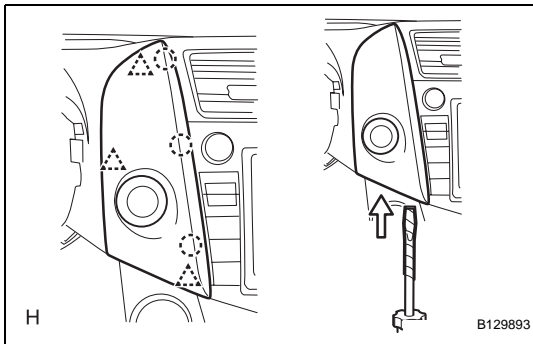
HINT:

Tape the screwdriver tip before use.



**4. REMOVE COMBINATION METER ASSEMBLY**

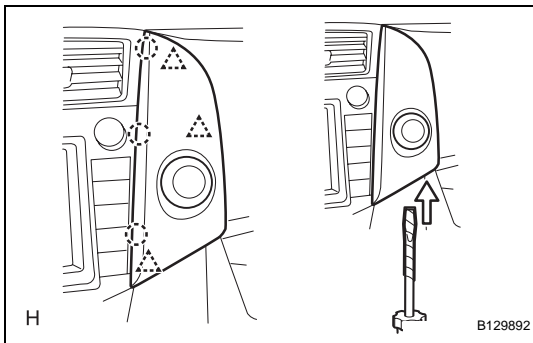
- (a) Remove the 2 screws.
- (b) Pull the combination meter as indicated by the arrow in the illustration to detach the 2 clips.
- (c) Disconnect the connector and remove the combination meter.

**5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER**

- (a) Using a screwdriver, detach the 3 clips, 3claws and remove the cluster finish panel, then disconnect the connector.

HINT:

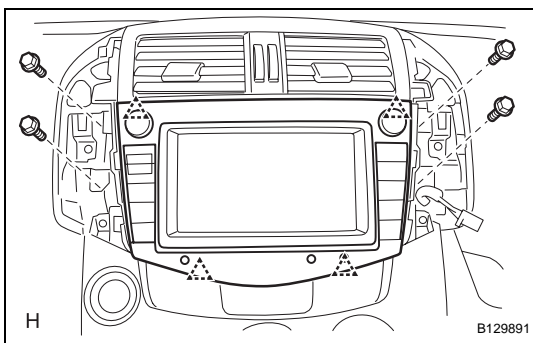
Tape the screwdriver tip before use.

**6. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER**

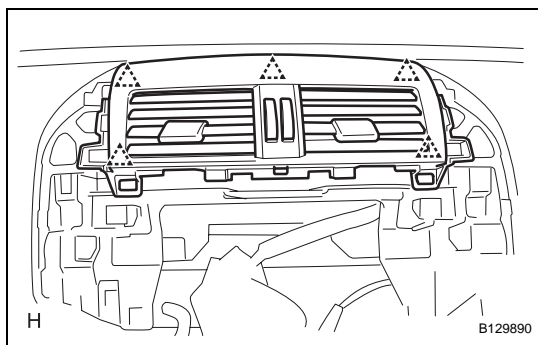
- (a) Using a screwdriver, detach the 3 clips, 3claws and remove the cluster finish panel, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

**7. REMOVE RADIO RECEIVER**

- (a) Remove the 4 bolts.
- (b) Detach the 4 clips, remove the radio receiver and then disconnect the connectors.



8. REMOVE INSTRUMENT PANEL REGISTER ASSEMBLY CENTER

- (a) Using a screwdriver, detach the 5 clips and remove the instrument panel register.

HINT:

Tape the screwdriver tip before use.

9. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))

10. REMOVE FRONT PILLAR GARNISH LH (See page [IR-27](#))

11. REMOVE FRONT PILLAR GARNISH RH (See page [IR-28](#))

12. REMOVE UPPER INSTRUMENT PANEL

- (a) Remove the 2 bolts from the passenger airbag.
 (b) Disconnect the passenger airbag connector.
 (c) Remove the 2 bolts and 2 screws.
 (d) Disconnect the connectors and clamps.
 (e) Detach the 6 clips and 5 claws and remove the instrument panel.

