


DISASSEMBLY


- 1. REMOVE NO. 1 SIDE DEFROSTER NOZZLE DUCT
 - (a) Remove the 3 screws and duct.

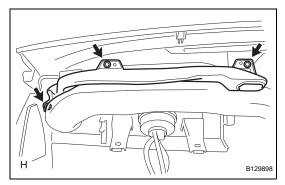




2. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

(a) Remove the 3 screws and duct.

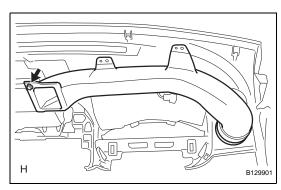


3. REMOVE NO. 1 HEATER TO REGISTER DUCT

(a) Remove the screw and duct.

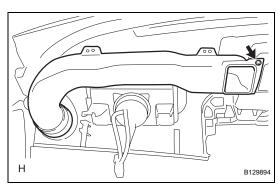

- 4. REMOVE NO. 2 HEATER TO REGISTER DUCT
 - (a) Remove the screw and duct.

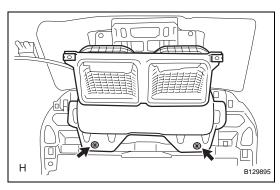

- 5. REMOVE NO. 3 HEATER TO REGISTER DUCT(a) Remove the 2 screws and duct.
- 6. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY
- 7. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY
- 8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page RS-350)

- 9. REMOVE AUTOMATIC LIGHT CONTROL SENSOR (for Automatic Light Control System)
- 10. REMOVE COOLER (SOLAR SENSOR) THERMISTOR (for Automatic Air Conditioning System)

