



## BRK RELAY

### ON-VEHICLE INSPECTION

**1. INSPECT BRK RELAY**

- (a) Remove the BRK relay from the engine room No. 1 relay block.
- (b) Measure the resistance of the relay.

**Standard resistance**

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 4	10 kΩ or higher (Battery voltage applied to terminals 1 and 2)
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the relay.