


FOG LIGHT ASSEMBLY

COMPONENTS

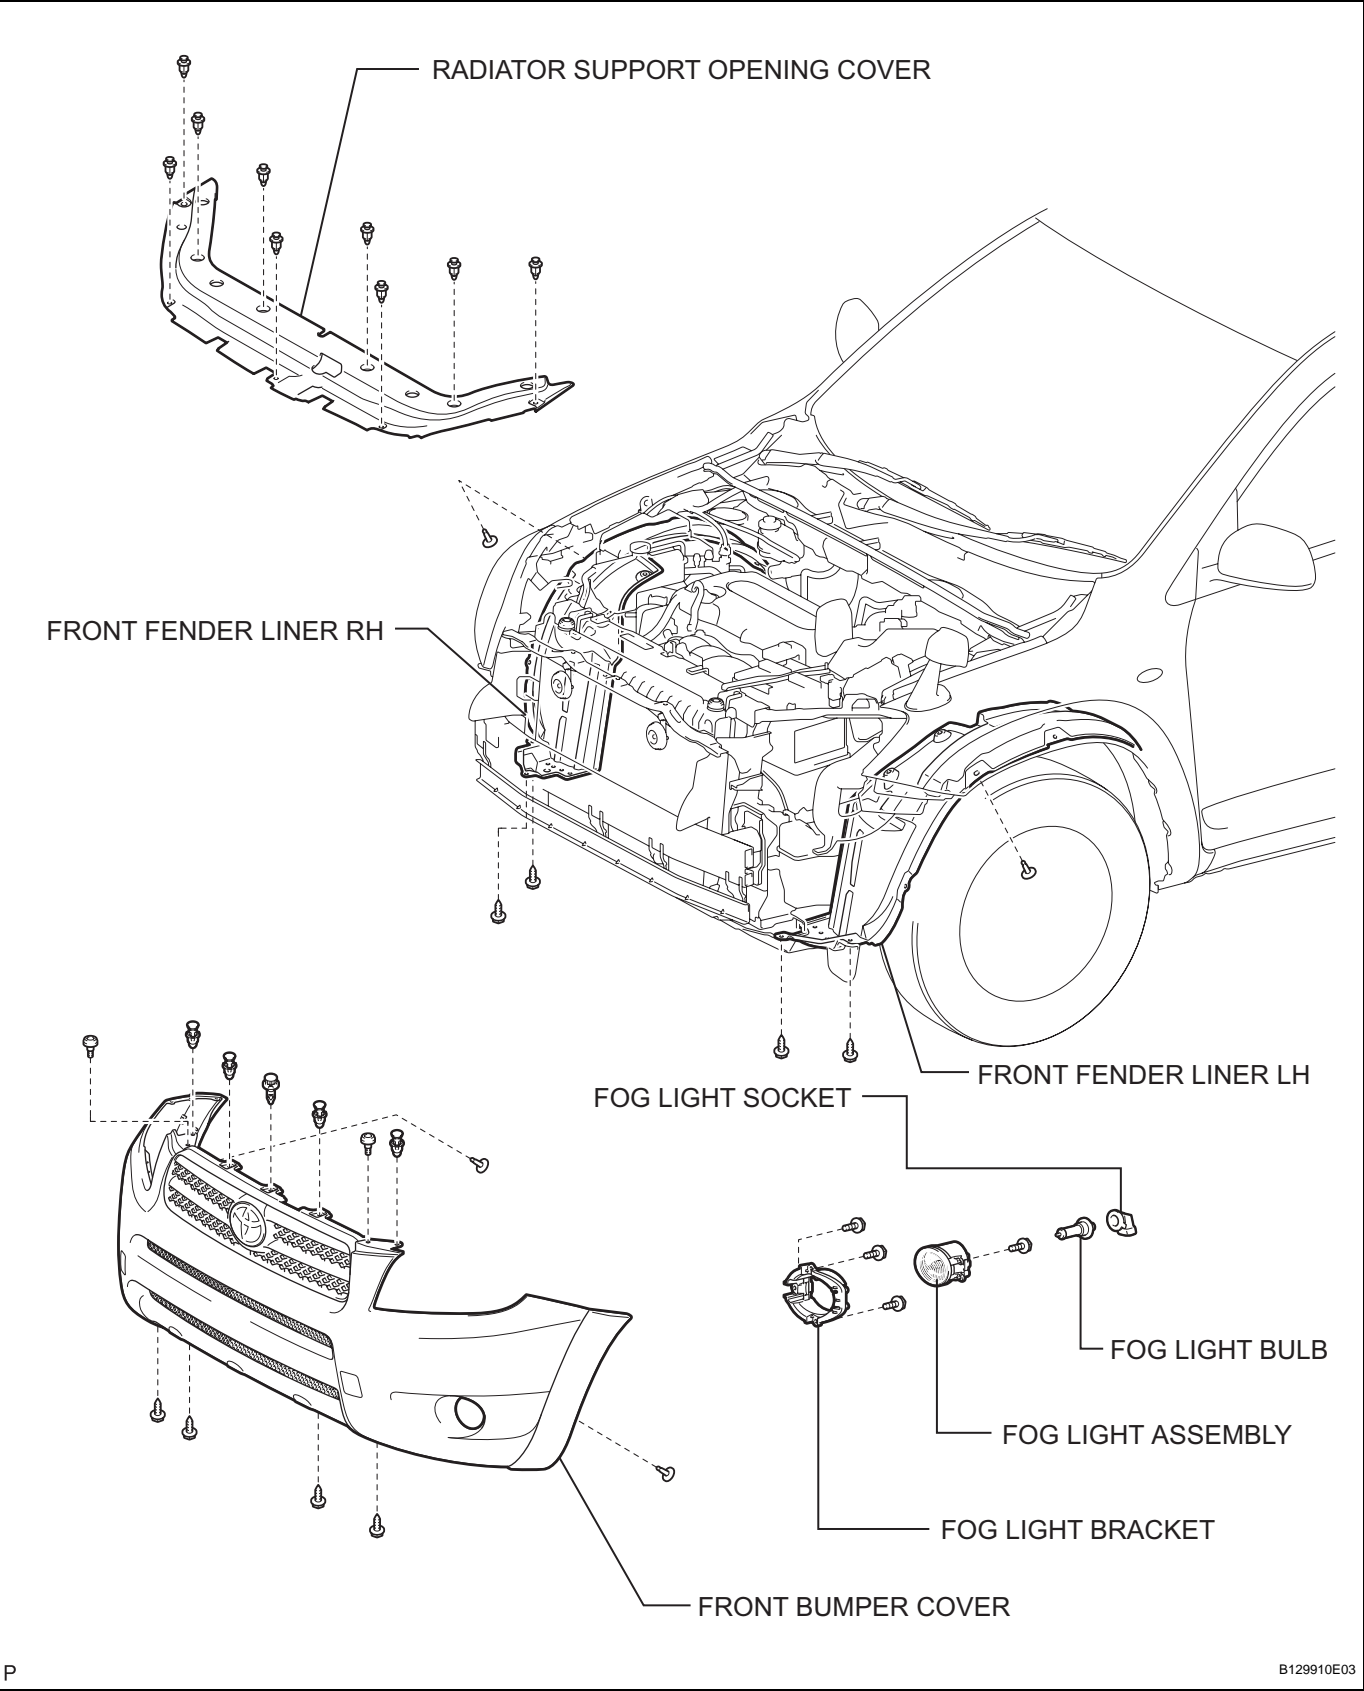

REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT FENDER LINER LH (See page [ET-6](#))
3. REMOVE FRONT FENDER LINER RH (See page [ET-4](#))
4. REMOVE RADIATOR SUPPORT OPENING COVER (See page [ET-4](#))
5. REMOVE FRONT BUMPER COVER (See page [ET-5](#))
6. REMOVE FOG LIGHT ASSEMBLY
 - (a) Disconnect the connector.
 - (b) Remove the bolt and fog light.

