

FOG LIGHT RELAY


ON-VEHICLE INSPECTION

1. INSPECT FRONT FOG LIGHT RELAY

(a) Remove the front fog relay from the No. 6 relay block.

(b) Measure the resistance of the relay.

Standard resistance

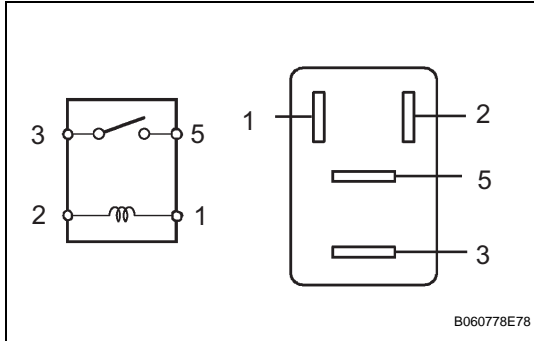

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

