


FRONT DOOR COURTESY SWITCH

COMPONENTS

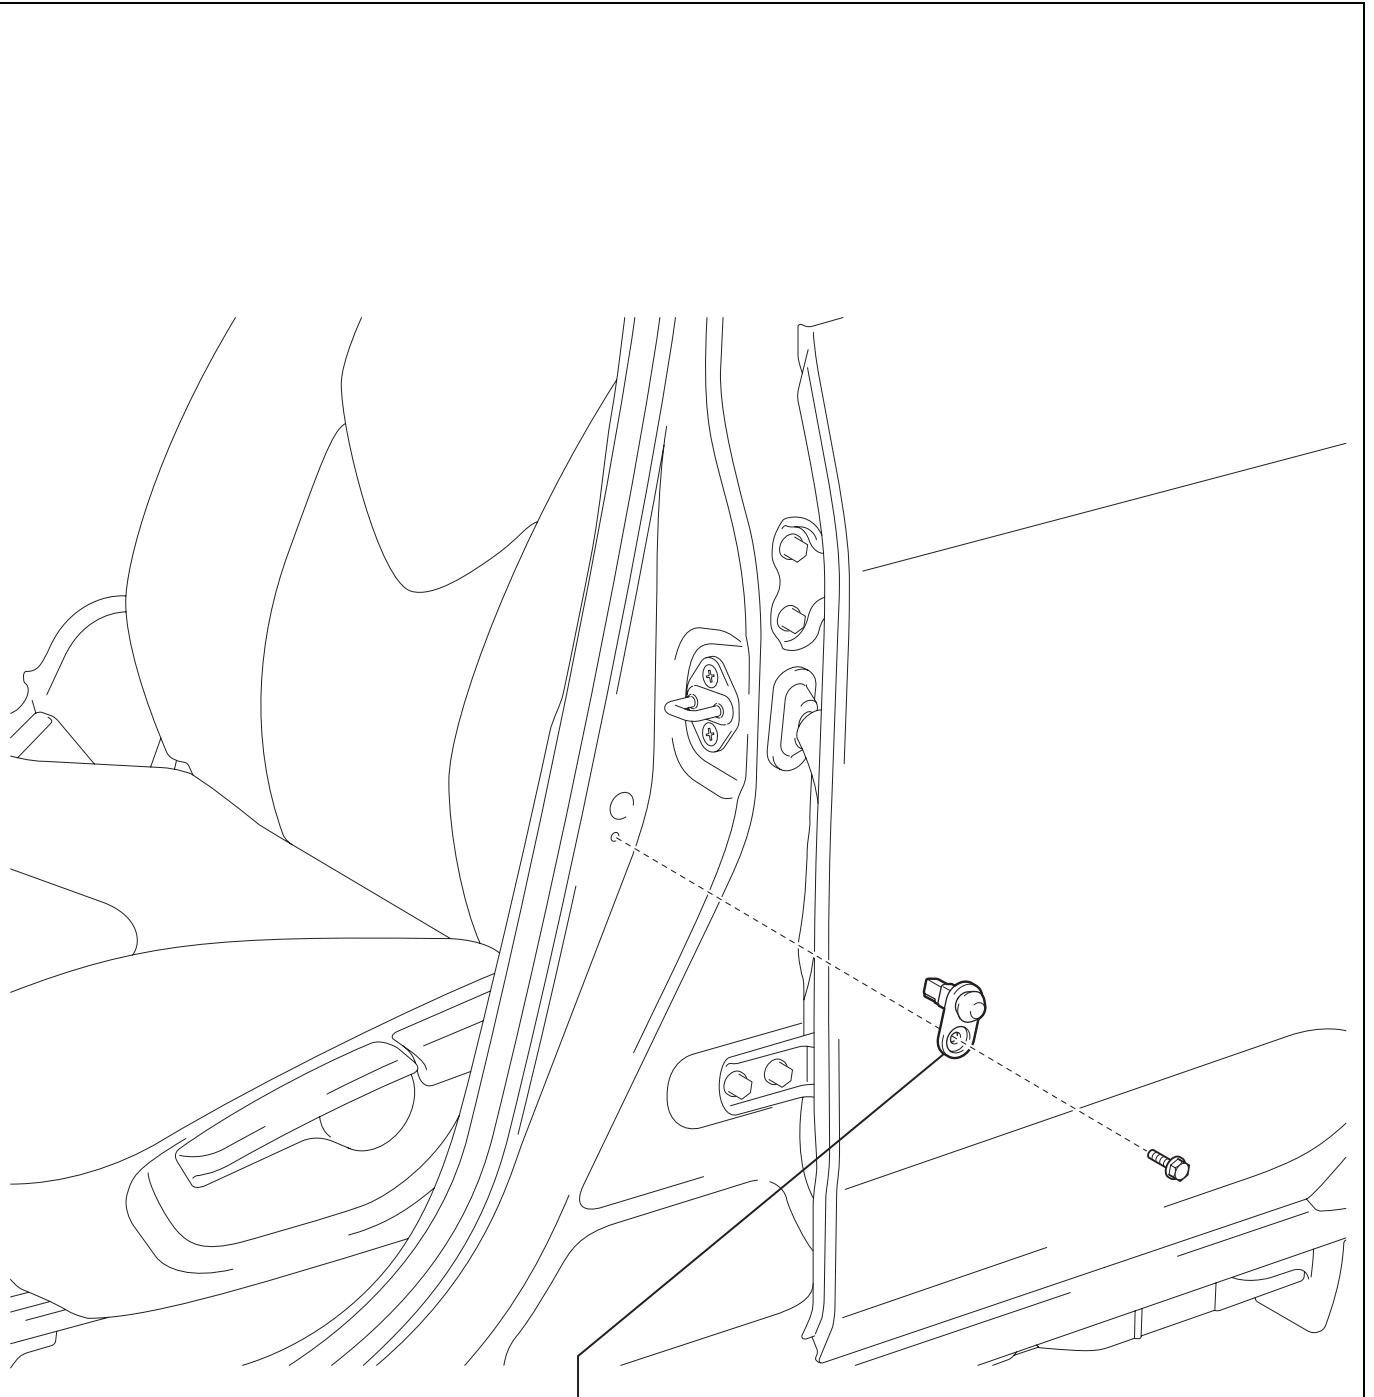

FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY



REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.



1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

- Remove the bolt and switch.
- Disconnect the connector.

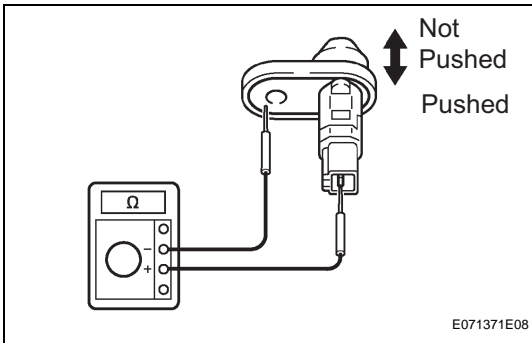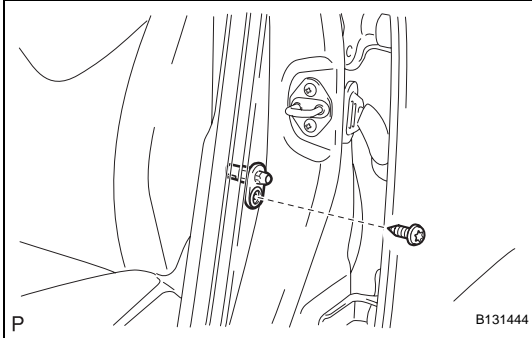

INSPECTION

1. INSPECT FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

- Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - Switch body	Pushed	10 k Ω or higher
1 - Switch body	Not pushed	Below 1 Ω

If the result is not as specified, replace the switch assembly.