

INSTALLATION

1. **INSTALL TRANSPONDER KEY AMPLIFIER** (See page [SR-18](#))
2. **INSTALL STEERING COLUMN COVER** (See page [SR-20](#))
3. **INSTALL STEERING WHEEL ASSEMBLY** (See page [SR-21](#))
4. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
5. **INSPECT STEERING WHEEL CENTER POINT**
6. **INSTALL STEERING PAD ASSEMBLY** (See page [RS-336](#))
7. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
8. **INSPECT STEERING PAD ASSEMBLY** (See page [RS-337](#))
9. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-337](#)).

