
SYSTEM DESCRIPTION

The outer mirror switch controls the outer rear view mirror LH and RH.

PROBLEM SYMPTOMS TABLE

HINT:
Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Power mirror control system

Symptom	Suspected area	See page
Mirror does not operate	1. ACC fuse	MI-1
	2. Outer mirror switch	MI-13
	3. Outer rear view mirror	MI-10
	4. Wire harness	-
Mirror operates abnormally	1. Outer mirror switch	MI-13
	2. Outer rear view mirror	MI-10
	3. Wire harness	-