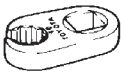

 


 
 




BRAKE CONTROL

SST

| | | | |
|---|---------------|--------------------------------|---|
|  | 09023-00101 | Union Nut Wrench 10 mm | - |
|  | 09214-76011 | Crankshaft Pulley Replacer | - |
|  | 09520-00031 | Rear Axle Shaft Puller | - |
|  | (09520-00040) | Shocker | - |
|  | 09521-00020 | Drive Shaft Boot Clamping Tool | - |
|  | 09950-00020 | Bearing Remover | - |

RECOMMENDED TOOLS

| | | | |
|---|---------------|--------------------------|---------------------|
|  | 09031-00040 | Pin Punch . | Skid control sensor |
|  | 09082-00040 | TOYOTA Electrical Tester | - |
|  | (09083-00150) | Test Lead Set | - |