








 



 

 
 
 
 
 
 
 

 
 
U151E AUTOMATIC TRANSMISSION

 






 
 



SST

	09215-00013	Crankshaft Bearing Remover & Replacer Set B	-
	(09215-00471)	Camshaft Bearing Remover & Replacer	-
	09223-15020	Oil Seal & Bearing Replacer	-
	09223-15030	Oil Seal & Bearing Replacer	-
	09308-00010	Oil Seal Puller	-
	09316-12010	Transfer Bearing Replacer	-
	09316-60011	Transmission & Transfer Bearing Replacer	-
	(09316-00011)	Replacer Pipe	-
	09350-32014	TOYOTA Automatic Transmission Tool Set	-
	(09351-32010)	One-way Clutch Test Tool	-
	(09351-32020)	Stator Stopper	-




 



 




PP




 








PP



	(09351-32070)	No.2 Piston Spring Compressor	-
	(09351-32140)	Oil Seal Replacer	-
	09387-00020	Direct Clutch Wrench	-
	09387-00030	Counter Drive Gear Holding Tool	-
	09387-00041	Bearing Puller Assembly	-
	(09387-01010)	Claw No.1	-
	(09387-01021)	Claw No.2	-
	(09387-01030)	Pin	-
	(09387-01040)	Bearing Puller Body	-
	09387-00050	Under Drive Gear Puller	-
	09387-00060	Second Brake Wrench	-
	09387-00070	First & Reverse Brake Wrench	-

	09387-00080	Counter Drive Gear Nut Wrench	-
	09502-12010	Differential Bearing Replacer	-
	09506-35010	Differential Drive Pinion Rear Bearing Replacer	-
	09514-35011	Rear Wheel Bearing Puller	-
	09527-17011	Rear Axle Shaft Bearing Remover	-
	09550-60010	Differential Side Bearing Replacer	-
	(09951-00490)	Replacer 49	-
	09564-32011	Differential Preload Adaptor	-
	09608-10010	Steering Knuckle Oil Seal Replacer	-
	09649-17010	Steering Knuckle Tool	-
	09710-30050	Suspension Arm Bushing Replacer	-
	09726-40010	Lower Control Shaft Bearing Replacer	-

PP

	09930-00010	Drive Shaft Nut Chisel	-
	(09931-00010)	Handle	-
	(09931-00020)	Nut Chisel	-
	09950-00020	Bearing Remover	-
	09950-00030	Bearing Remover Attachment	-
	09950-40011	Puller B Set	-
	(09957-04010)	Attachment	-
	09950-60010	Replacer Set	-
	(09951-00230)	Replacer 23	-
	(09951-00260)	Replacer 26	-
	(09951-00320)	Replacer 32	-
	(09951-00450)	Replacer 45	-

	(09951-00490)	Replacer 49	-
	(09951-00500)	Replacer 50	-
	(09951-00590)	Replacer 59	-
	(09952-06010)	Adapter	-
	(09957-04010)	Attachment	-
	09950-60020	Replacer Set No.2	-
	(09951-00750)	Replacer 75	-
	(09951-00810)	Replacer 81	-
	(09951-00890)	Replacer 89	-
	(09951-00910)	Replacer 91	-
	(09951-01030)	Replacer 103	-
	09950-70010	Handle Set	-

	(09951-07100)	Handle 100	-
	(09951-07150)	Handle 150	-

PP