



CHILD RESTRAINT SEAT TETHER ANCHOR


COMPONENTS

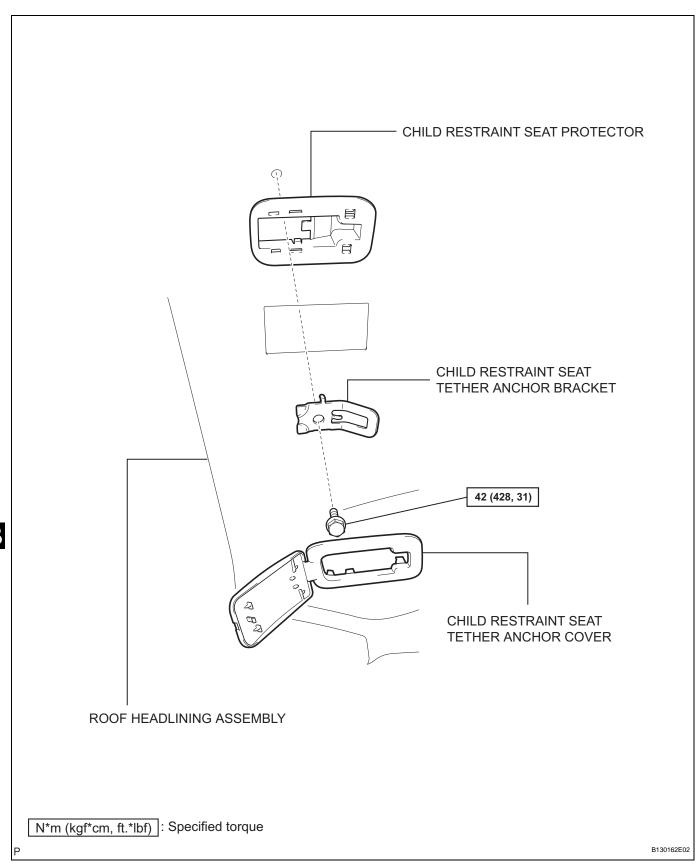


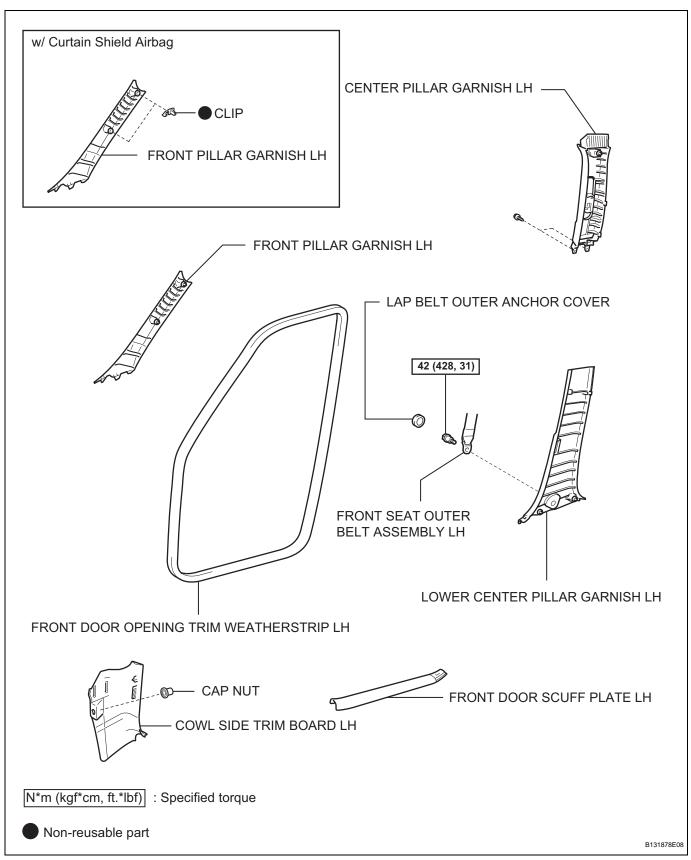


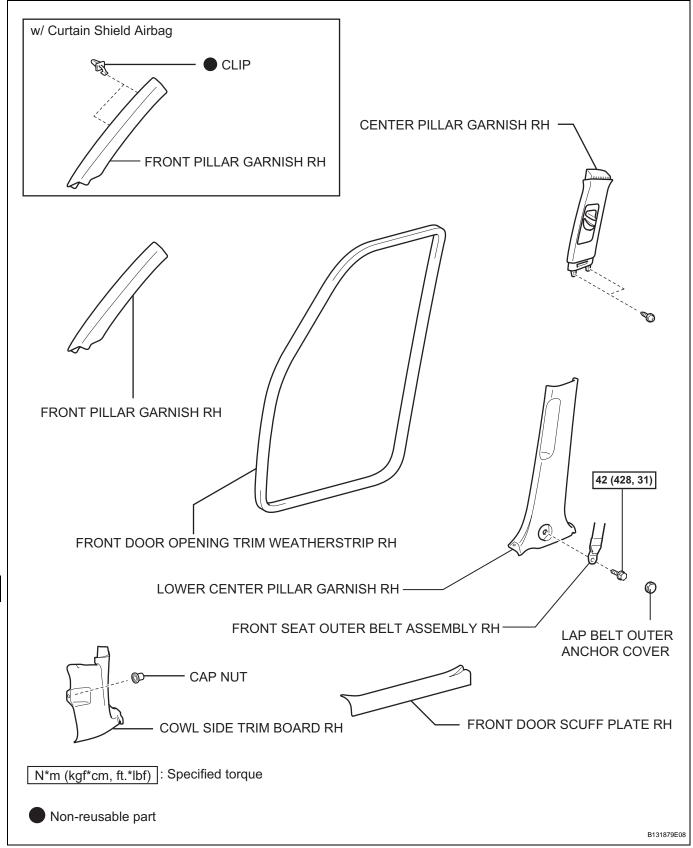


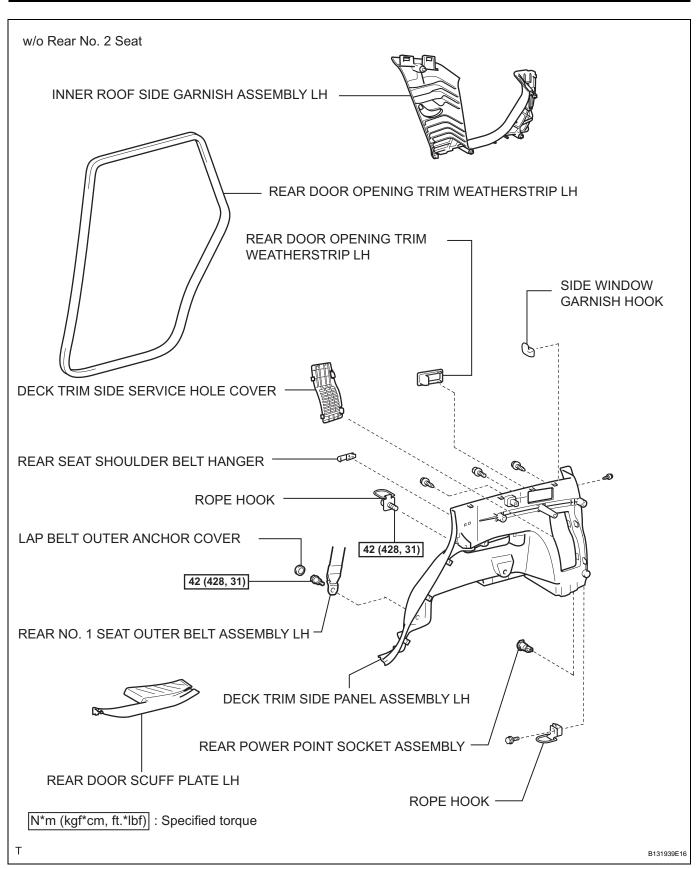


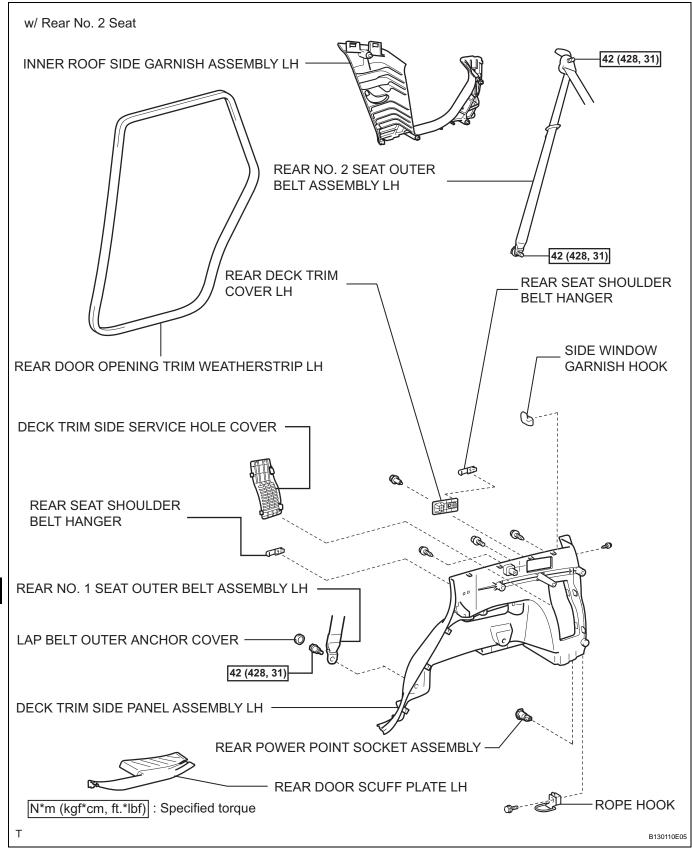


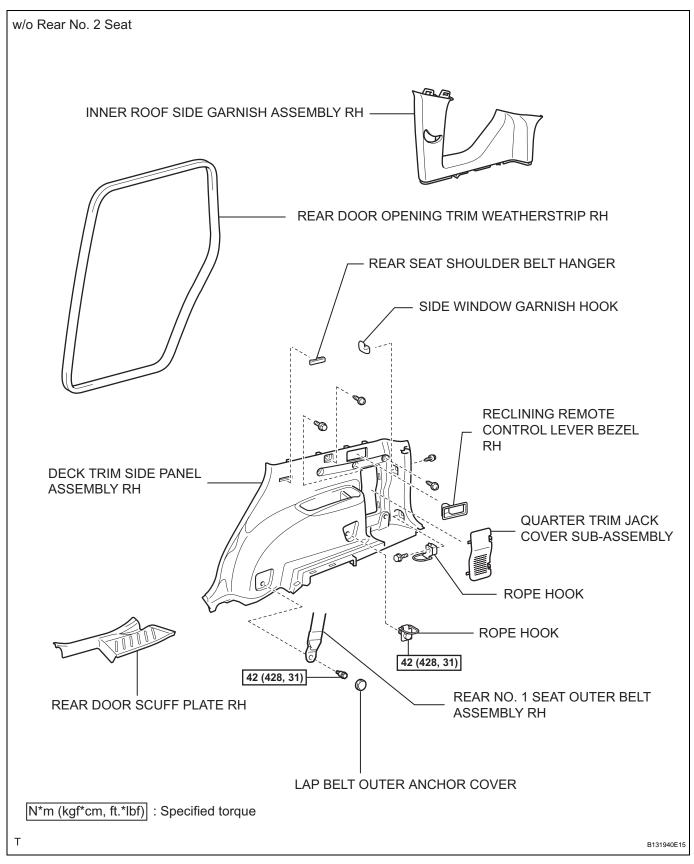


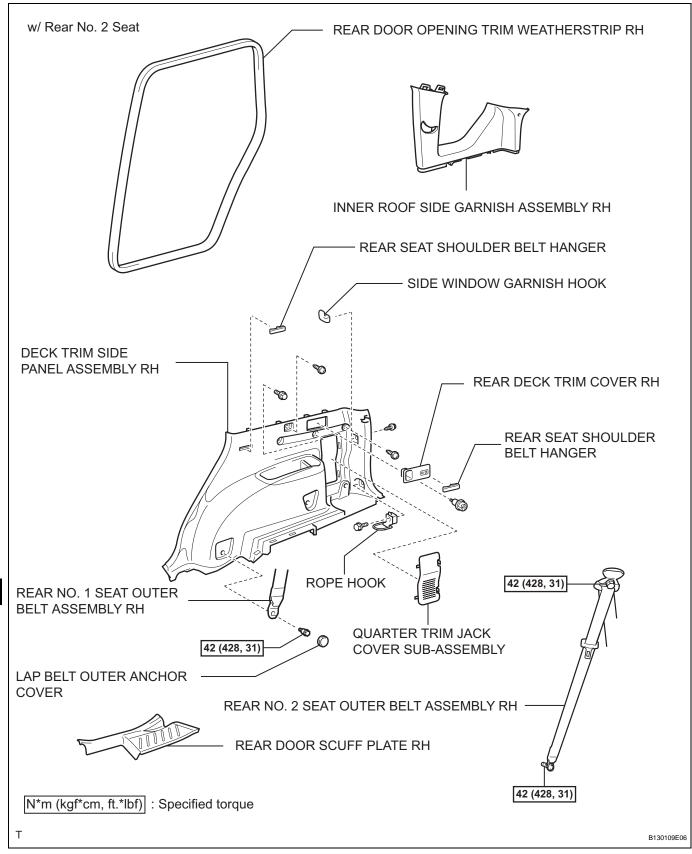


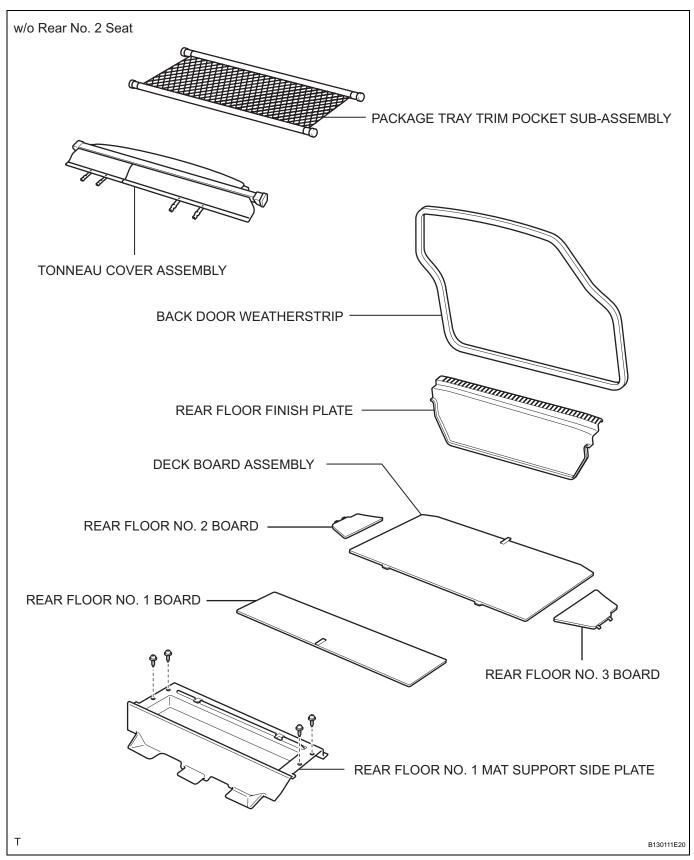


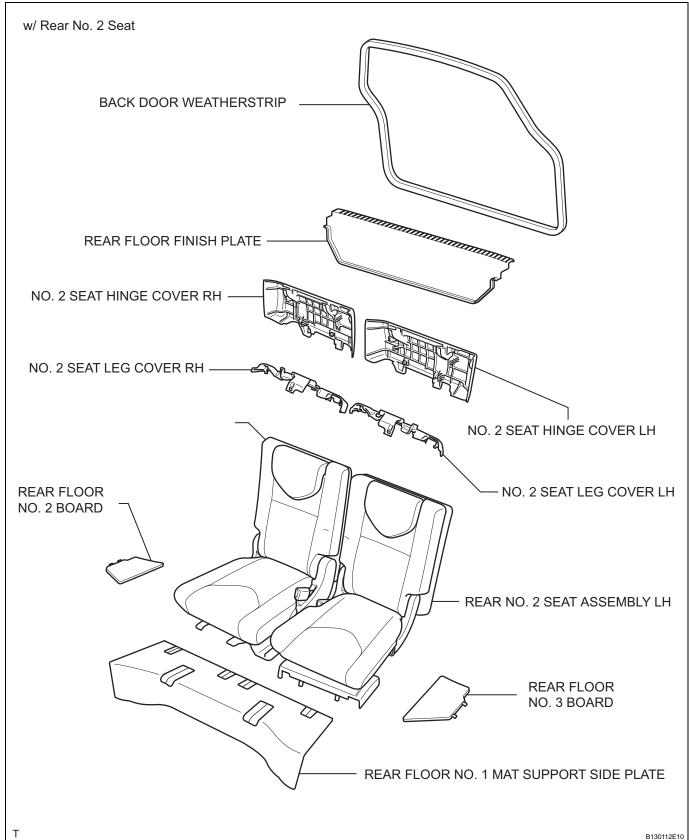

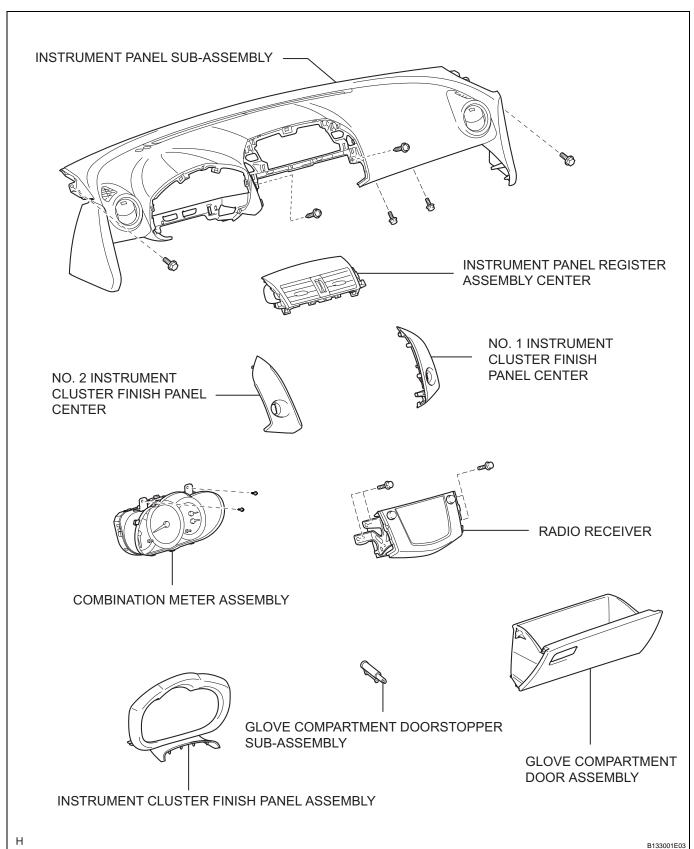

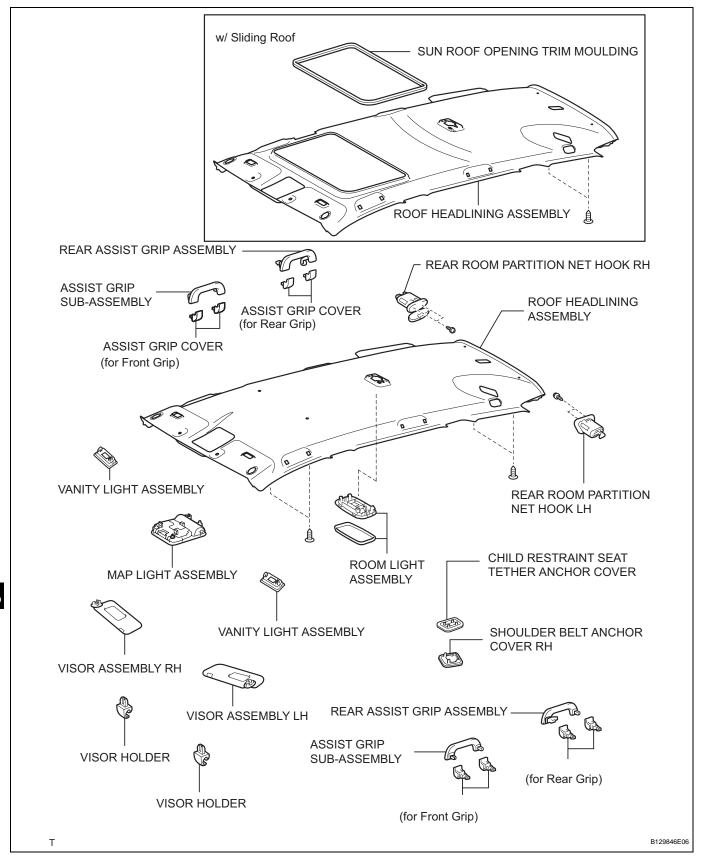

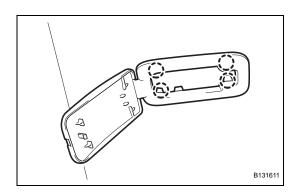

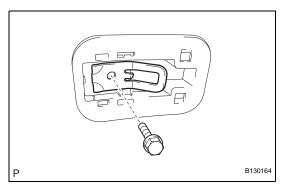

REMOVAL

1. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR COVER

(a) Using a screwdriver, detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

2. REMOVE ROOF HEADLINING ASSEMBLY HINT:

It is not necessary to completely remove the roof headlining. Slightly lower the rear section of the roof headlining.

(a) Partially remove the roof headlining (see page IR-26).

3. REMOVE CHILD RESTRAINT SEAT TETHER ANCHOR BRACKET

- (a) Remove the bolt and bracket.
- 4. REMOVE CHILD RESTRAINT SEAT PROTECTOR