



REAR CENTER SEAT OUTER BELT ASSEMBLY


COMPONENTS

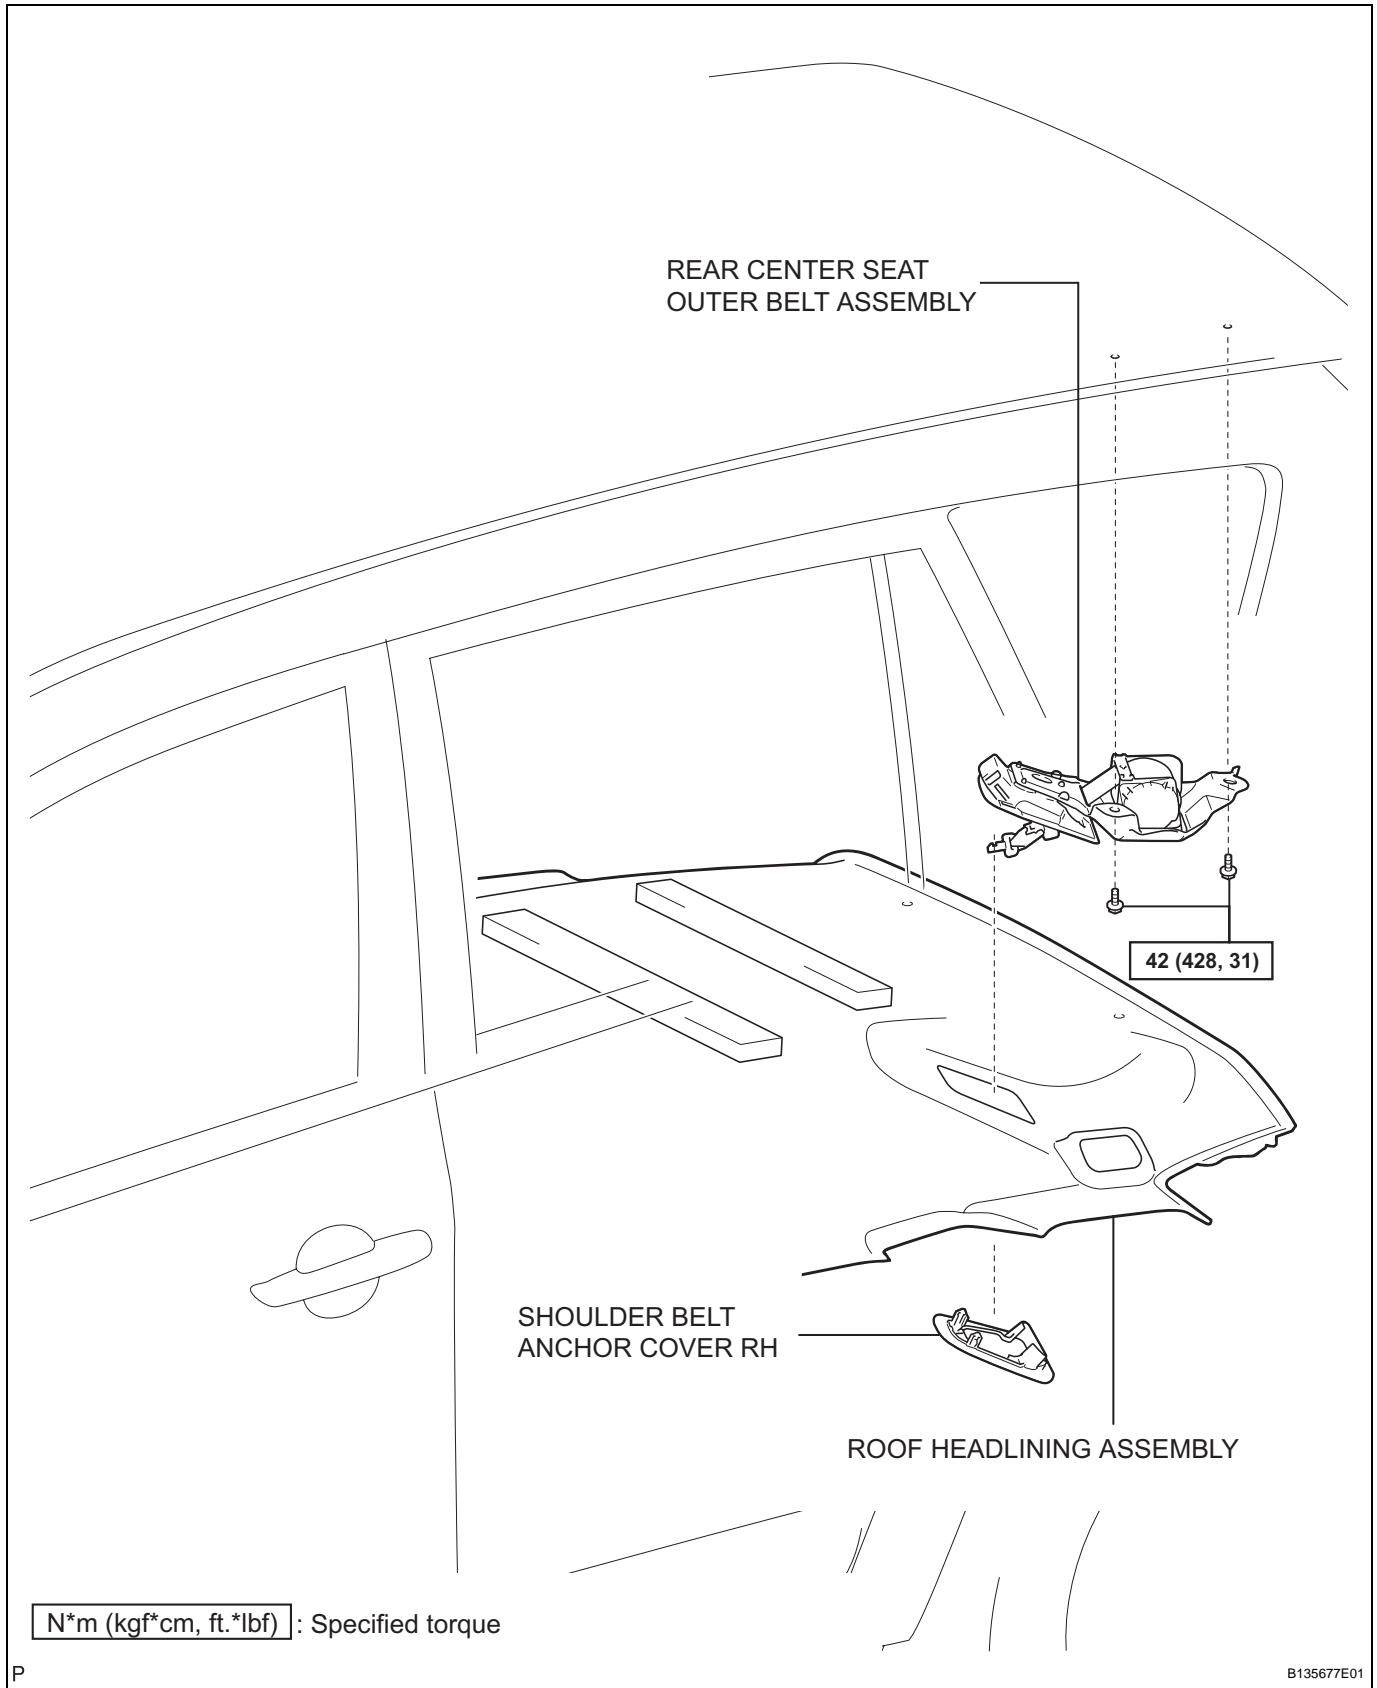


w/ Curtain Shield Airbag

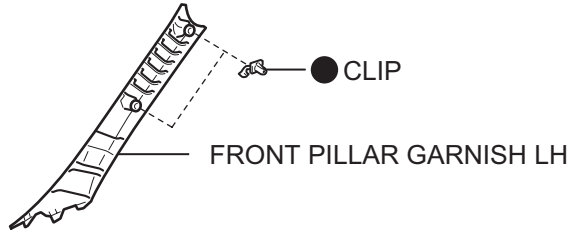

CENTER PILLAR GARNISH LH

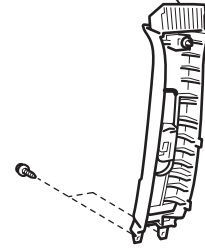

FRONT PILLAR GARNISH LH

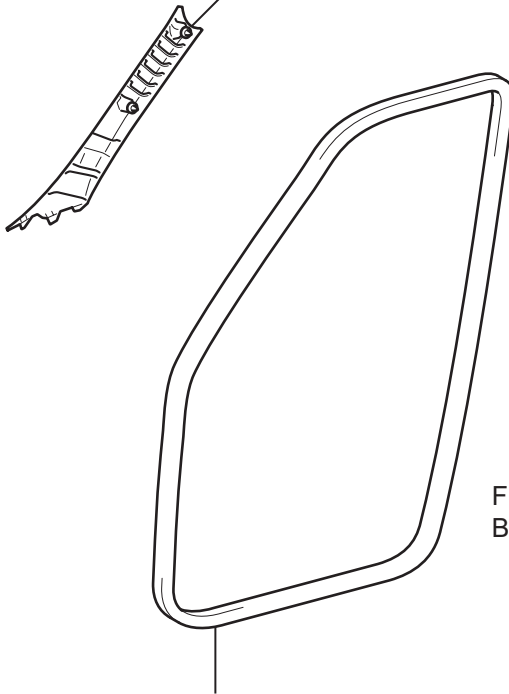



LAP BELT OUTER ANCHOR COVER

42 (428, 31)

FRONT SEAT OUTER
BELT ASSEMBLY LH

LOWER CENTER PILLAR GARNISH LH

 
FRONT DOOR OPENING TRIM WEATHERSTRIP LH

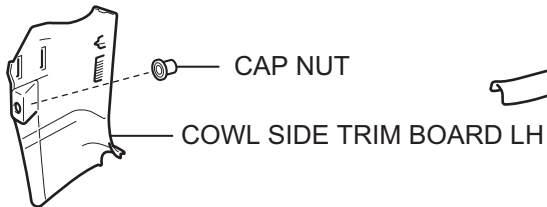


N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


w/ Curtain Shield Airbag

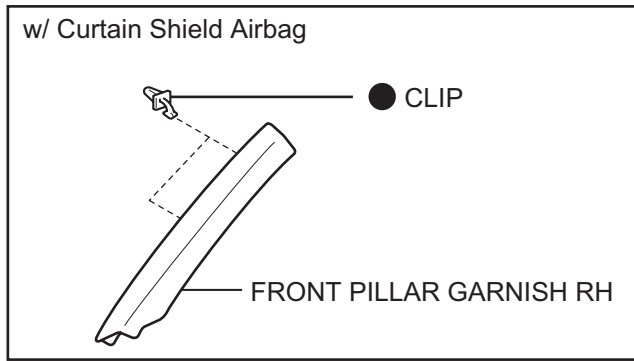

CENTER PILLAR GARNISH RH

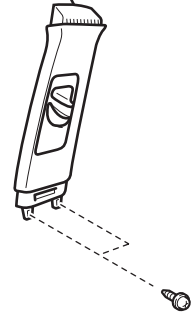

FRONT PILLAR GARNISH RH

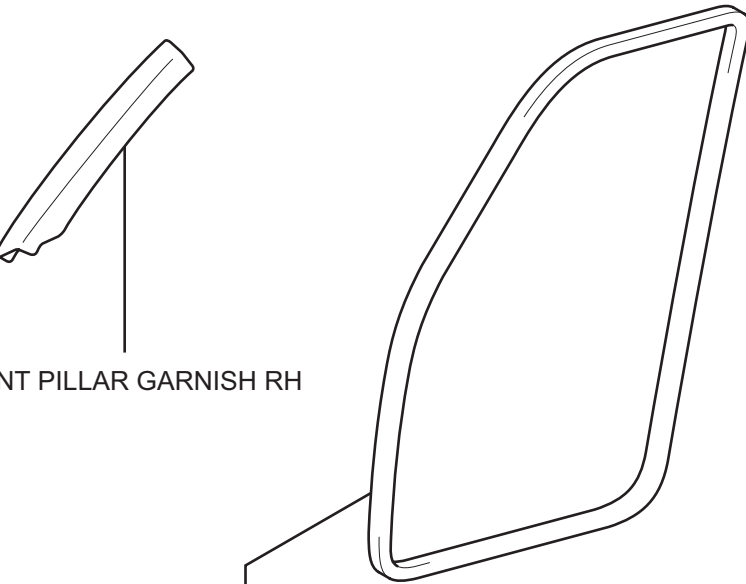


FRONT DOOR OPENING TRIM WEATHERSTRIP RH

LOWER CENTER PILLAR GARNISH RH

FRONT SEAT OUTER BELT ASSEMBLY RH

LAP BELT OUTER ANCHOR COVER

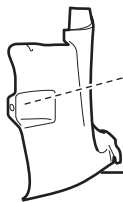

CAP NUT

COWL SIDE TRIM BOARD RH




FRONT DOOR SCUFF PLATE RH

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


SB

w/o Rear No. 2 Seat

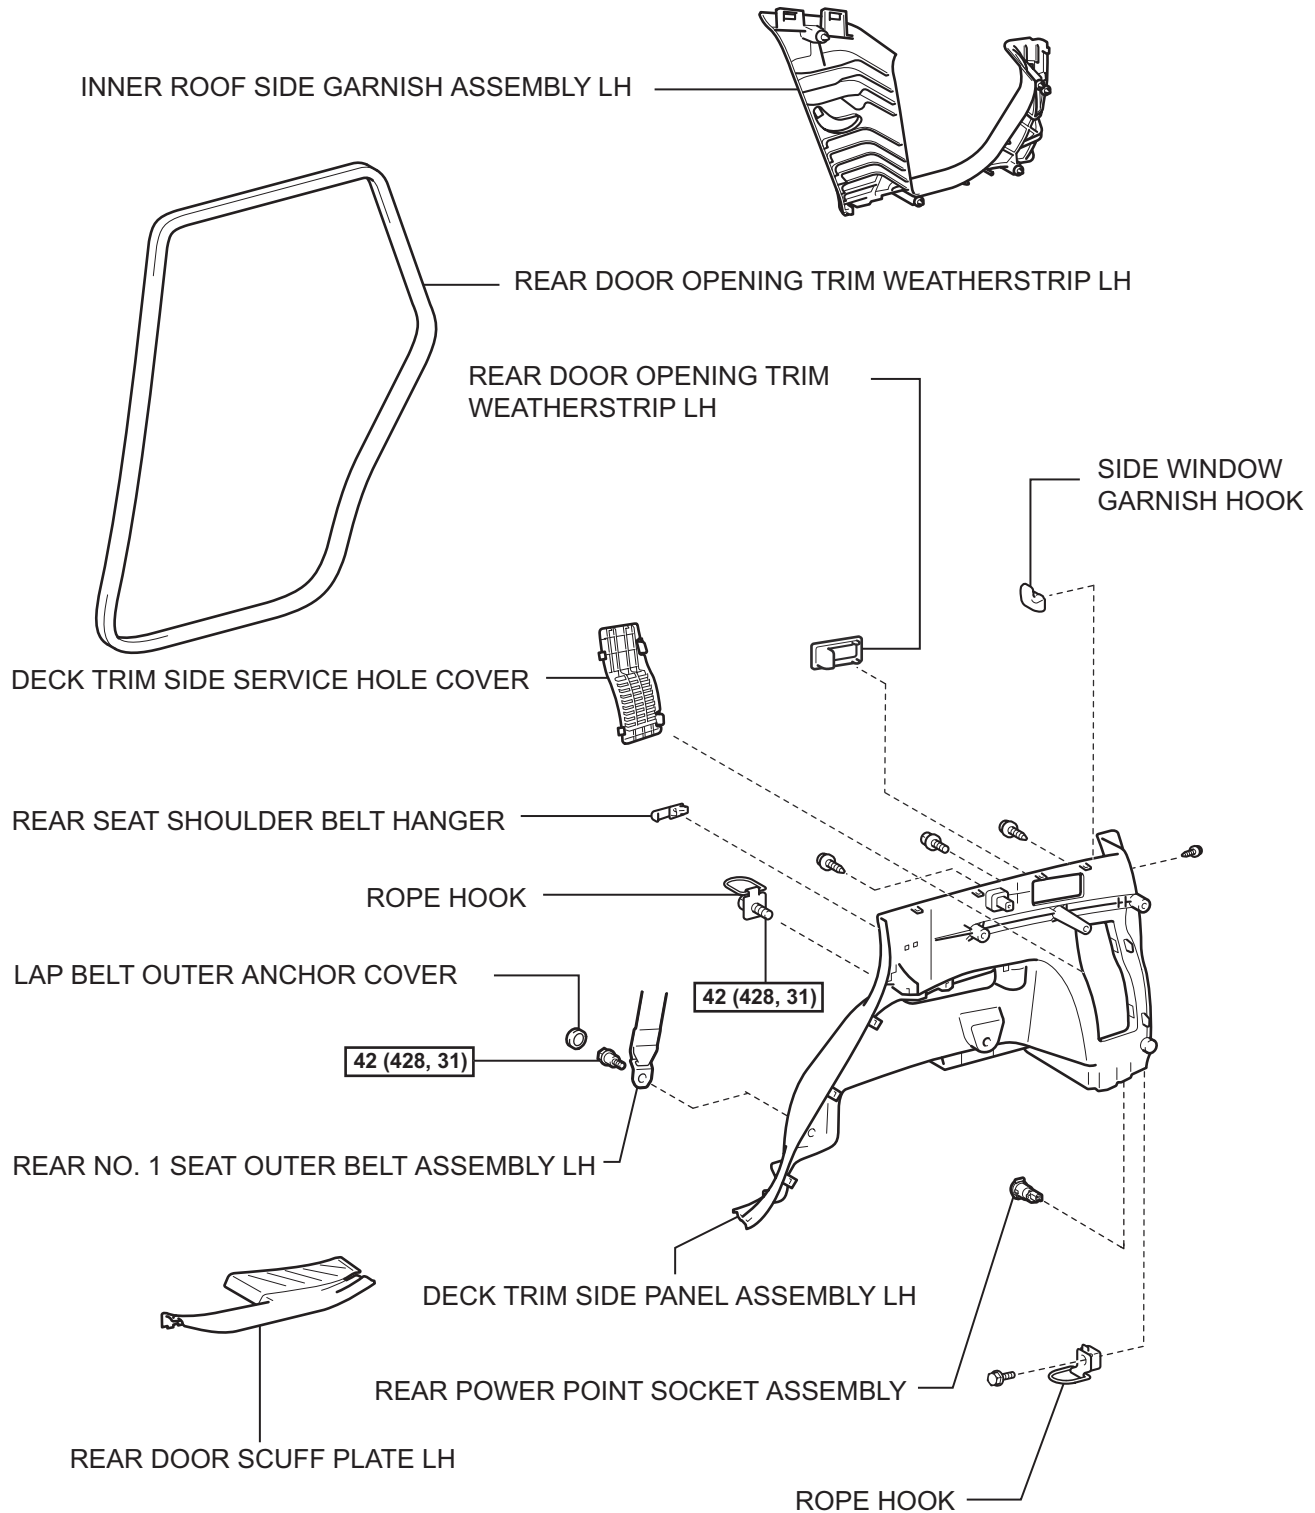


N*m (kgf*cm, ft.*lbf) : Specified torque

w/ Rear No. 2 Seat

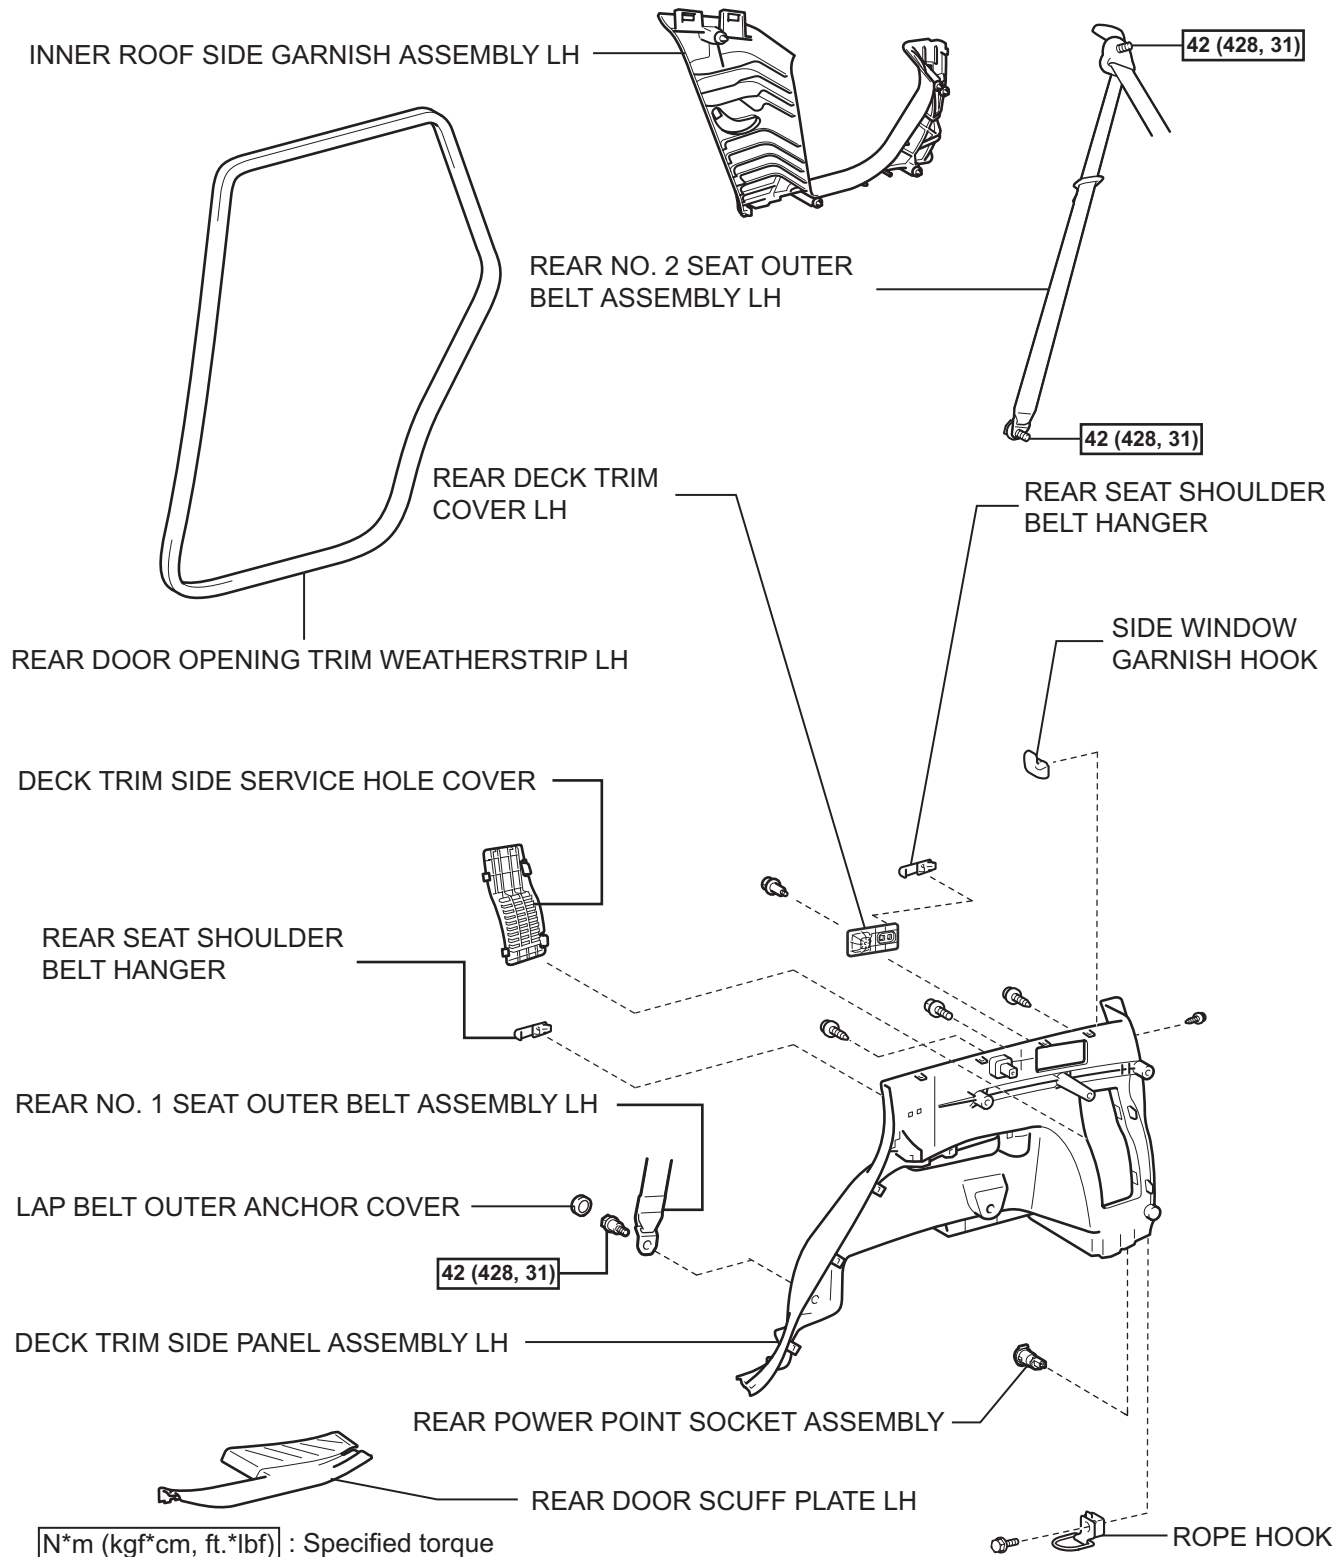


SB

w/o Rear No. 2 Seat

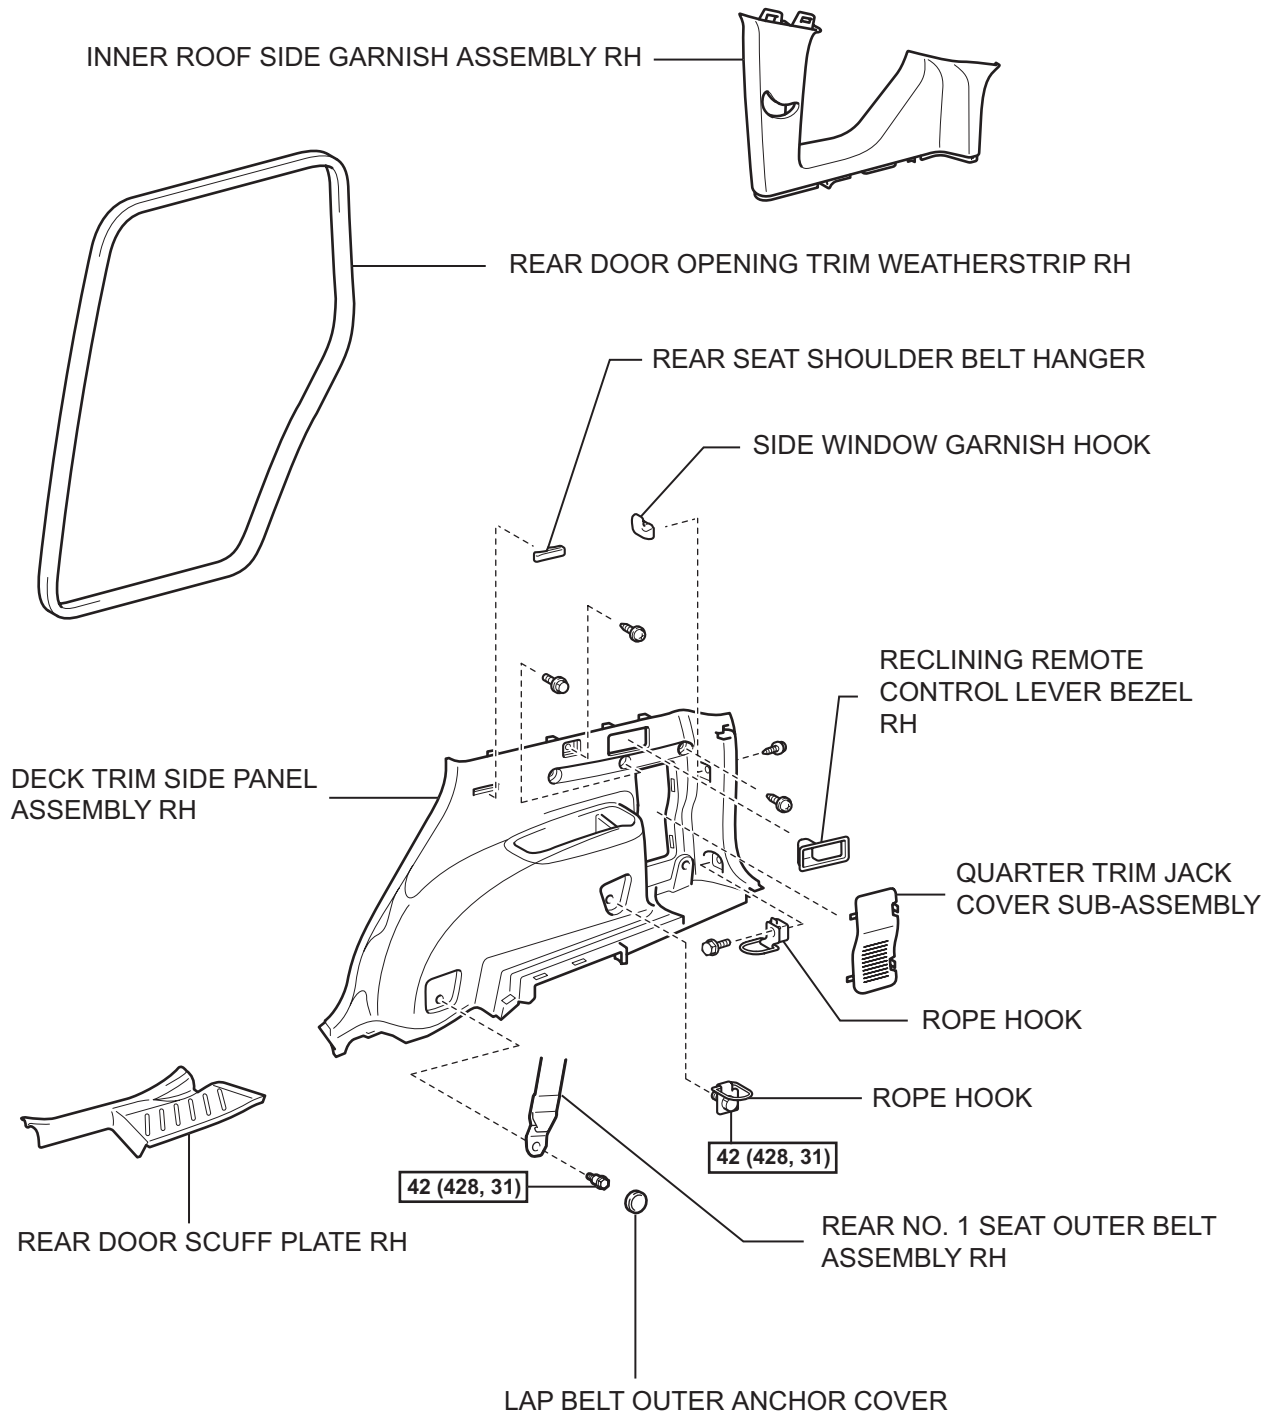


N*m (kgf*cm, ft.*lbf) : Specified torque

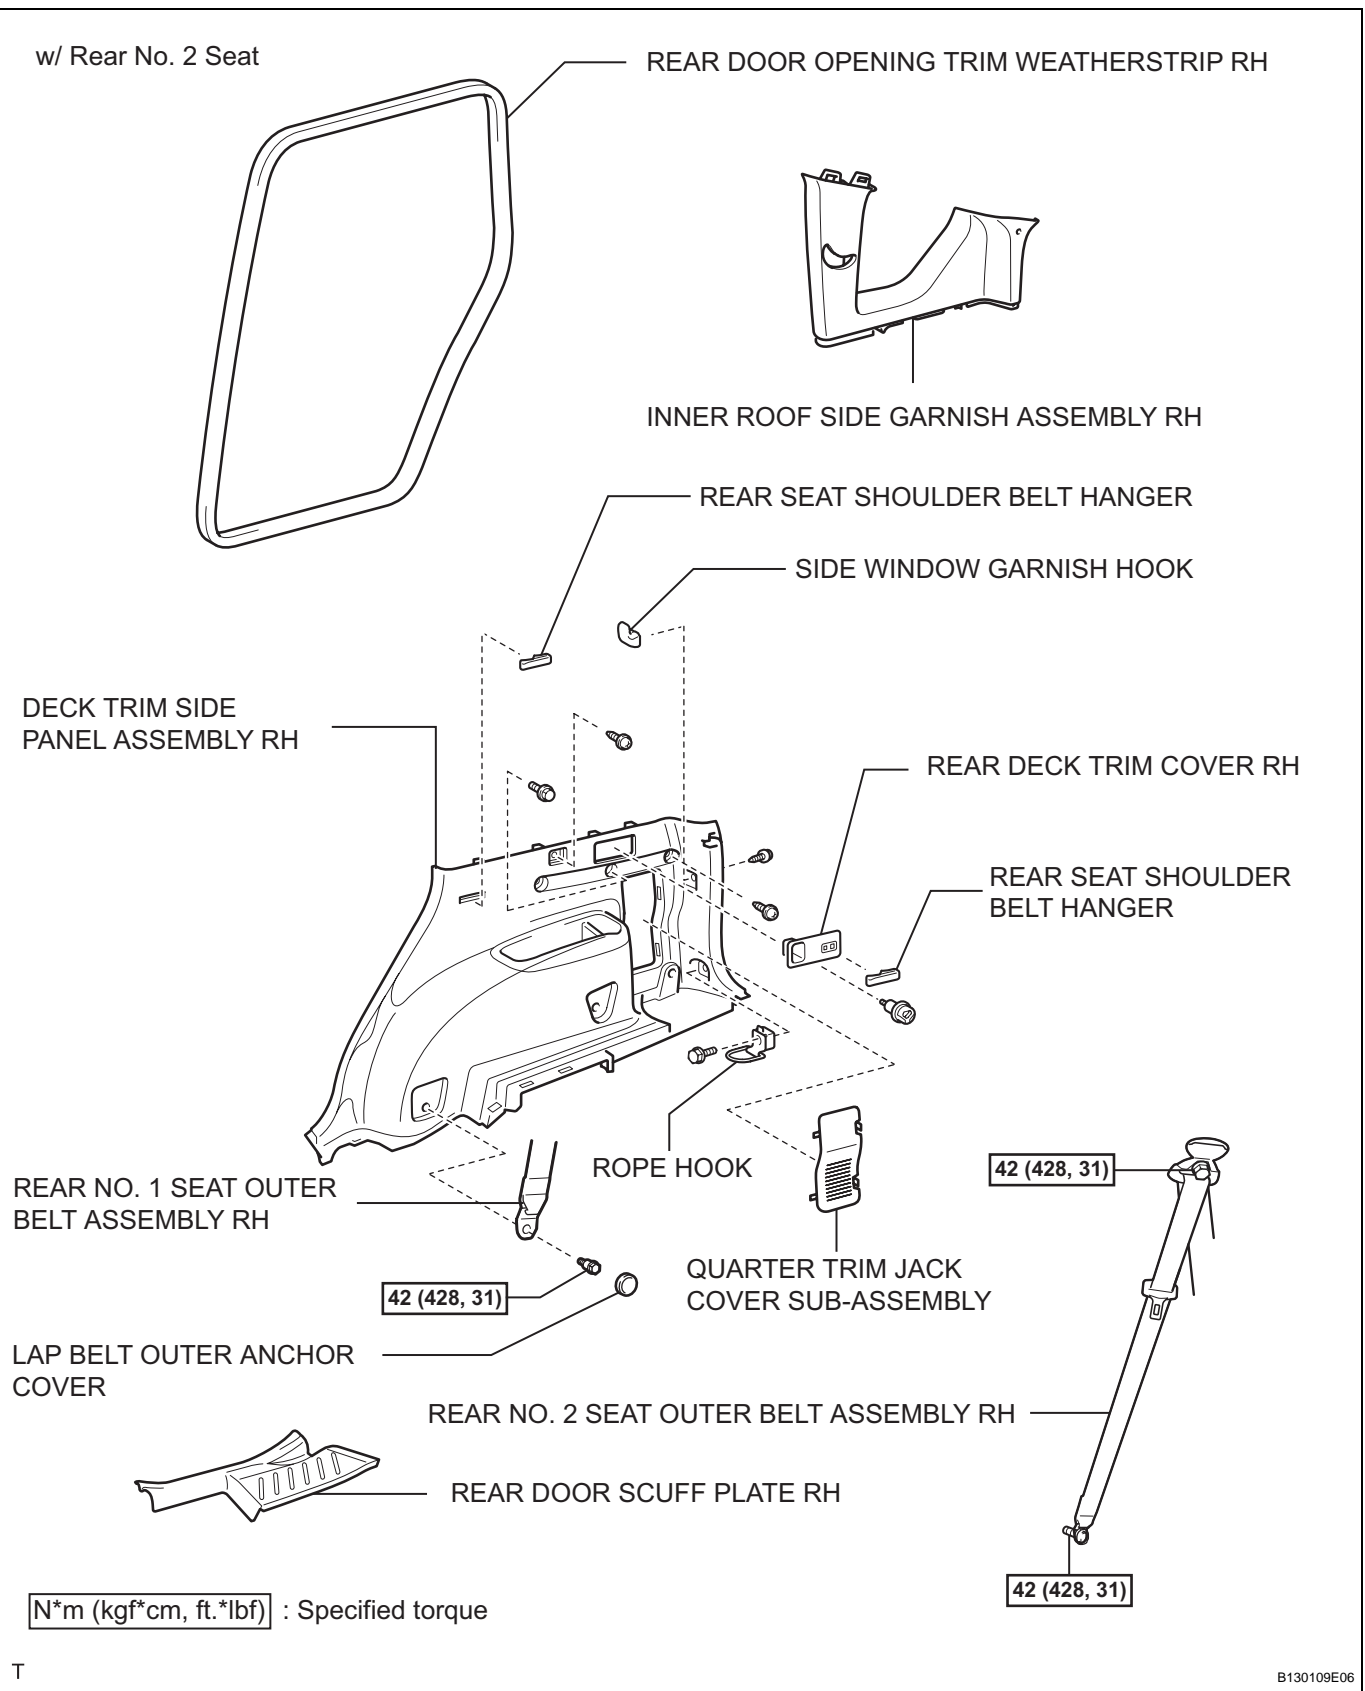


SB

w/o Rear No. 2 Seat

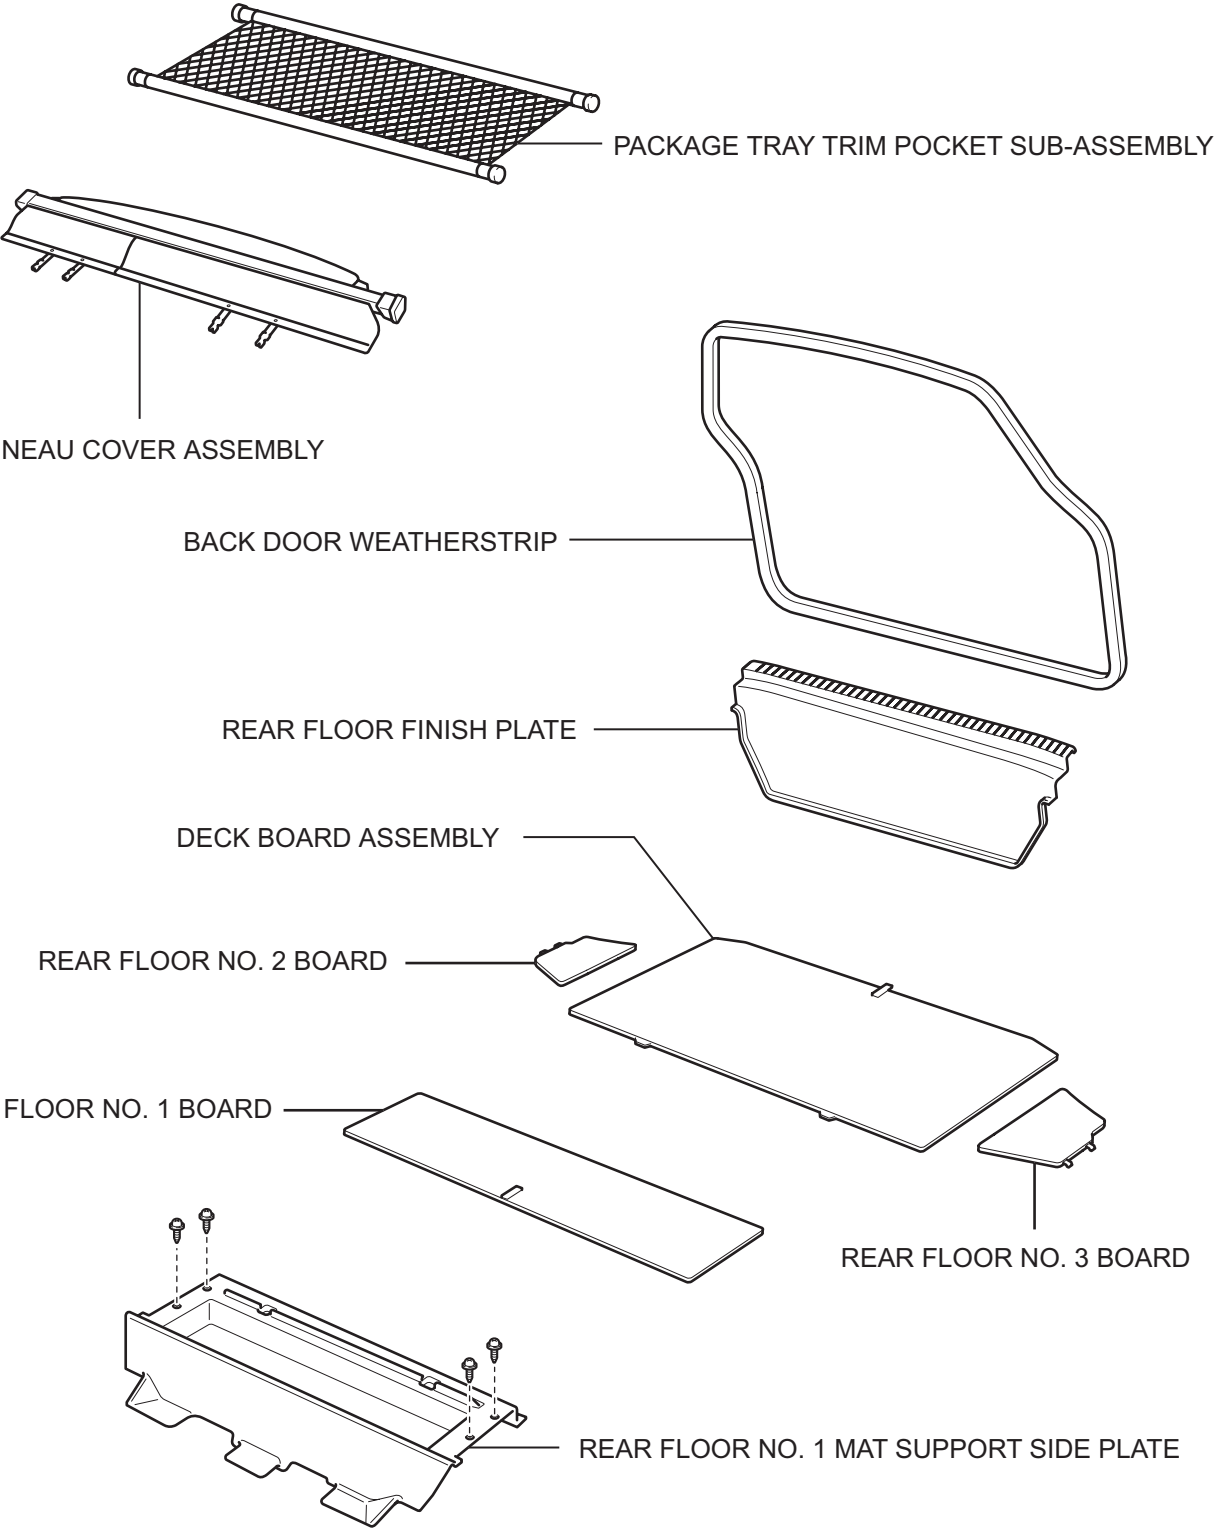


SB

w/ Rear No. 2 Seat

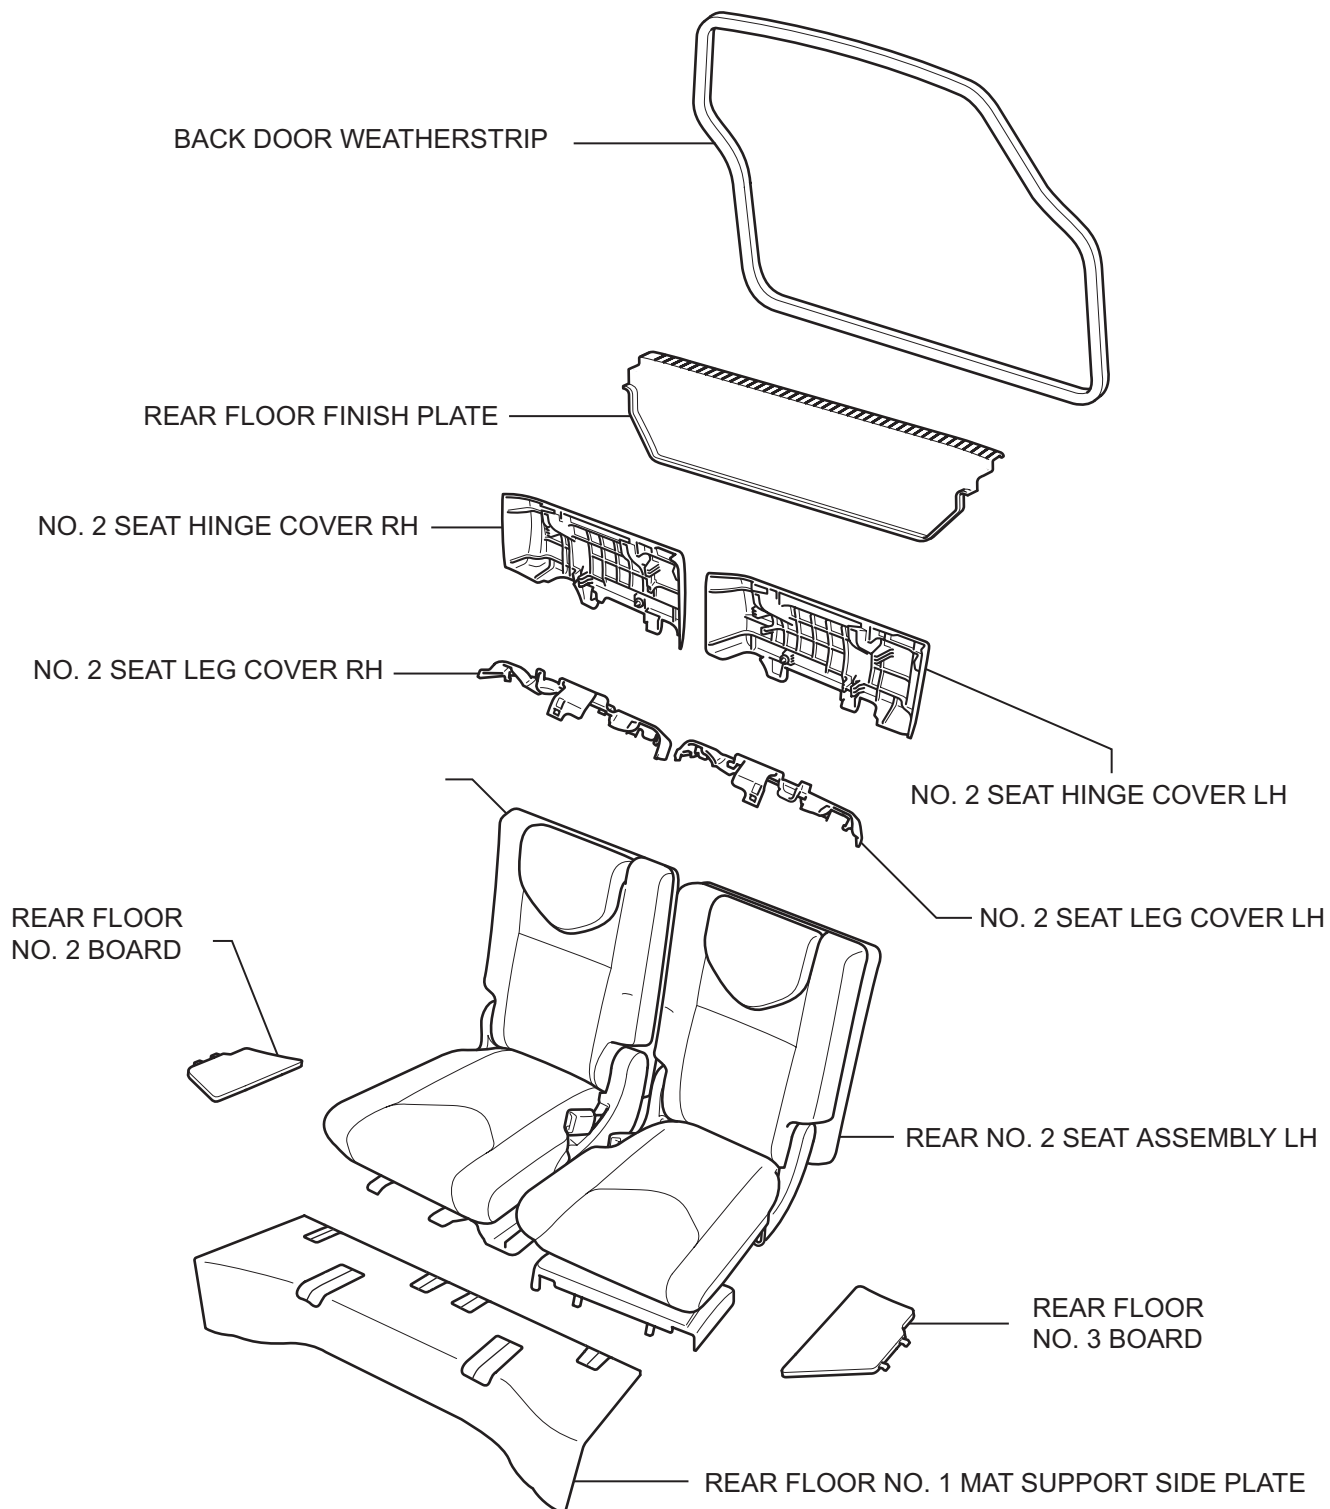**SB**

INSTRUMENT PANEL SUB-ASSEMBLY

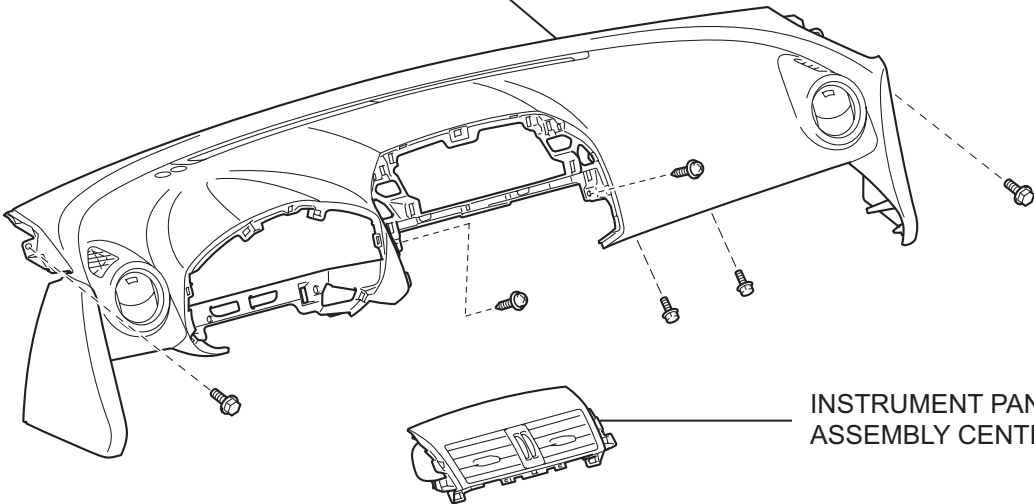


INSTRUMENT PANEL REGISTER
ASSEMBLY CENTER


NO. 2 INSTRUMENT
CLUSTER FINISH PANEL
CENTER




NO. 1 INSTRUMENT
CLUSTER FINISH
PANEL CENTER

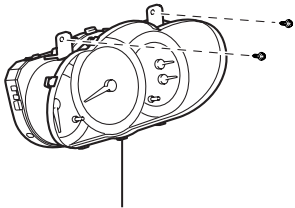

COMBINATION METER ASSEMBLY

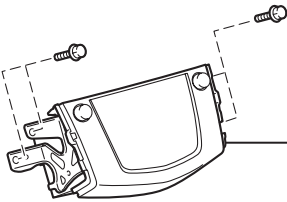


RADIO RECEIVER

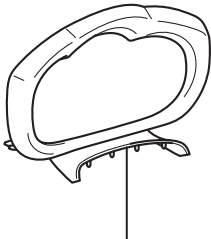

INSTRUMENT CLUSTER FINISH PANEL ASSEMBLY

GLOVE COMPARTMENT DOORSTOPPER
SUB-ASSEMBLY

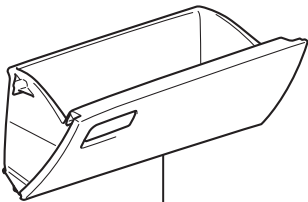

GLOVE COMPARTMENT
DOOR ASSEMBLY

SB

