

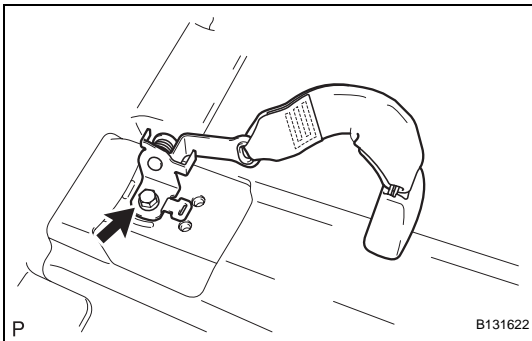


## REMOVAL


1. REMOVE REAR SEAT LEG COVER
2. REMOVE REAR NO. 2 SEAT LEG SIDE COVER
3. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat) (See page [SE-81](#))
4. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat) (See page [SE-81](#))
5. REMOVE REAR NO. 4 SEAT LEG SIDE COVER
6. REMOVE REAR NO. 5 SEAT LEG SIDE COVER
7. REMOVE REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/o Rear No. 2 Seat)
  - (a) Remove the bolt and seat belt.

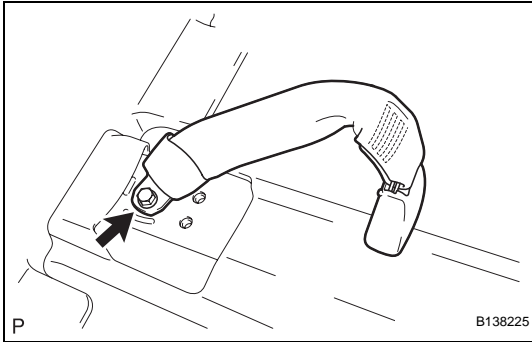


8. REMOVE REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/ Rear No. 2 Seat)
  - (a) Remove the bolt and seat belt.
9. REMOVE REAR NO. 1 SEAT ASSEMBLY LH (See page [SE-50](#))
10. REMOVE REAR SEAT REAR BRACKET COVER LH (See page [SE-54](#))

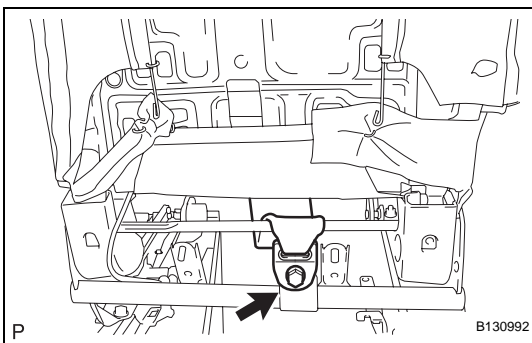

11. REMOVE REAR SEAT LAP TYPE BELT ASSEMBLY CENTER LH
  - (a) Remove the bolt and the seat belt.

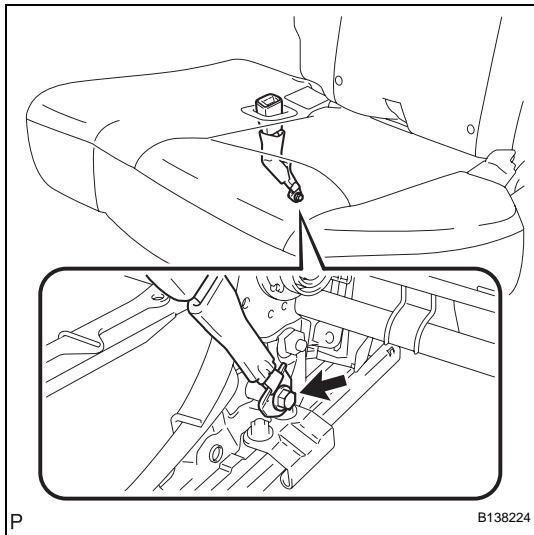


12. REMOVE REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type LH Side)
  - (a) Remove the bolt and the seat belt.
13. REMOVE REAR NO. 1 SEAT ASSEMBLY RH (See page [SE-84](#))

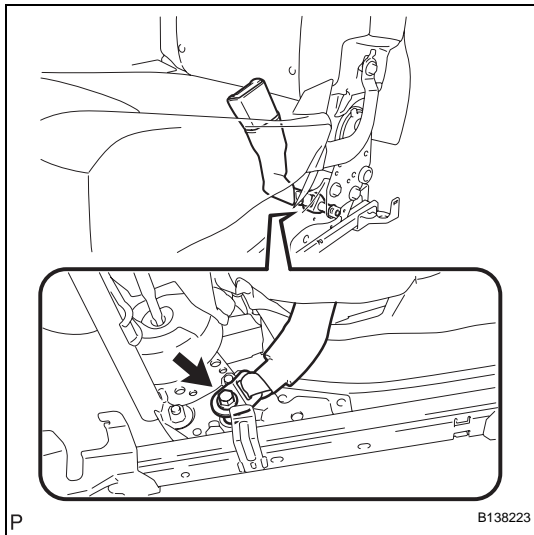


14. REMOVE REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type RH Side)
  - (a) Remove the bolt and the seat belt.
15. REMOVE NO. 2 SEAT HINGE COVER LH (w/ Rear No. 2 Seat) (See page [SE-109](#))
16. REMOVE NO. 2 SEAT LEG COVER (w/ Rear No. 2 Seat) (See page [SE-109](#))
17. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-110](#))
18. REMOVE REAR NO. 2 SEAT RECLINING COVER LH (w/ Rear No. 2 Seat) (See page [SE-111](#))

SB

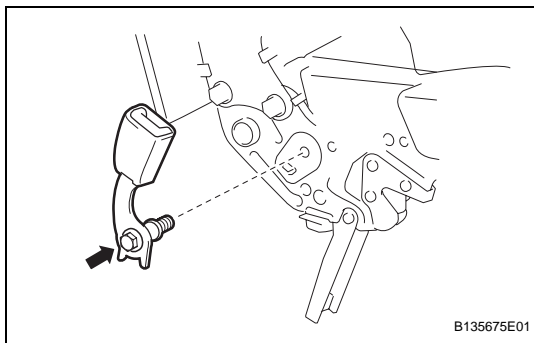


19. REMOVE REAR NO. 2 SEAT INNER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)
  - (a) Remove the bolt and seat belt.

## INSTALLATION

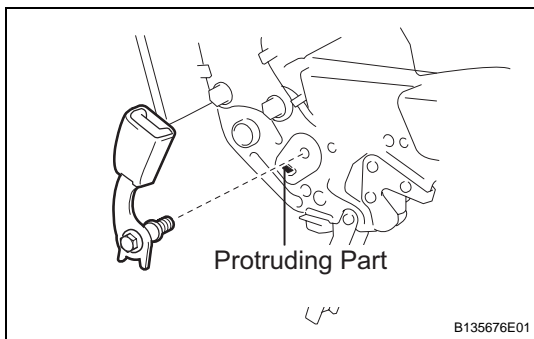


1. INSTALL REAR NO. 2 SEAT INNER BELT ASSEMBLY LH (w/ Rear No. 2 Seat)
  - (a) Install the seat belt with the bolt.  
Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)
2. INSTALL REAR NO. 2 SEAT RECLINING COVER LH (w/ Rear No. 2 Seat) (See page [SE-121](#))
3. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (w/ Rear No. 2 Seat) (See page [SE-121](#))


4. **INSTALL NO. 2 SEAT LEG COVER (w/ Rear No. 2 Seat) (See page [SE-123](#))**
5. **INSTALL NO. 2 SEAT HINGE COVER (w/ Rear No. 2 Seat) (See page [SE-123](#))**
6. **INSTALL REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type RH Side)**
  - (a) Install the belt with the bolt.  
Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)
7. **INSTALL REAR NO. 1 SEAT ASSEMBLY RH (See page [SE-97](#))**

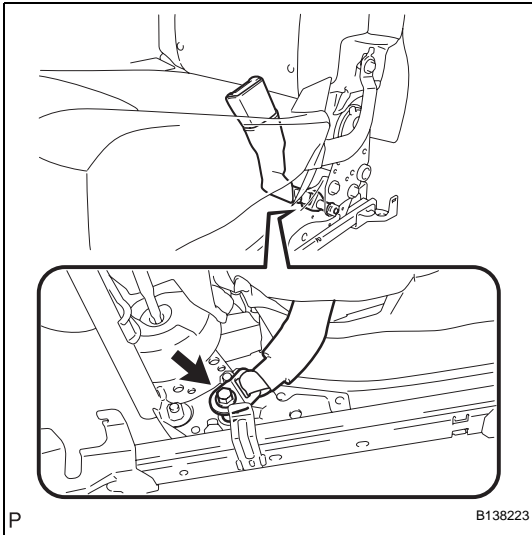


8. **INSTALL REAR SEAT INNER BELT ASSEMBLY RH (for 60/40 Split Seat Type LH Side)**
  - (a) Install the belt with the bolt.  
Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)

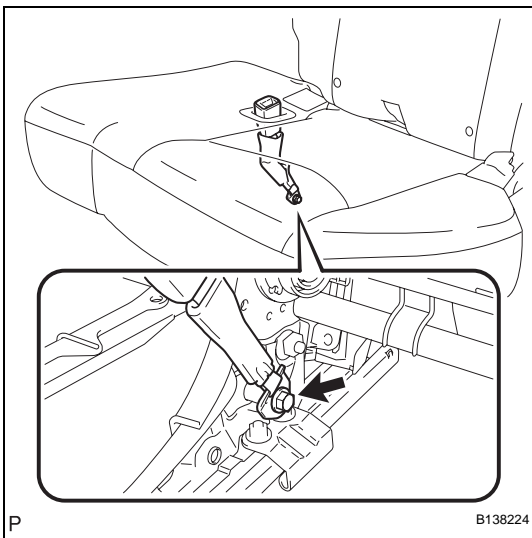

9. **INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER LH**
  - (a) Install the belt with the bolt.  
Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)
10. **INSTALL REAR SEAT REAR BRACKET COVER LH (See page [SE-60](#))**
11. **INSTALL REAR NO. 1 SEAT ASSEMBLY LH (See page [SE-64](#))**

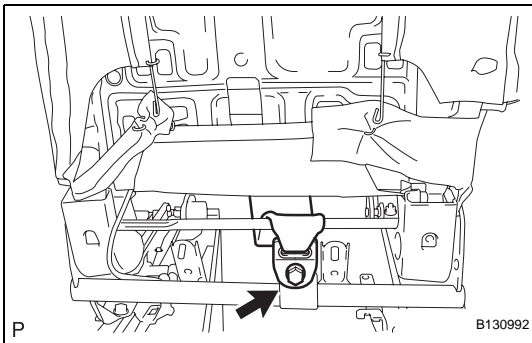

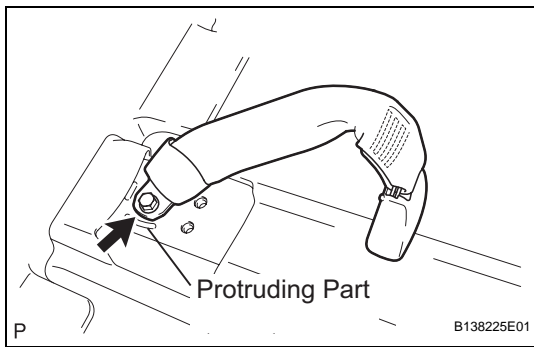


**12. INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/o Rear No. 2 Seat)**

- (a) Install the belt with the bolt.

**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

**NOTICE:**

The anchor part of the seat belt must not overlap the protruding part.

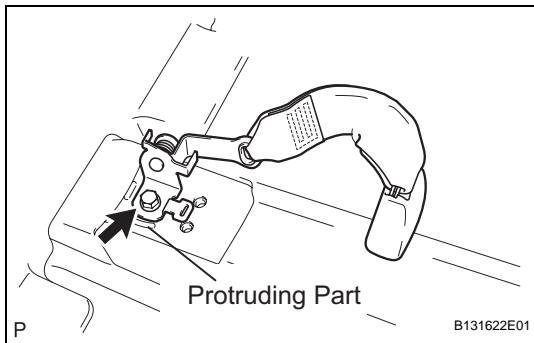

**13. INSTALL REAR SEAT LAP TYPE BELT ASSEMBLY CENTER RH (w/ Rear No. 2 Seat)**

- (a) Install the belt with the bolt.

**Torque: 42 N\*m (428 kgf\*cm, 31 ft.\*lbf)**

**NOTICE:**

The anchor part of the seat belt must not overlap the protruding part.

**14. INSTALL REAR NO. 5 SEAT LEG SIDE COVER**

**15. INSTALL REAR NO. 4 SEAT LEG SIDE COVER**

**16. INSTALL REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat) (See page [SE-72](#))**

**17. INSTALL REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat) (See page [SE-72](#))**

**18. INSTALL REAR NO. 2 SEAT LEG SIDE COVER**

**19. INSTALL REAR SEAT LEG COVER**