

DISASSEMBLY

CAUTION:



Wear protective gloves. Sharp areas on the seat frame (with adjuster) may injure your hands.

1. REMOVE RECLINING POWER SEAT SWITCH KNOB

- (a) Using a screwdriver, detach the knob.

HINT:

Tape the screwdriver tip before use.

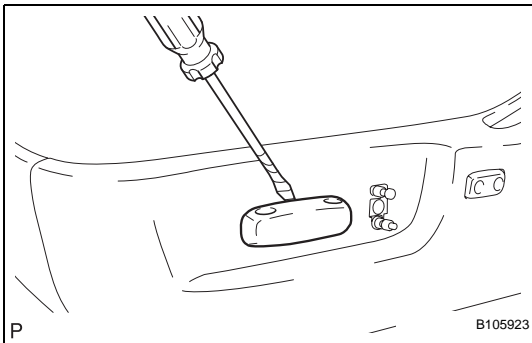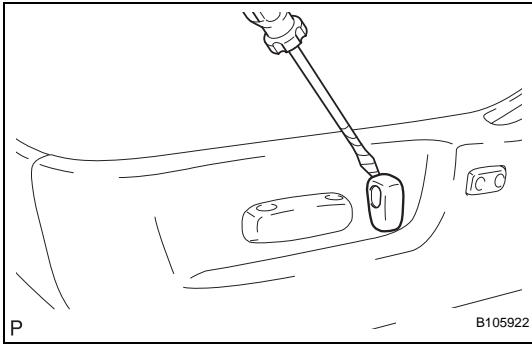


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

- (a) Using a screwdriver, detach the knob.

HINT:

Tape the screwdriver tip before use.

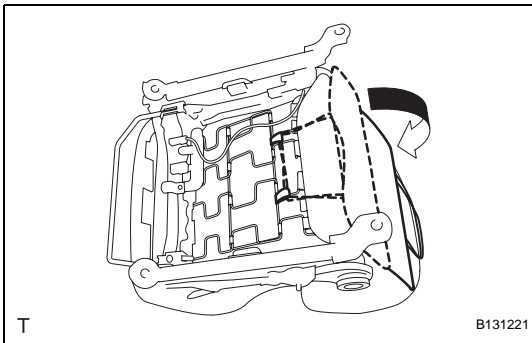

3. REMOVE FRONT SEAT CUSHION SHIELD LH


- (a) Disconnect the 2 rubber bands of the front seatback board from the front seat frame (with adjuster).


- (b) Remove the 5 screws.
 (c) Using a screwdriver, detach the 3 claws and remove the cushion shield (with front No. 1 seat cushion inner shield).

HINT:

Tape the screwdriver tip before use.

- (d) Disconnect the connector from the front power seat lumbar switch.

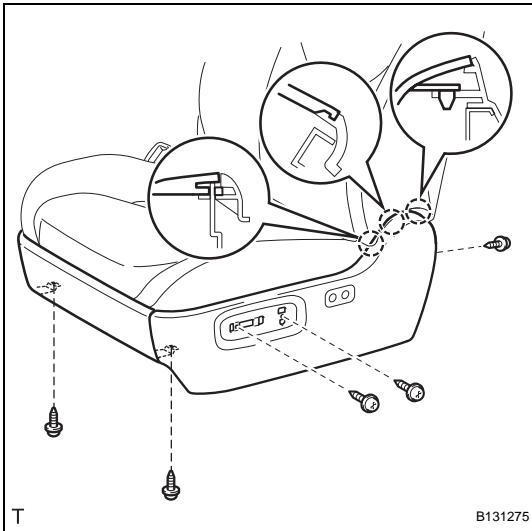

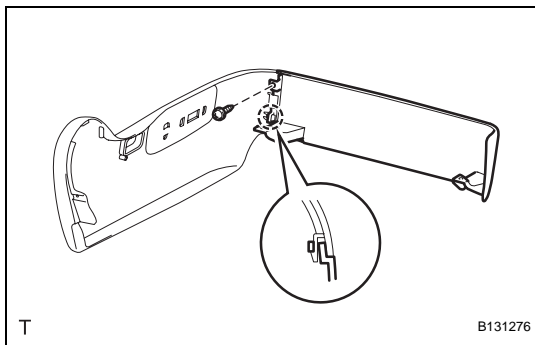


- (e) Remove the front No. 1 seat cushion inner shield from the cushion shield.

- (1) Remove the screw.
- (2) Using a screwdriver, detach the claw and remove the inner shield.


HINT:

Tape the screwdriver tip before use.

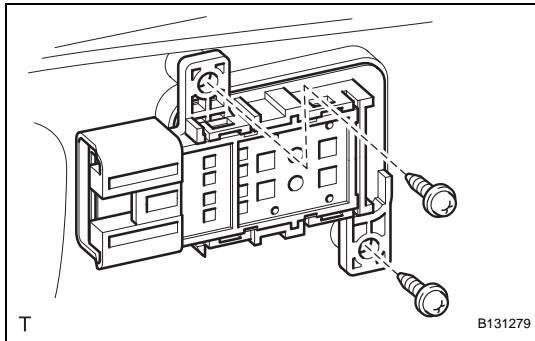

4. REMOVE FRONT POWER SEAT LUMBAR SWITCH

- (a) Remove the 2 screws and switch.

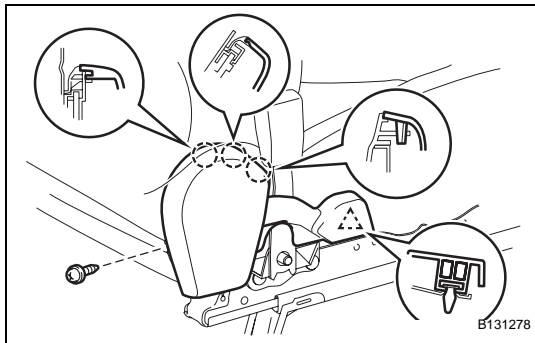

5. REMOVE FRONT SEAT CUSHION INNER SHIELD LH


- (a) Remove the screw.
- (b) Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

- (c) Using a clip remover, detach the clip and remove the inner shield.

6. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH (See page [SB-22](#))

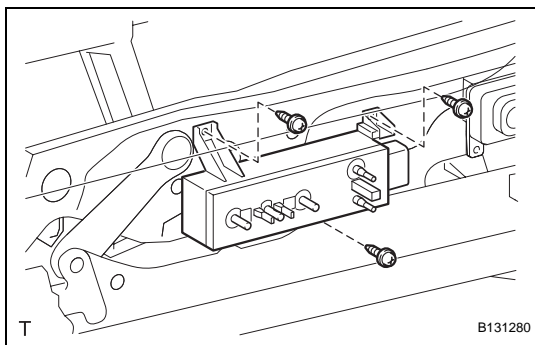


7. REMOVE FRONT POWER SEAT SWITCH

- (a) Remove the 3 screws.
- (b) Disconnect the connector and remove the switch.

8. REMOVE FRONT SEAT CUSHION COVER


- (a) w/ Seat Heater System:
Disconnect the connector.

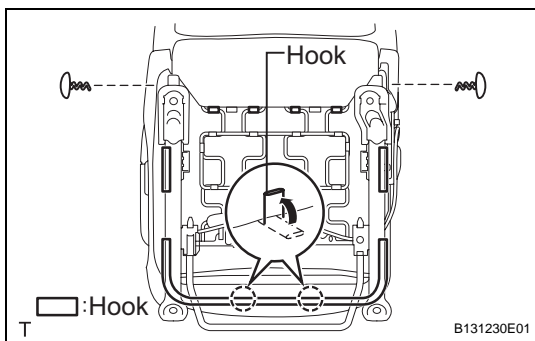


- (b) Using a clip remover, remove the 2 clips.
- (c) Detach the 2 hooks on the seat cushion front side.
- (d) Using a screwdriver, detach the hooks and remove the seat cushion cover (with pad).

HINT:

Tape the screwdriver tip before use.

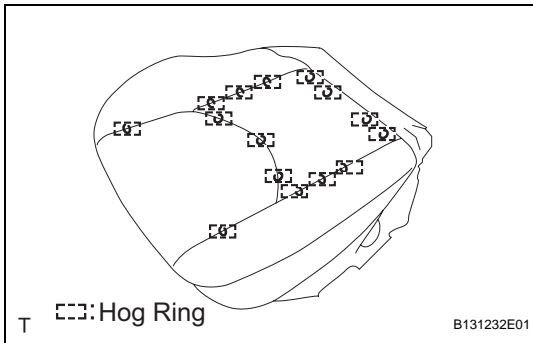

- (e) Remove the 15 hog rings and seat cushion cover from the seat cushion pad.

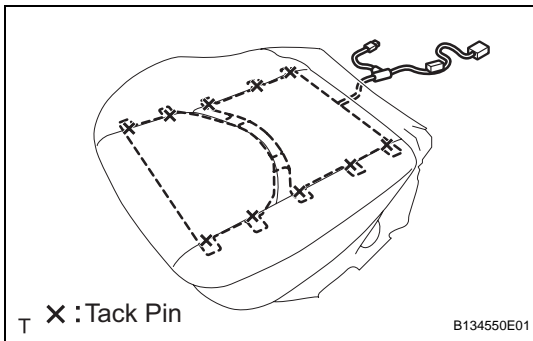


9. REMOVE FRONT SEAT CUSHION HEATER (w/ Seat Heater System)

- (a) Cut off the 10 tack pins which fasten the seat heater, and then remove the seat cushion heater from the seat cushion cover.


NOTICE:

Be careful not to damage the seat cushion cover and seat heater.

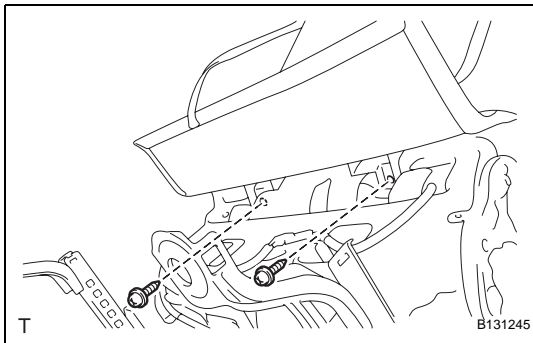


10. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH

- (a) Open the lower part of the seatback board. Then remove the 2 screws.

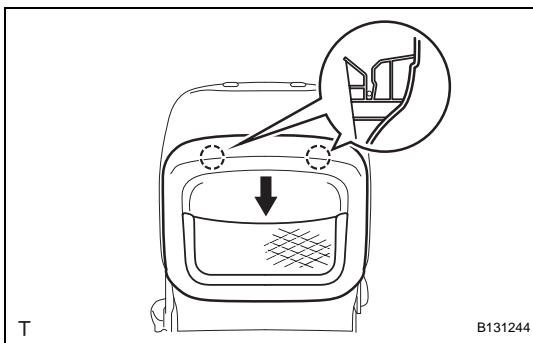

- (b) Pull the seatback board in the direction indicated by the arrow in the illustration to detach the 2 claws. Then, remove the seatback board.

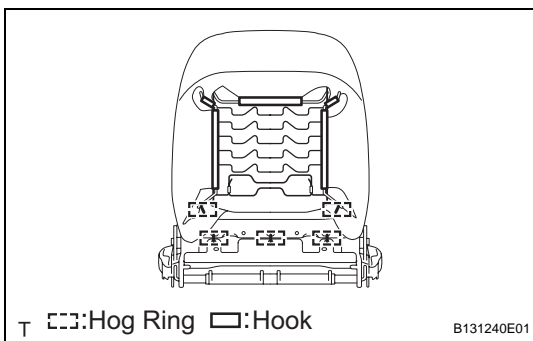


11. REMOVE FRONT SEATBACK COVER

- (a) Remove the 5 hog rings.
(b) Using a screwdriver, detach the hooks.


HINT:

Tape the screwdriver tip before use.


SE

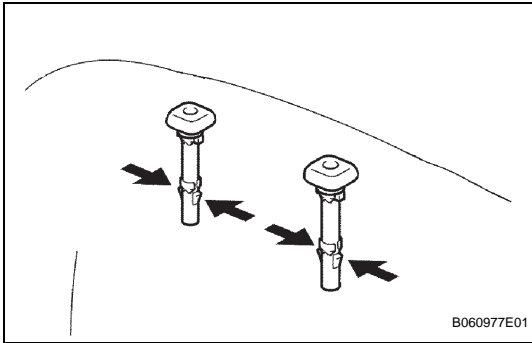


- (c) Detach the 4 claws and remove the 2 headrest supports.

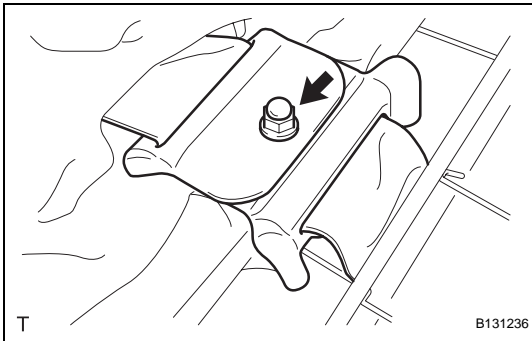

- (d) w/ Front Seat Side Airbag:
Remove the nut and move the 2 seatback cover brackets.
- (e) Remove the seatback cover (with pad) from the seat frame (with adjuster).

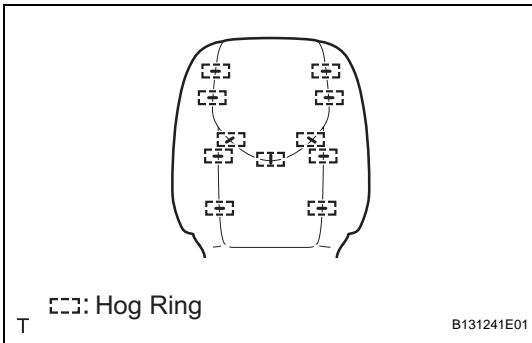

- (f) Remove the 11 hog rings and seatback cover from the seatback pad.

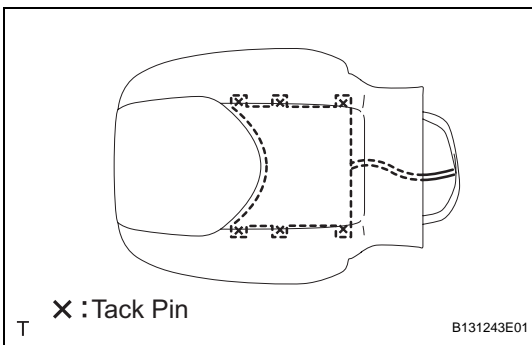

12. REMOVE FRONT SEATBACK HEATER (w/ Seat Heater System)

- (a) Cut off the 6 tack pins which fasten the seat heater, and then remove the seat cushion heater from the seat cushion cover.

NOTICE:

Be careful not to damage the seat cushion cover and seat heater.


13. REMOVE RECLINING ADJUSTER LOWER INSIDE COVER LH


- (a) Remove the 2 screws.
- (b) Detach the claw and remove the inside cover.

14. REMOVE RECLINING ADJUSTER LOWER INSIDE COVER RH

HINT:

Use the same procedures described for the LH side.

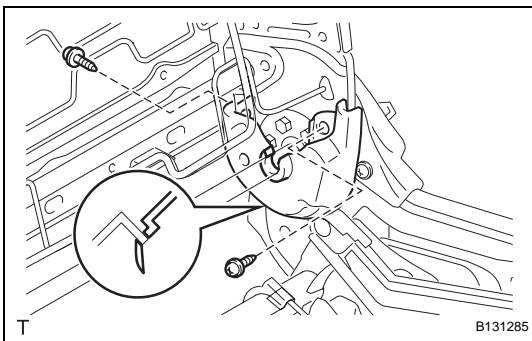


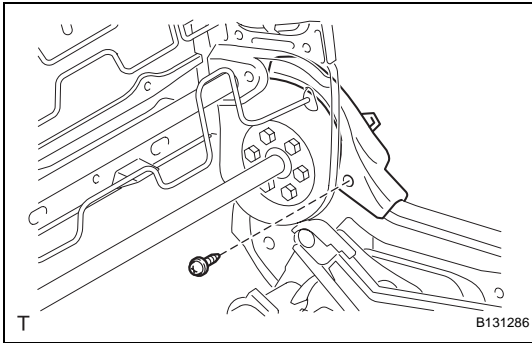**15. REMOVE RECLINING ADJUSTER UPPER INSIDE COVER LH**

- (a) Remove the screw and inside cover.

16. REMOVE RECLINING ADJUSTER UPPER INSIDE COVER RH

- (a) Remove the screw and inside cover.

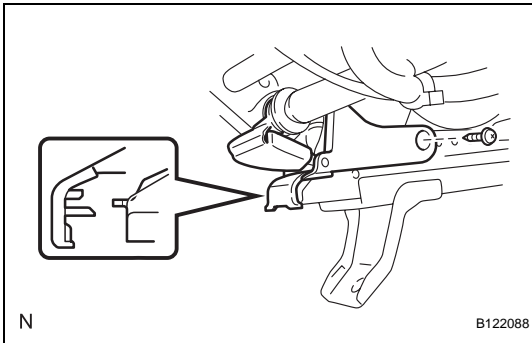
**17. REMOVE FRONT SEAT CUSHION LOWER SHIELD LH**

- (a) Remove the screw.
(b) Detach the hook of the lower shield and remove the lower shield.

18. REMOVE FRONT SEAT CUSHION LOWER SHIELD RH

HINT:

Use the same procedures described for the LH side.

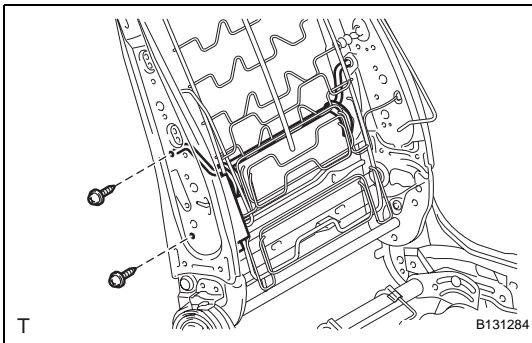**19. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY**

- (a) Disconnect the connector.
(b) Remove the 2 screws and lumbar support adjuster.

20. REMOVE SEAT POSITION AIRBAG SENSOR (See page [RS-390](#))**21. REMOVE FRONT SEAT WIRE**