



FRONT SEATBACK HEATER

INSPECTION

1. INSPECT FRONT SEATBACK HEATER ASSEMBLY LH

- (a) Measure the resistance of the seatback heater.

Standard resistance

| Tester Connection | Condition | Specified Condition |
|-------------------|---|---------------------|
| 1 - 2 | Seatback heater temperature 20°C (68°F) | Approx. 6.21 Ω |

If the result is not as specified, replace the seatback heater assembly.

2. INSPECT FRONT SEATBACK HEATER ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.