
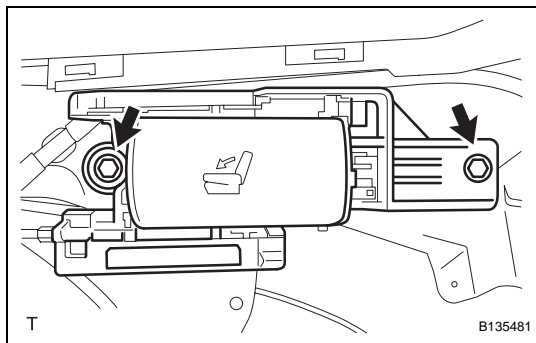
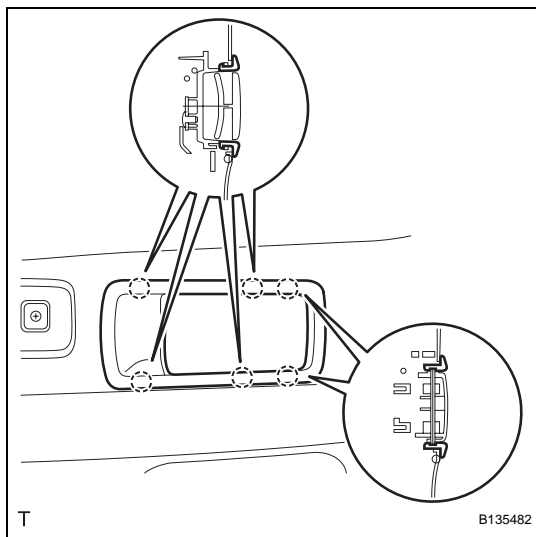


REMOVAL

1. REMOVE PACKAGE TRAY TRIM POCKET SUB-ASSEMBLY (w/o Rear No. 2 Seat)
2. REMOVE TONNEAU COVER ASSEMBLY (w/o Rear No. 2 Seat)
3. REMOVE REAR FLOOR NO. 1 BOARD (w/o Rear No. 2 Seat)
4. REMOVE DECK BOARD ASSEMBLY (w/o Rear No. 2 Seat)
5. REMOVE REAR FLOOR NO. 3 BOARD (w/o Rear No. 2 Seat)
6. REMOVE REAR FLOOR NO. 2 BOARD (w/o Rear No. 2 Seat)
7. REMOVE REAR FLOOR NO. 1 MAT SUPPORT SIDE PLATE (w/o Rear No. 2 Seat) (See page [IR-31](#))
8. REMOVE BACK DOOR WEATHERSTRIP (w/o Rear No. 2 Seat)
9. REMOVE REAR FLOOR FINISH PLATE (w/o Rear No. 2 Seat) (See page [IR-31](#))
10. REMOVE RECLINING REMOTE CONTROL LEVER BEZEL RH (w/o Rear No. 2 Seat)
 - (a) Using a screwdriver, detach the 6 claws and remove the bezel.HINT:
Tape the screwdriver tip before use.
11. REMOVE TETHER ANCHOR BRACKET SUB-ASSEMBLY (w/o Rear No. 2 Seat) (See page [IR-32](#))
12. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH (w/o Rear No. 2 Seat) (See page [IR-33](#))

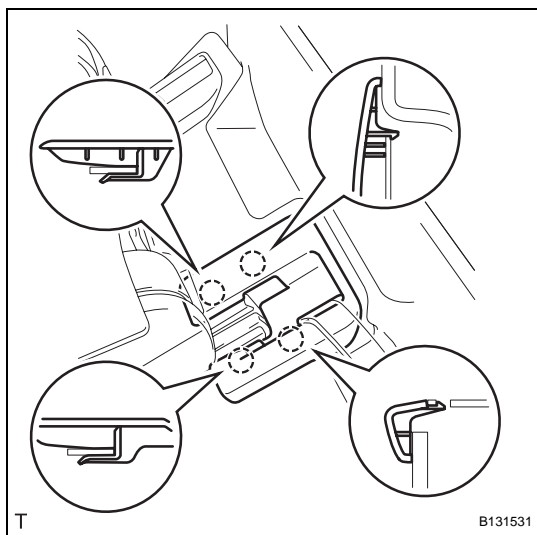

13. REMOVE RECLINING REMOTE CONTROL LEVER SUB-ASSEMBLY RH (w/o Rear No. 2 Seat)
 - (a) Remove the 2 bolts and lever.
 - (b) Disconnect the rear No. 1 seat lock cable from the lever.


**14. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/ Rear No. 2 Seat)**

- (a) Using a screwdriver, detach the 4 claws and remove the side cover.

HINT:

Tape the screwdriver tip before use.


SE

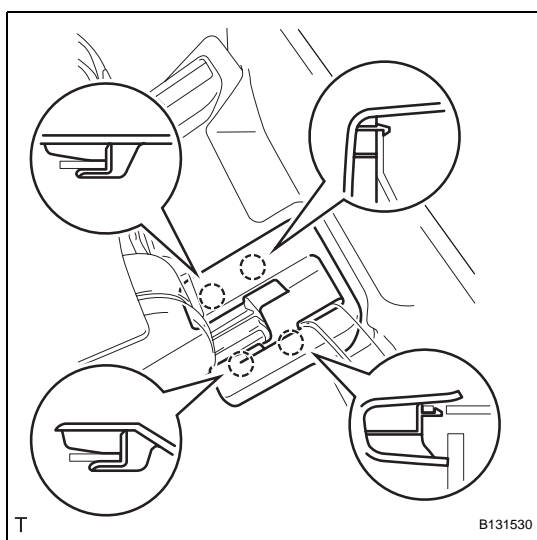**15. REMOVE REAR NO. 3 SEAT LEG SIDE COVER (w/o Rear No. 2 Seat)**

- (a) Using a screwdriver, detach the 4 claws and remove the side cover.

HINT:


Tape the screwdriver tip before use.

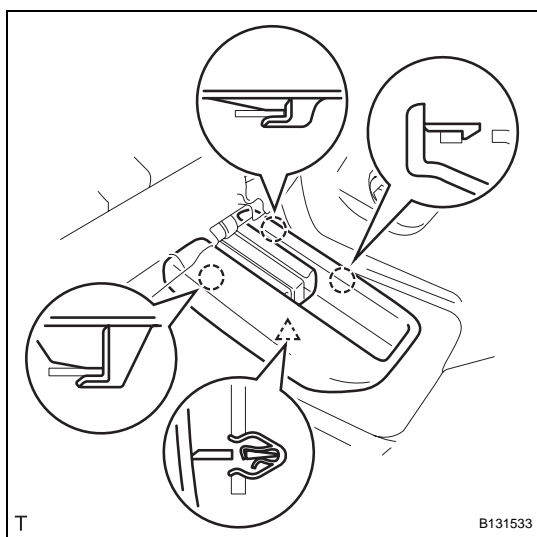**16. REMOVE REAR NO. 2 SEAT LEG SIDE COVER**

- (a) Using a screwdriver, detach the 3 claws and clip, and remove the side cover.

HINT:

Tape the screwdriver tip before use.

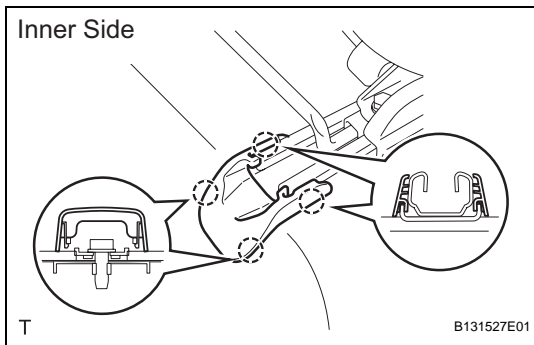**17. REMOVE REAR SEAT LEG COVER**


- (a) Using a screwdriver, detach the 8 claws and remove the 2 leg covers.


HINT:

Tape the screwdriver tip before use.


18. REMOVE REAR NO. 1 SEAT LOCK CABLE ASSEMBLY (w/o Rear No. 2 Seat)

- (a) Disconnect the lock cable from the seat.
(1) Raise the adjuster's lock piece to release the lock.

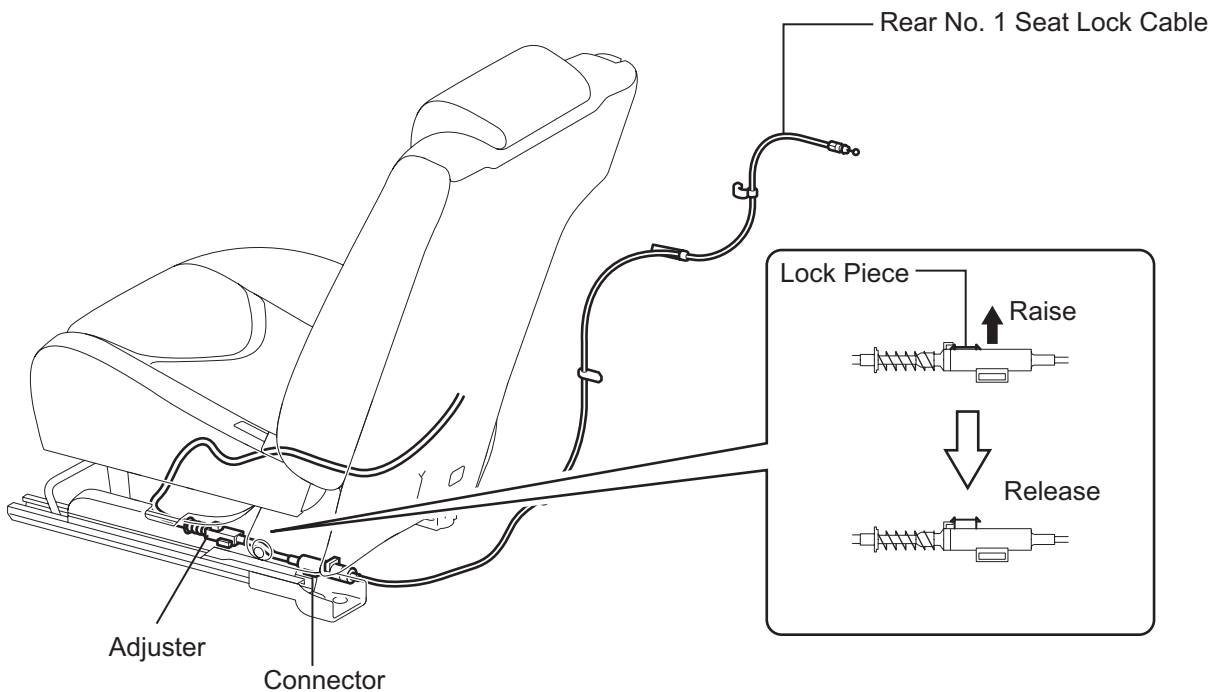


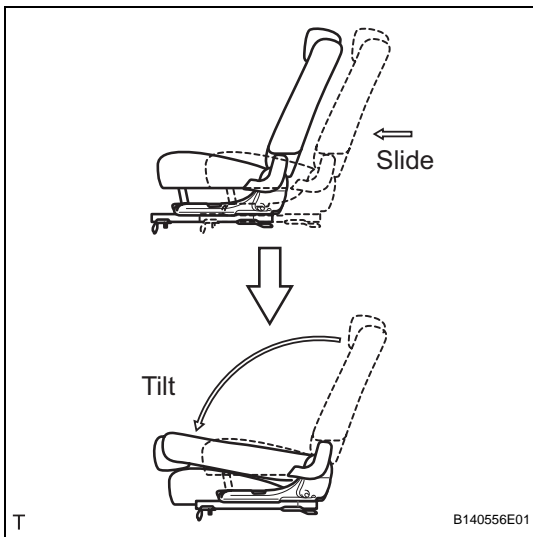


- (2) Slide the seat forward and tilt the seatback forward.

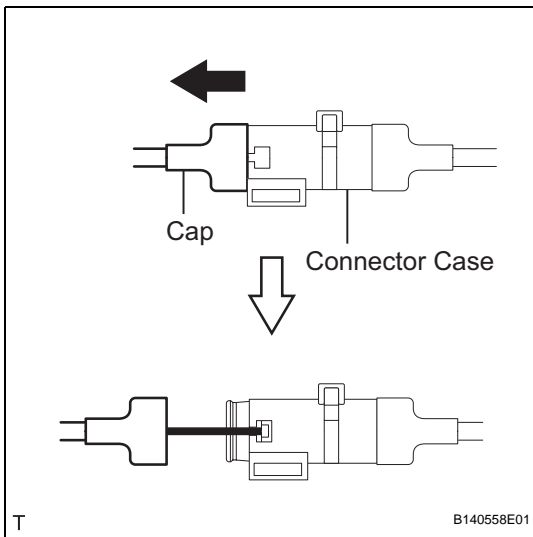


- (3) Remove the seat's cap from the connector case.

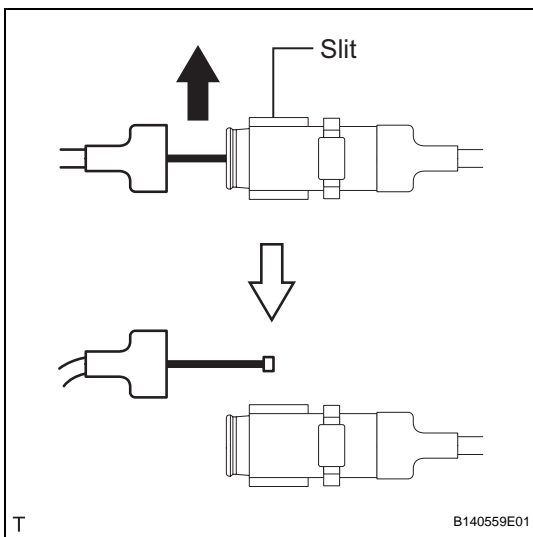

- (4) Pull the seat's cap toward the outside of the vehicle. Then remove the cable from the connector case's slit.

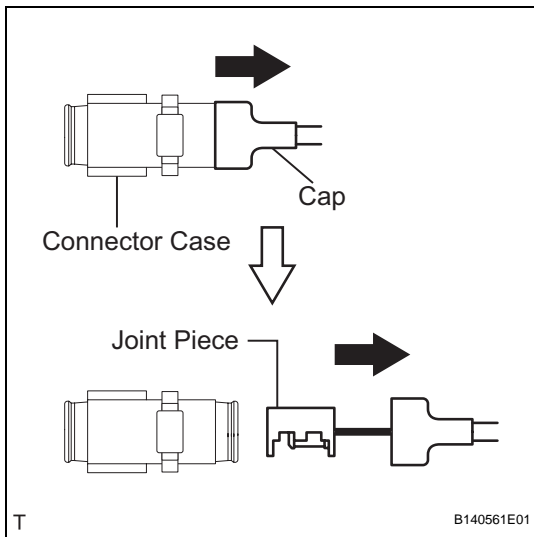


- (5) Remove the body's cap from the connector case.
- (b) Detach the clamps and remove the lock cable.

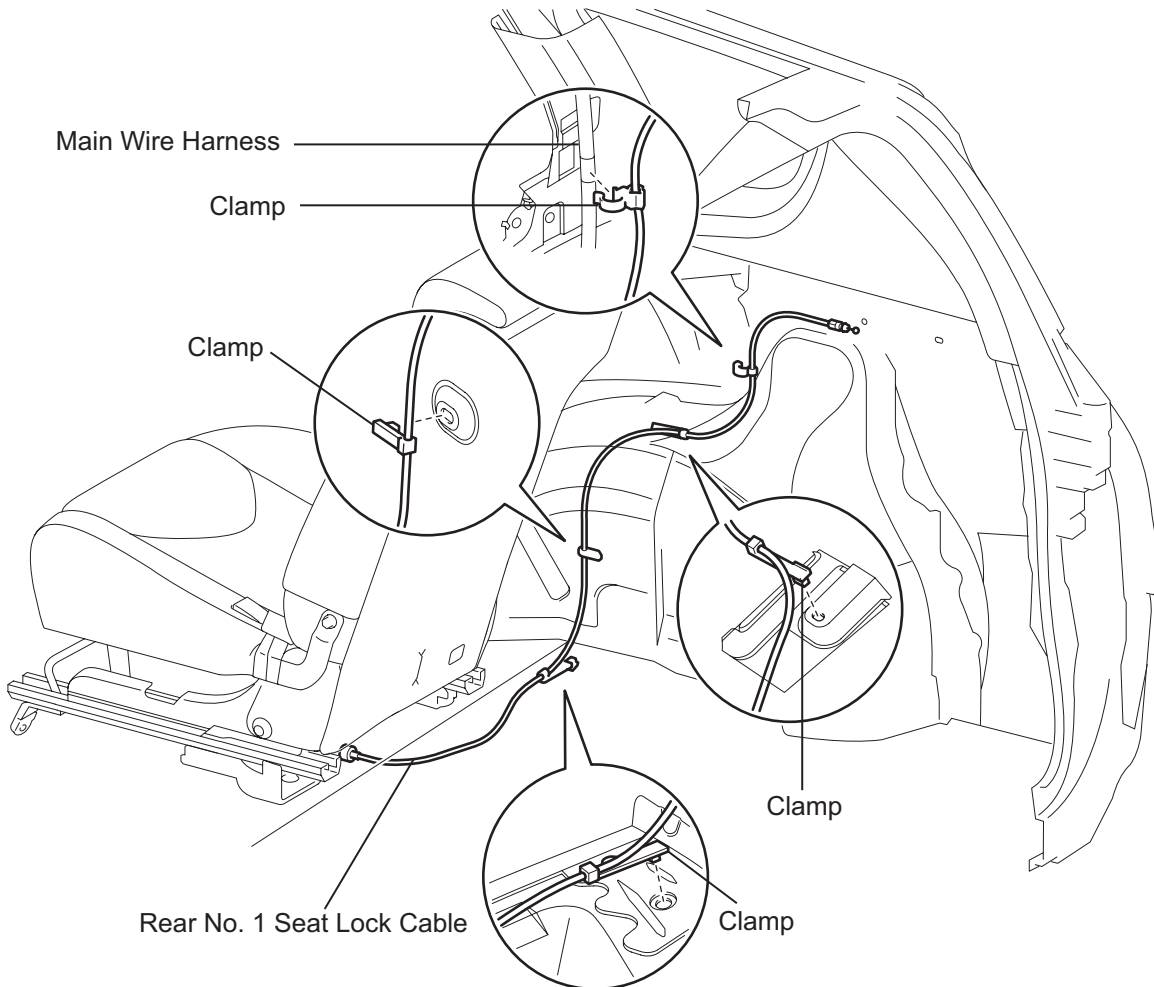


19. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

- (a) Lift up the seat track adjusting handle and move the seat to the rearmost position.

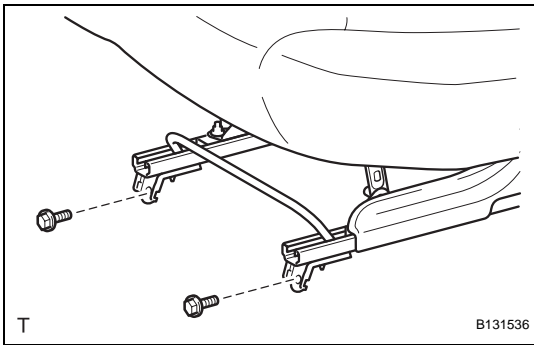

- (b) Remove the 2 bolts on the front side of the seat.
- (c) Lift up the seat track adjusting handle and move the seat to the foremost position.

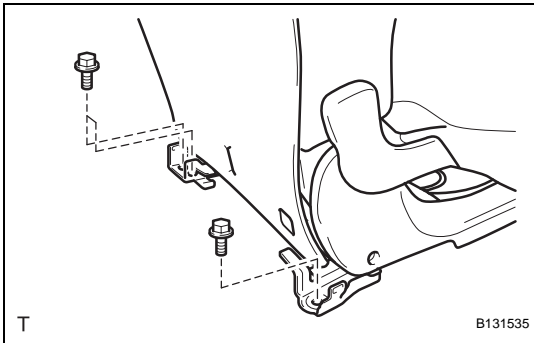

- (d) Remove the 3 bolts on the rear side of the seat.
- (e) Lift up the seat track adjusting handle and move the seat to the center position. Then remove the seat.

NOTICE:

Be careful not to damage the vehicle body,