

SE

DISASSEMBLY

CAUTION:

Wear protective gloves. Sharp areas on the seatback frame, seat cushion frame and reclining adjuster may injure your hands.

1. REMOVE REAR SEAT HEADREST ASSEMBLY

2. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER

- Return the seatback to the upright position.
- Using a screwdriver, detach the 5 claws and remove the hinge cover.

HINT:

Tape the screwdriver tip before use.

3. REMOVE REAR NO. 1 SEAT CUSHION HINGE COVER

HINT:




Use the same procedures described for the rear No. 2 seat cushion hinge cover.


4. REMOVE REAR SEAT INNER BELT ASSEMBLY RH (See page [SB-40](#))

5. REMOVE REAR NO. 1 SEAT CUSHION ASSEMBLY RH


- Disconnect the rubber band of the seatback cover from the seat cushion frame.
- Remove the 2 bolts.

- Remove the 2 bolts, 2 bushes and cushion.

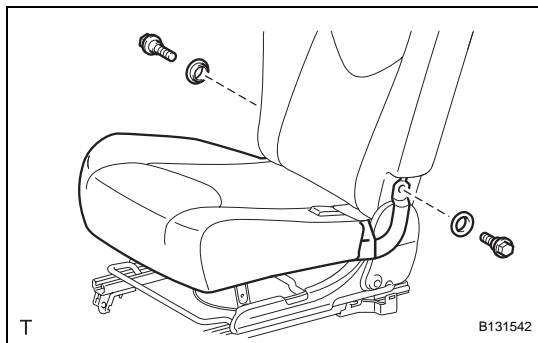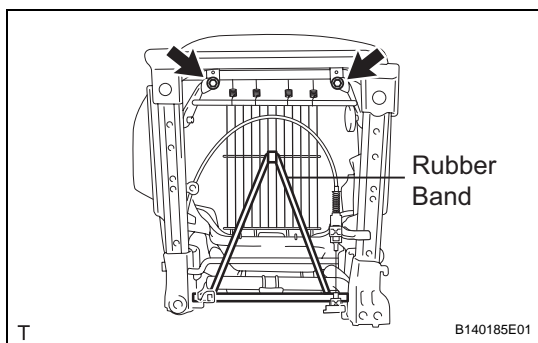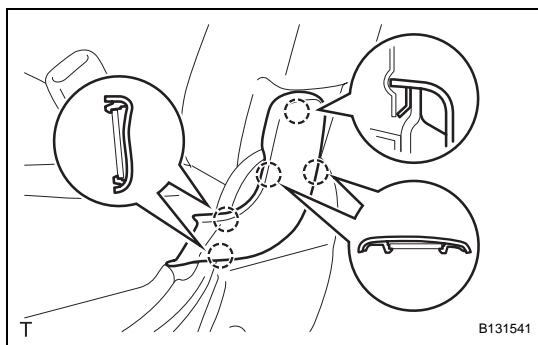


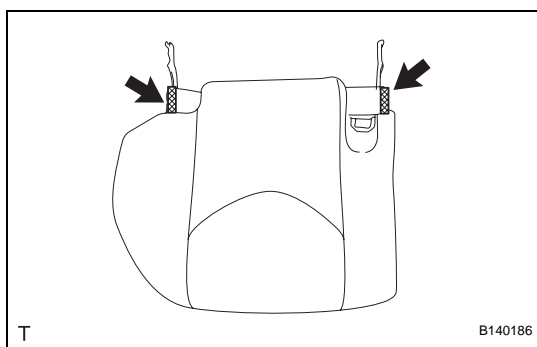**6. REMOVE REAR NO. 1 SEAT CUSHION COVER**


(a) Detach the 2 hooks.

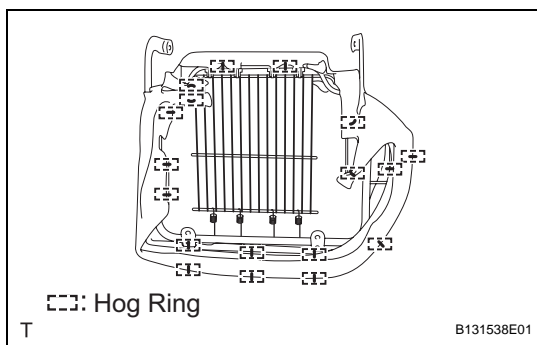

(b) Remove the 18 hog rings and seat cushion cover (with pad) from the seat cushion frame.

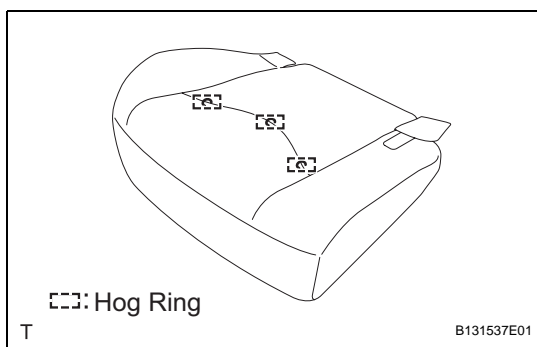

(c) Remove the 3 hog rings and seat cushion cover from the seat cushion pad.

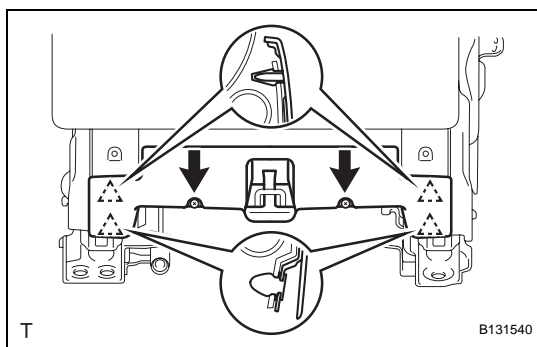
**7. REMOVE REAR SEAT REAR BRACKET COVER RH**

(a) Open the lower part of the seatback cover. Then remove the 2 screws.

(b) Using a screwdriver, detach the 4 clips and remove the bracket cover.

HINT:

Tape the screwdriver tip before use.

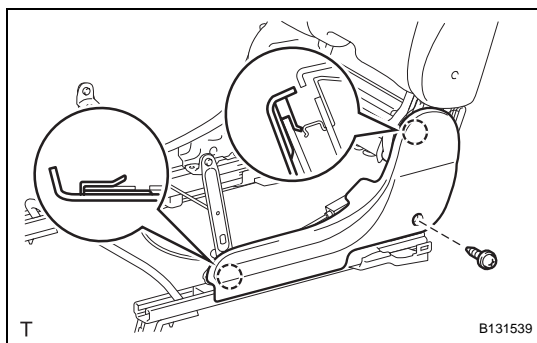**8. REMOVE REAR SEAT CUSHION REAR MOULDING RH**

(a) Remove the screw.


(b) Detach the 2 claws and remove the moulding.

9. REMOVE REAR SEAT CUSHION MOULDING RH


HINT:

Use the same procedures described for the rear seat cushion rear moulding RH.

SE

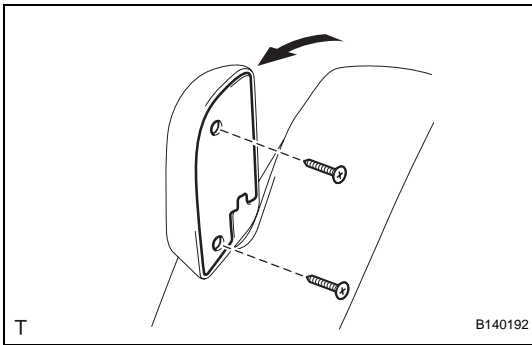**10. REMOVE REAR SEAT RECLINING RELEASE LEVER (w/o Rear No. 2 Seat)**


- (a) Pull the reclining control lever to reveal the 2 screws. Then remove the 2 screw and cover.

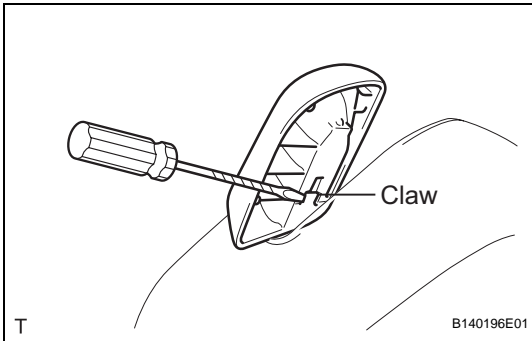


- (b) Using a screwdriver, detach the claw and remove the release lever.

HINT:

Tape the screwdriver tip before use.

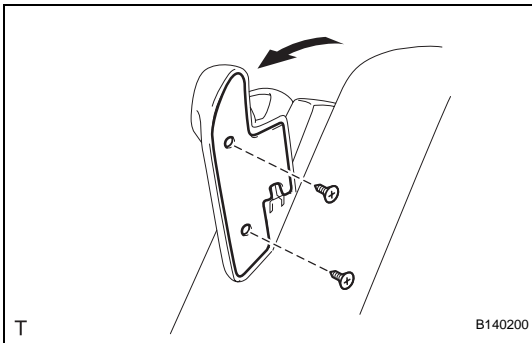**11. REMOVE REAR SEAT RECLINING RELEASE LEVER (w/ Rear No. 2 Seat)**


- (a) Pull the reclining control lever to reveal the 2 screws. Then remove the 2 screw and cover.

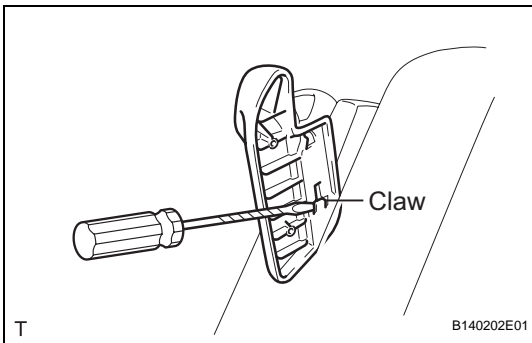


- (b) Using a screwdriver, detach the claw and remove the release lever.

HINT:

Tape the screwdriver tip before use.

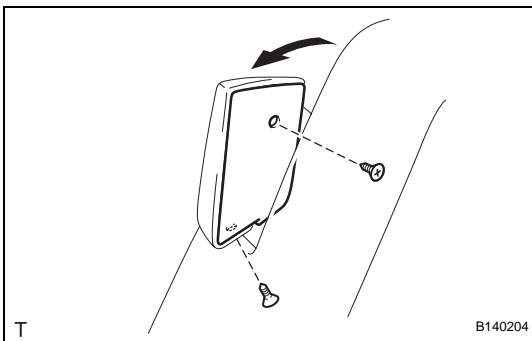**12. REMOVE REAR SEAT RECLINING CONTROL LEVER (w/ Rear No. 2 Seat)**


- (a) Pull the reclining control lever to reveal the 2 screws. Then remove the 2 screw and cover.

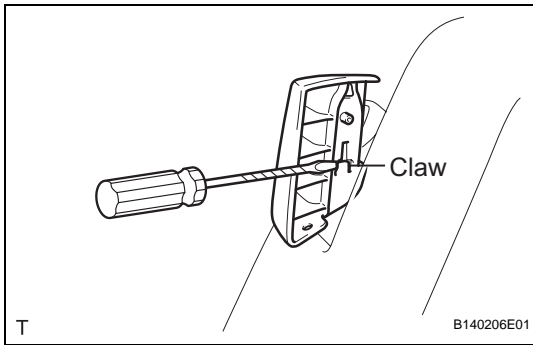

- (b) Using a screwdriver, detach the claw and remove the control lever.

HINT:

Tape the screwdriver tip before use.

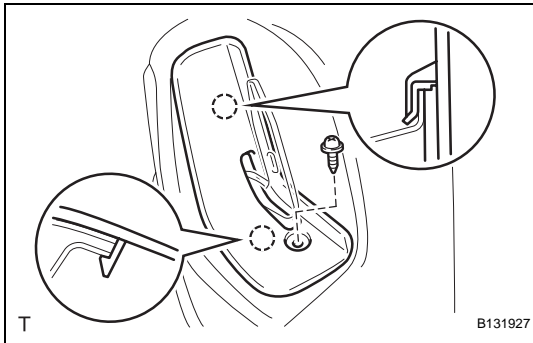


13. REMOVE REAR SEATBACK LOCK CONTROL LEVER BASE RH (w/o Rear No. 2 Seat)

- (a) Remove the screw.
(b) Using a screwdriver, detach the 2 claws and remove the lever base.

HINT:

Tape the screwdriver tip before use.

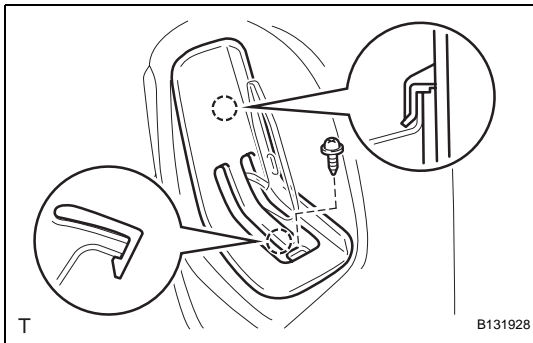


14. REMOVE REAR SEATBACK LOCK CONTROL LEVER BASE RH (w/ Rear No. 2 Seat)

- (a) Remove the screw.
(b) Using a screwdriver, detach the 2 claws and remove the lever base.


HINT:

Tape the screwdriver tip before use.

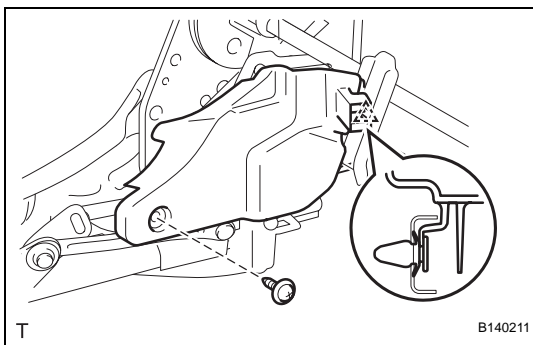

15. REMOVE REAR SEAT RECLINING INNER PROTECTOR RH (w/ Rear No. 2 Seat)


- (a) Remove the screw.
(b) Detach the clip and remove the inner protector.

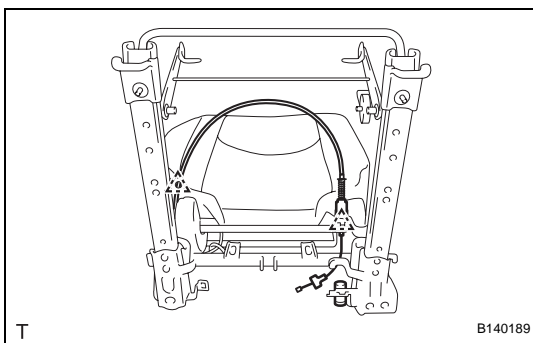


16. REMOVE REAR NO. 1 SEATBACK ASSEMBLY RH (w/o Rear No. 2 Seat)

- (a) Detach the 2 clamps and disconnect the cable from the reclining adjuster.

SE

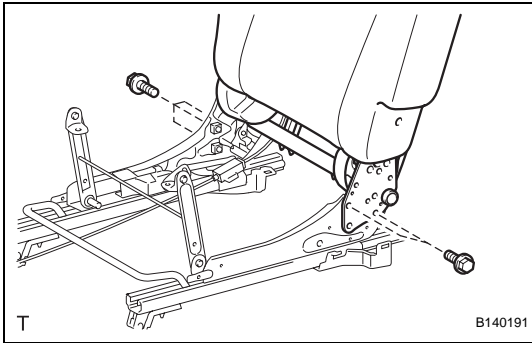


- (b) Remove the 5 bolts and the seatback.

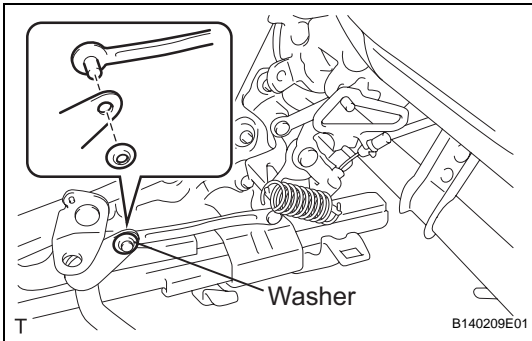


17. REMOVE REAR NO. 1 SEATBACK ASSEMBLY RH (w/ Rear No. 2 Seat)

- (a) Using a screwdriver, remove the washer and disconnect the W/I unit from the reclining adjuster.

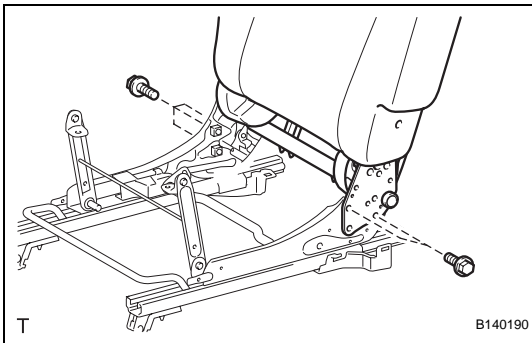

- (b) Remove the 5 bolts and the seatback.

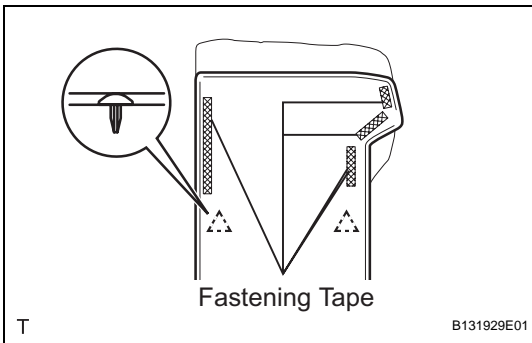


18. REMOVE REAR SEATBACK PROTECTOR


- (a) Using a clip remover, detach the 5 clips and open the fastening tape.

NOTICE:


If clips are damaged during removal, replace them.

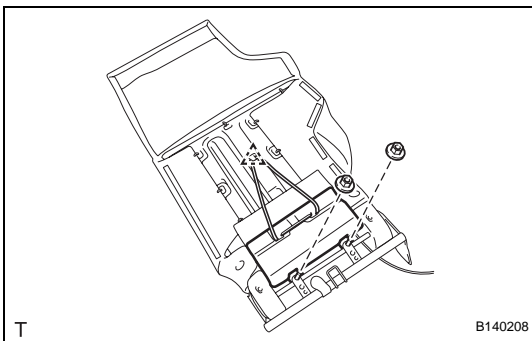

- (b) Detach the clip.
(c) Remove the 2 nuts and protector.

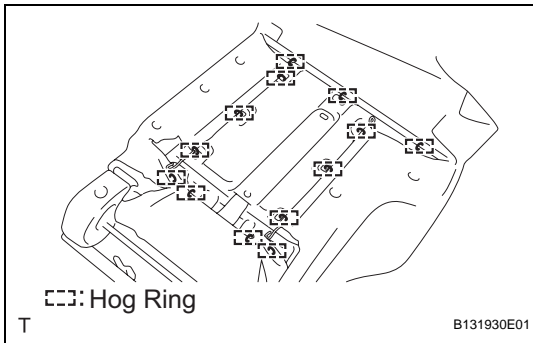
**19. REMOVE REAR NO. 1 SEATBACK COVER**

- (a) Remove the 13 hog rings.

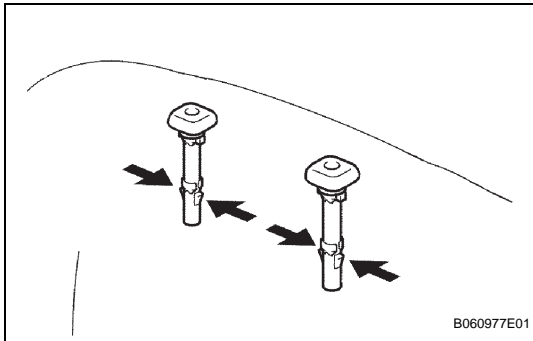


- (b) Detach the 4 claws and remove the 2 headrest supports.

- (c) Remove the seatback cover (with pad) from the seatback frame.

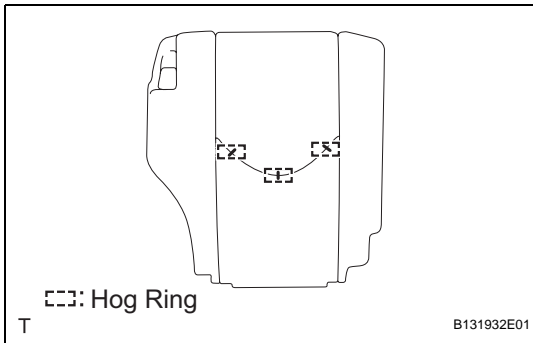


- (d) Remove the 3 hog rings and seatback cover from the seatback pad.

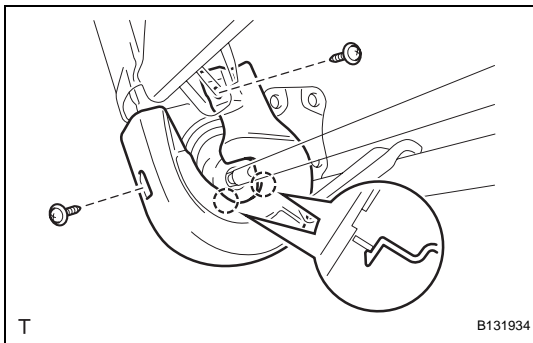**20. REMOVE REAR SEATBACK COVER RH**

- (a) Remove the 2 screws.
- (b) Using a screwdriver, detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

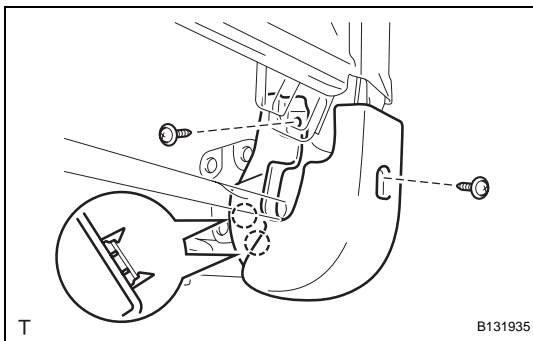**21. REMOVE REAR SEAT COVER (w/o Rear No. 2 Seat)**

- (a) Remove the 2 screws.
- (b) Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

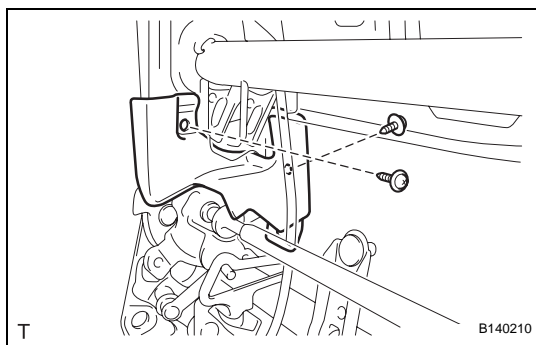**22. REMOVE REAR SEAT COVER (w/ Rear No. 2 Seat)**

- (a) Remove the 2 screws and cover.