

## PROBLEM SYMPTOMS TABLE

### HINT:


- Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.
- Proceed to the troubleshooting procedures for each circuit in the table below.

### Airbag system

Symptom	Suspected area	See page
1. The SRS warning light goes off after the primary check, but comes back on.	SRS Warning Light Remains ON	<a href="#">RS-226</a>
2. With the ignition switch ON, the SRS warning light sometimes comes back on.	SRS Warning Light Remains ON	<a href="#">RS-226</a>
3. The SRS warning light always comes on even when DTC is not output.	SRS Warning Light Remains ON	<a href="#">RS-226</a>
1. With the ignition switch ON, the SRS warning light does not come on.	SRS Warning Light does not Come On	<a href="#">RS-230</a>
1. Although an SRS warning light operates normally, DTC is output.	TC and CG Terminal Circuit	<a href="#">RS-233</a>
2. Although terminals TC and CG of DLC3 are not connected, DTC is output.	TC and CG Terminal Circuit	<a href="#">RS-233</a>

## TERMINALS OF ECU

### 1. CENTER AIRBAG SENSOR ASSEMBLY (w/ Curtain Shield Airbag)

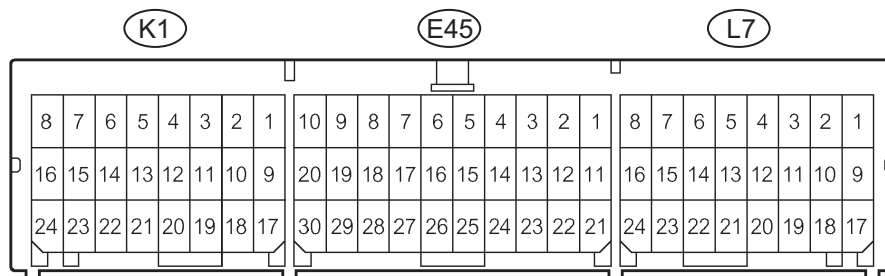

H


C109532E05

Terminal No.	Terminal Symbol	Destination
K1-1	SFD+	Front seat side airbag assembly LH (Side squib LH)
K1-2	SFD-	Front seat side airbag assembly LH (Side squib LH)
K1-3	ICD-	Curtain shield airbag assembly LH (Driver side curtain shield squib)
K1-4	ICD+	Curtain shield airbag assembly LH (Driver side curtain shield squib)
K1-5	PD+	Front seat outer belt assembly LH (Driver side pretensioner squib)
K1-6	PD-	Front seat outer belt assembly LH (Driver side pretensioner squib)
K1-9	DSP+	Seat position sensor
K1-10	DBE+	Front seat inner belt assembly LH
K1-17	DSP-	Seat position sensor
K1-18	DBE-	Front seat inner belt assembly LH
K1-23	BBD-	Side airbag sensor LH
K1-24	BBD+	Side airbag sensor LH
E45-1	P2+	Front passenger airbag (Front passenger side squib 2nd step)
E45-2	P2-	Front passenger airbag (Front passenger side squib 2nd step)
E45-3	P-	Front passenger airbag (Front passenger side squib)
E45-4	P+	Front passenger airbag (Front passenger side squib)
E45-5	D+	Steering pad (Driver side squib)
E45-6	D-	Steering pad (Driver side squib)

Terminal No.	Terminal Symbol	Destination
E45-7	D2-	Steering pad (Driver side squib 2nd step)
E45-8	D2+	Steering pad (Driver side squib 2nd step)
E45-13	CANH	CAN
E45-16	SIL	DLC3
E45-17	P-AB	Front passenger seat belt warning light (Passenger airbag ON/OFF indicator)
E45-21	IG2	IGN fuse
E45-22	CANL	CAN
E45-23	PAON	Front passenger seat belt warning light (Passenger airbag ON/OFF indicator)
E45-25	E1	Ground
E45-26	E2	Ground
E45-27	-SR	Front airbag sensor RH
E45-28	-SL	Front airbag sensor LH
E45-29	+SR	Front airbag sensor RH
E45-30	+SL	Front airbag sensor LH
L7-3	PP-	Front seat outer belt assembly RH (Front passenger side pretensioner squib RH)
L7-4	PP+	Front seat outer belt assembly RH (Front passenger side pretensioner squib RH)
L7-5	ICP+	Curtain shield airbag assembly RH (Curtain shield squib RH)
L7-6	ICP-	Curtain shield airbag assembly RH (Curtain shield squib RH)
L7-7	SFP-	Front seat side airbag assembly RH (Side squib RH)
L7-8	SFP+	Front seat side airbag assembly RH (Side squib RH)
L7-16	FSP+	Occupant classification ECU
L7-17	BBP+	Side airbag sensor RH
L7-18	BBP-	Side airbag sensor RH
L7-24	FSP-	Occupant classification ECU

RS

**2. CENTER AIRBAG SENSOR ASSEMBLY (w/o Curtain Shield Airbag)**

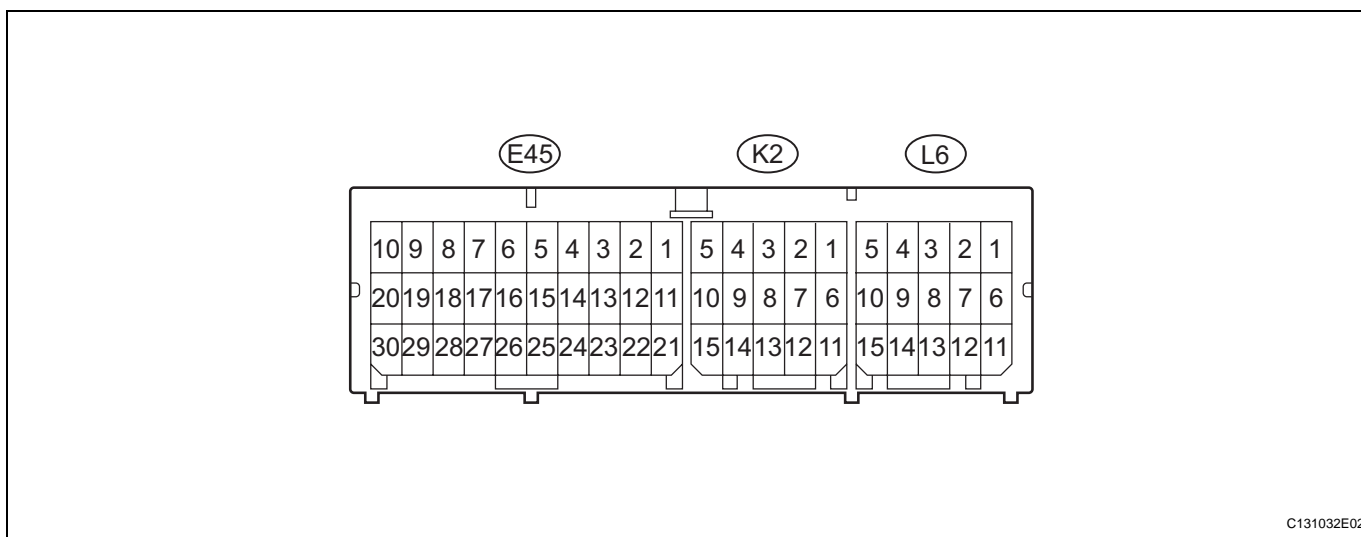

Terminal No.	Terminal Symbol	Destination
E45-1	P2+	Front passenger airbag (Front passenger side squib 2nd step)
E45-2	P2-	Front passenger airbag (Front passenger side squib 2nd step)
E45-3	P-	Front passenger airbag (Front passenger side squib)
E45-4	P+	Front passenger airbag (Front passenger side squib)
E45-5	D+	Steering pad (Driver side squib)
E45-6	D-	Steering pad (Driver side squib)
E45-7	D2-	Steering pad (Driver side squib 2nd step)
E45-8	D2+	Steering pad (Driver side squib 2nd step)
E45-13	CANH	CAN
E45-16	SIL	DLC3
E45-17	P-AB	Front passenger seat belt warning light (Passenger airbag ON/OFF indicator)
E45-21	IG2	IGN fuse
E45-22	CANL	CAN
E45-23	PAON	Front passenger seat belt warning light (Passenger airbag ON/OFF indicator)
E45-25	E1	Ground
E45-26	E2	Ground
E45-27	-SR	Front airbag sensor RH
E45-28	-SL	Front airbag sensor LH
E45-29	+SR	Front airbag sensor RH
E45-30	+SL	Front airbag sensor LH
K2-1	PD-	Front seat outer belt assembly LH (Driver side pretensioner squib)
K2-2	PD+	Front seat outer belt assembly LH (Driver side pretensioner squib)
K2-11	DBE+	Front seat inner belt assembly LH
K2-12	DBE-	Front seat inner belt assembly LH
K2-13	DSP-	Seat position sensor
K2-14	DSP+	Seat position sensor
L6-4	PP+	Front seat outer belt assembly RH (Front passenger side pretensioner squib RH)
L6-5	PP-	Front seat outer belt assembly RH (Front passenger side pretensioner squib RH)
L6-12	FSP+	Occupant classification ECU
L6-13	FSP-	Occupant classification ECU