



# CURTAIN SHIELD AIRBAG ASSEMBLY

## COMPONENTS

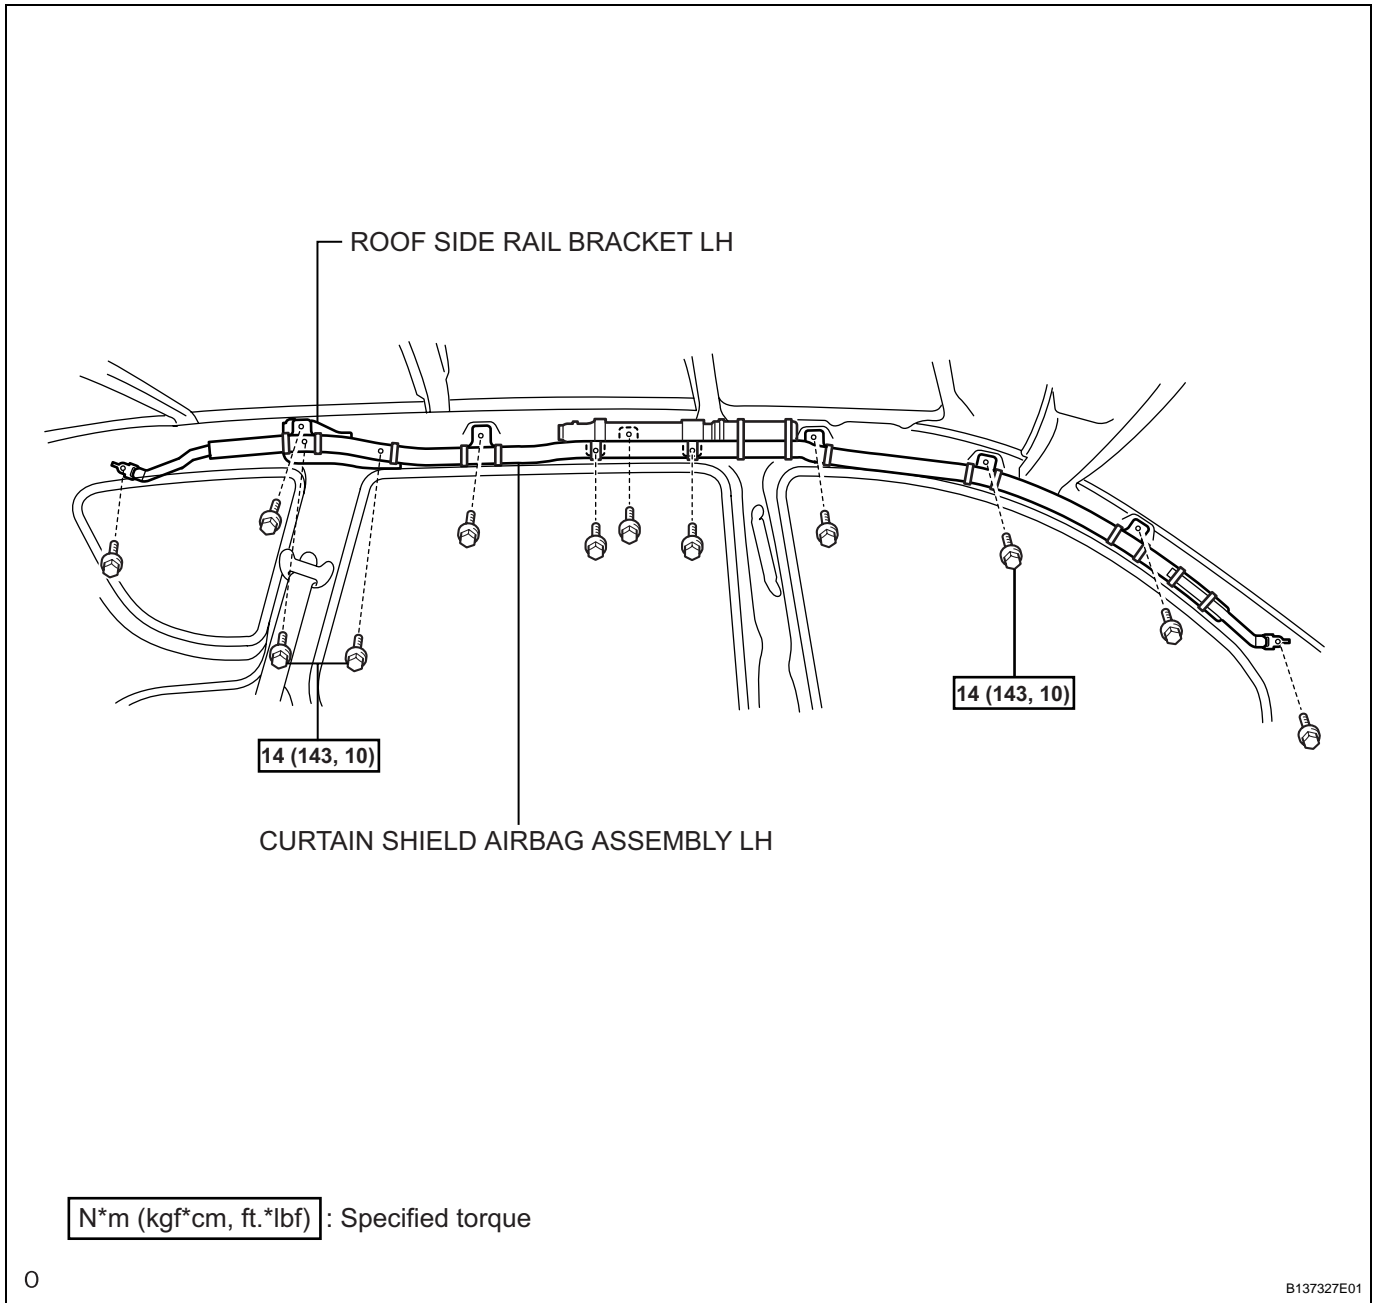

RS

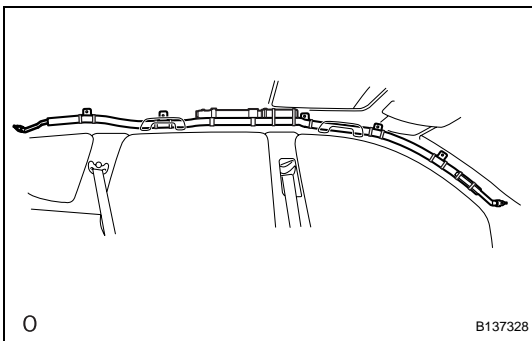

## ON-VEHICLE INSPECTION

### 1. CHECK CURTAIN SHIELD AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (see page [RS-49](#)).
- (b) With the curtain shield airbag assembly installed on the vehicle, perform a visual check. If any of the defects mentioned below are present, replace the curtain shield airbag with a new one:
  - Cuts, minute cracks or marked discoloration on the curtain shield airbag assembly.

If any of the defects mentioned above are present, replace the curtain shield airbag with a new one.

**CAUTION:**

**For removal and installation of the curtain shield airbag, be sure to follow the correct procedure.**

**2. CHECK CURTAIN SHIELD AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)**

(a) Perform a diagnostic system check (see page [RS-49](#)).

(b) With the curtain shield airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the curtain shield airbag with a new one:

- Cuts, minute cracks or marked discoloration on the curtain shield airbag.
- Cracks or other damage to the connectors.

**CAUTION:**

**For removal and installation procedures of the curtain shield airbag, be sure to follow the correct procedure.**

