



FRONT PASSENGER AIRBAG ASSEMBLY

COMPONENTS


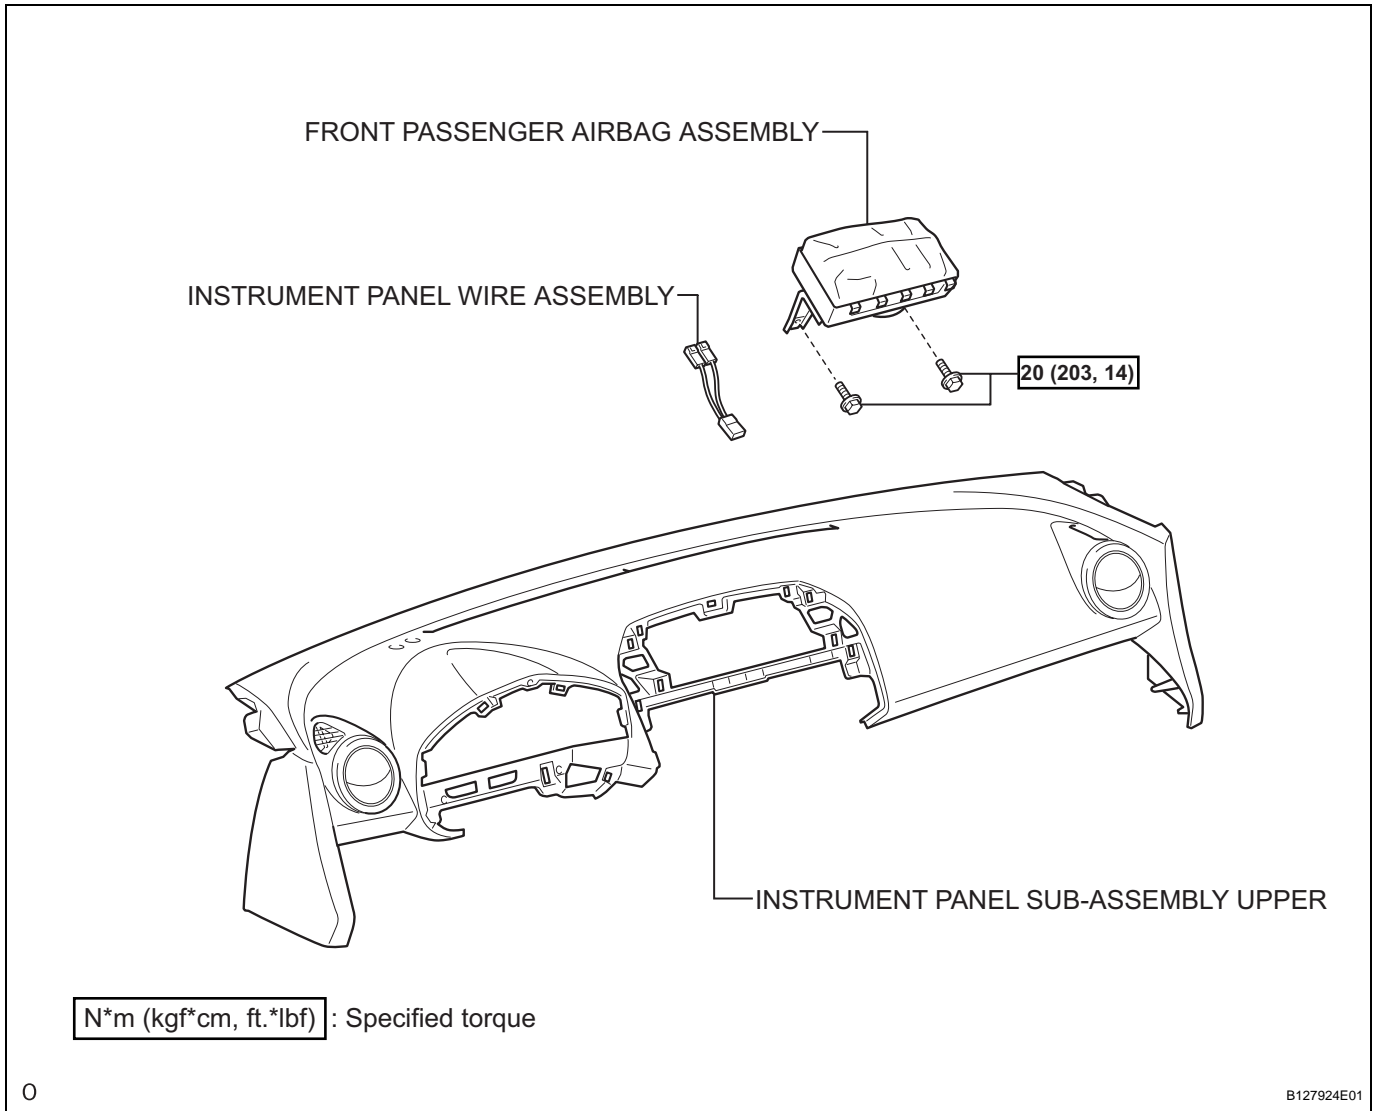


RS

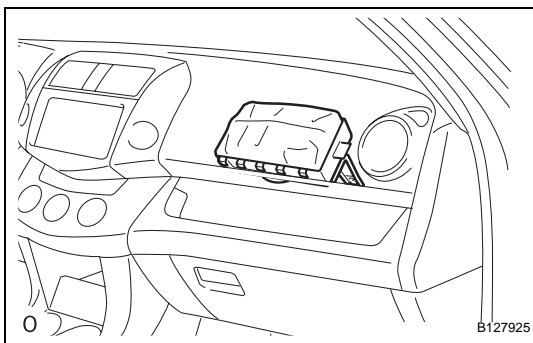

ON-VEHICLE INSPECTION

1. **CHECK FRONT PASSENGER AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION AND AIRBAG NOT DEPLOYED)**
 - (a) Perform a diagnostic system check (see page [RS-49](#)).
 - (b) With the front passenger airbag installed on the vehicle, perform a visual check:
 - Check for cuts, cracks or discoloration on the front passenger airbag surface and in the grooved portion.
 - If any of the defects mentioned above are present, replace the front passenger airbag with a new one.
- CAUTION:**
For removal and installation of the front passenger airbag, be sure to follow the correct procedures.

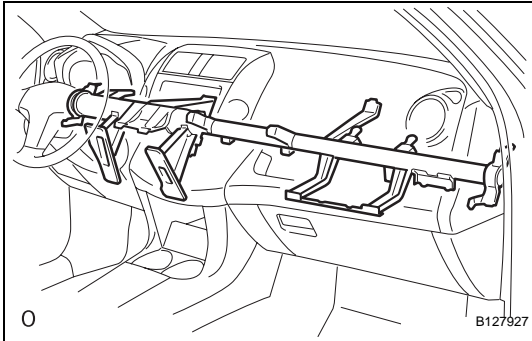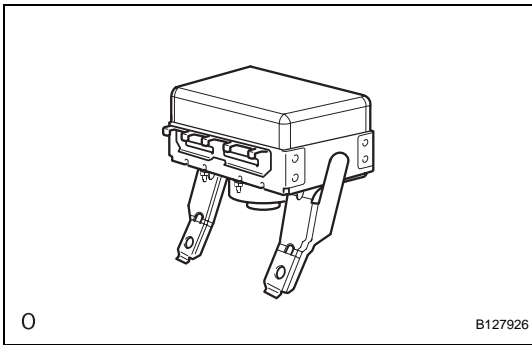

2. CHECK FRONT PASSENGER AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG NOT DEPLOYED)

- (a) Perform a diagnostic system check (see page [RS-49](#)).
- (b) With the front passenger airbag removed from the vehicle, perform a visual check:
 - Check for cuts, cracks or discoloration on the front passenger airbag.
 - Check for cracks or other damage on the connectors.
 - Check for deformation or cracks on the instrument panel and instrument panel reinforcement.

If any of the defects mentioned above are present, replace the front passenger airbag with a new one.

CAUTION:

For removal and installation of the front passenger airbag, be sure to follow the correct procedures.