

## HOW TO PROCEED WITH TROUBLESHOOTING

### HINT:

- Use the following procedures to troubleshoot the occupant classification system.
- \*: Use the intelligent tester.

**1** VEHICLE BROUGHT TO WORKSHOP

NEXT

**2** PASSENGER AIRBAG ON/OFF INDICATOR CHECK

NEXT

**3** DTC CHECK (Present and Past DTC)\*

(a) Check for DTCs (see page [RS-249](#) ).

### Result

Result	Proceed to
DTC is output.	A
DTC is not output.	B

**B**

GO TO PROBLEM SYMPTOMS TABLE

**A**

**4** DTC CHART

NEXT

**5** REPAIR OR REPLACEMENT

NEXT

**6** DTC CLEARANCE (Present and Past DTCs)\*

(a) Clear the DTCs (see page [RS-249](#) ).


NEXT

**7** DTC CHECK (Present and Past DTCs)\*

(a) Check for DTCs (see page [RS-249](#) ).

**Result**

Result	Proceed to
DTC is not output.	A
DTC is output.	B

**B**  **Go to step 5**

**A**

**8** **PROBLEM SYMPTOMS SIMULATION**

(a) Check the passenger airbag ON/OFF indicator condition (see page [RS-246](#)).

**Result**

Result	Proceed to
Passenger airbag ON/OFF indicator is operating normally.	A
Passenger airbag ON/OFF indicator (OFF) is not operating normally.	B

**B**  **Go to step 5**

**A**

**9** **CONFIRMATION TEST**

**NEXT**

**END**