

DIAGNOSTIC TROUBLE CODE CHART

If a trouble code is displayed during the DTC check, check the circuit listed for the code in the table below (proceed to the page listed for that circuit).

Occupant classification system

| DTC No. | Detection Item | Trouble Area | See page |
|---------|---|---|------------------------|
| B1771 | Passenger Side Buckle Switch Circuit Malfunction | <ol style="list-style-type: none"> Floor wire Front seat inner belt assembly (Buckle switch RH) Occupant classification ECU | RS-254 |
| B1780 | Front Occupant Classification Sensor LH Circuit Malfunction | <ol style="list-style-type: none"> Front seat wire RH Front seat assembly RH (Front occupant classification sensor RH) Occupant classification ECU | RS-260 |
| B1781 | Front Occupant Classification Sensor RH Circuit Malfunction | <ol style="list-style-type: none"> Front seat wire RH Front seat assembly RH (Front occupant classification sensor RH) Occupant classification ECU | RS-267 |
| B1782 | Rear Occupant Classification Sensor LH Circuit Malfunction | <ol style="list-style-type: none"> Front seat wire RH Front seat assembly RH (Rear occupant classification sensor LH) Occupant classification ECU | RS-274 |
| B1783 | Rear Occupant Classification Sensor RH Circuit Malfunction | <ol style="list-style-type: none"> Front seat wire RH Front seat assembly RH (Rear occupant classification sensor RH) Occupant classification ECU | RS-281 |
| B1785 | Front Occupant Classification Sensor LH Collision Detection | <ol style="list-style-type: none"> Front seat assembly RH (Front occupant classification sensor LH) Occupant classification ECU | RS-288 |
| B1786 | Front Occupant Classification Sensor RH Collision Detection | <ol style="list-style-type: none"> Front seat assembly RH (Front occupant classification sensor RH) Occupant classification ECU | RS-292 |
| B1787 | Rear Occupant Classification Sensor LH Collision Detection | <ol style="list-style-type: none"> Front seat assembly RH (Rear occupant classification sensor LH) Occupant classification ECU | RS-296 |
| B1788 | Rear Occupant Classification Sensor RH Collision Detection | <ol style="list-style-type: none"> Front seat assembly RH (Rear occupant classification sensor RH) Occupant classification ECU | RS-300 |
| B1790 | Center Airbag Sensor Assembly Communication Circuit Malfunction | <ol style="list-style-type: none"> Floor wire Occupant classification ECU Center airbag sensor assembly | RS-304 |
| B1793 | Occupant Classification Sensor Power Supply Circuit Malfunction | <ol style="list-style-type: none"> Front seat wire RH Front seat assembly RH (Occupant classification sensors) Occupant classification ECU | RS-311 |
| B1794 | Open in Occupant Classification ECU Battery Positive Line | <ol style="list-style-type: none"> Wire harness Occupant classification ECU | RS-319 |
| B1795 | Occupant Classification ECU Malfunction | <ol style="list-style-type: none"> Battery ECU-B Fuse No. 2 floor wire Front seat inner belt RH Occupant classification ECU | RS-323 |

| DTC No. | Detection Item | Trouble Area | See page |
|---------|--|-----------------------------|------------------------|
| B1796 | Sleep Operation Failure of Occupant Classification ECU | Occupant classification ECU | RS-326 |