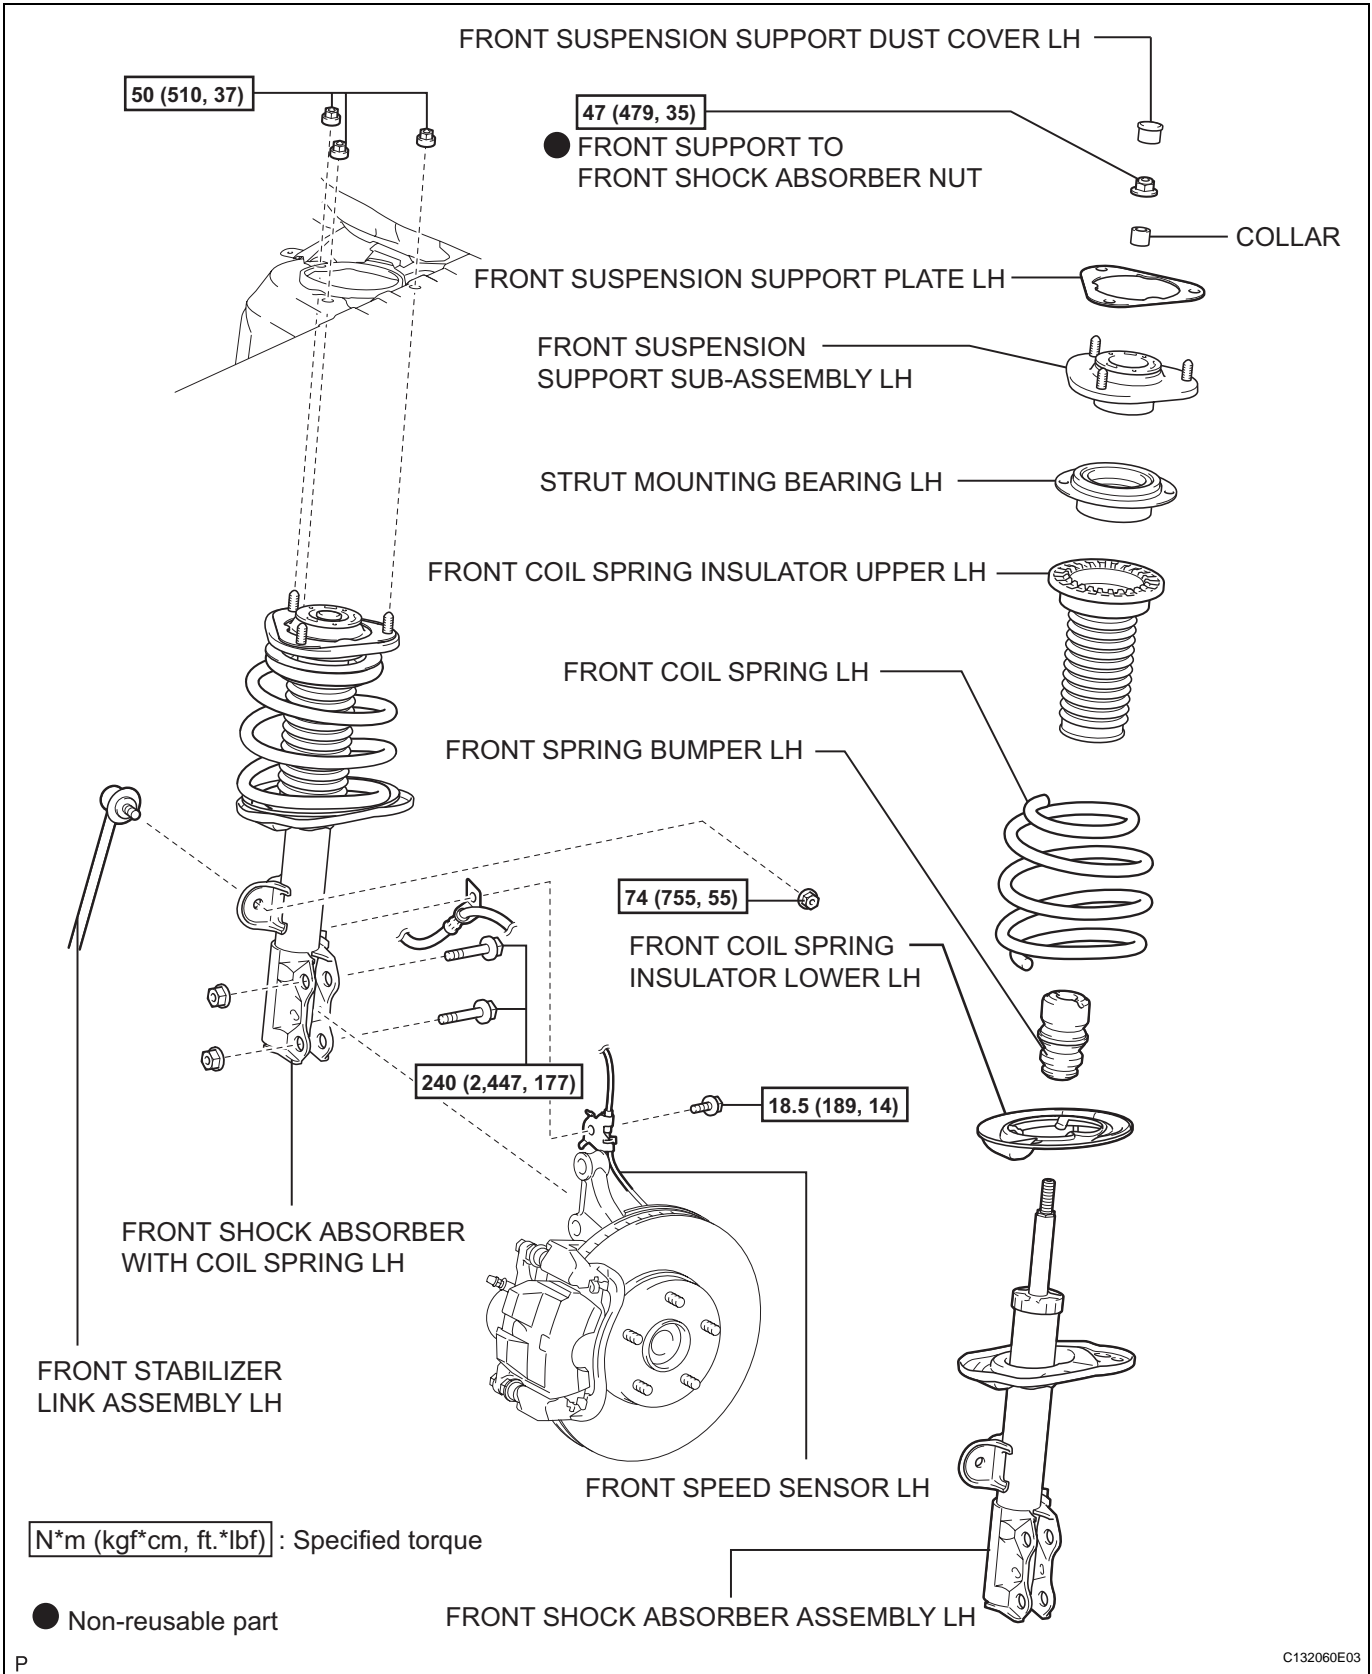


# FRONT SHOCK ABSORBER WITH COIL SPRING (for Sport Package)

## COMPONENTS

SP



## REMOVAL

### HINT:

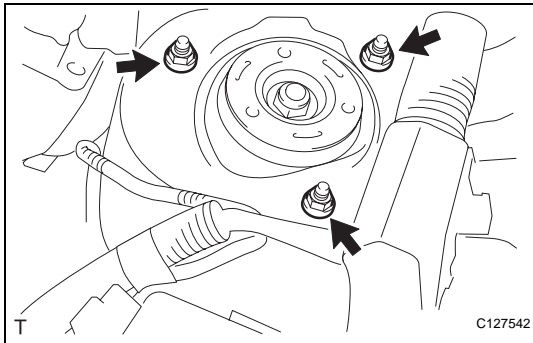
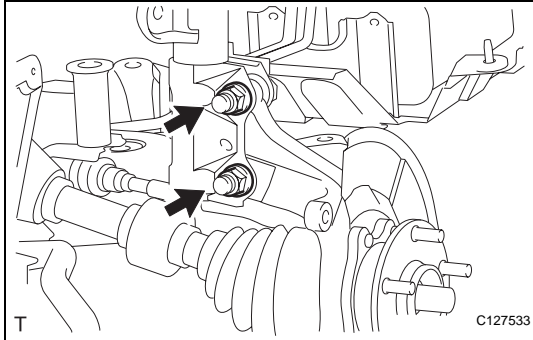
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE FRONT WHEEL
2. REMOVE FRONT SPEED SENSOR LH (See page [BC-191](#))
3. REMOVE FRONT STABILIZER LINK ASSEMBLY LH (See page [SP-30](#))
4. REMOVE FRONT SHOCK ABSORBER WITH COIL SPRING LH

- (a) Remove the 2 bolts and 2 nuts, and disconnect the shock absorber from the steering knuckle.

### HINT:

While fixing the nuts in place, loosen and remove the bolts.

**SP**

- (b) Remove the 3 nuts and shock absorber with coil spring.