

DIAGNOSTIC TROUBLE CODE CHART

HINT:

If a trouble code is displayed during the DTC check, check the circuit listed for that code in the table below. Then proceed to the appropriate page.

Tire pressure warning system

DTC No.	Detection Item	Trouble Area	See page
C2111/11	Transmitter ID1 Operation Stop	- Tire pressure warning valve and transmitter - Tire pressure warning ECU	TW-25
C2112/12	Transmitter ID2 Operation Stop	- Tire pressure warning valve and transmitter - Tire pressure warning ECU	TW-25
C2113/13	Transmitter ID3 Operation Stop	- Tire pressure warning valve and transmitter - Tire pressure warning ECU	TW-25
C2114/14	Transmitter ID4 Operation Stop	- Tire pressure warning valve and transmitter - Tire pressure warning ECU	TW-25
C2115/15	Transmitter ID5 Operation Stop	- Tire pressure warning valve and transmitter - Tire pressure warning ECU	TW-25
C2121/21	No Signal from Transmitter ID1 in Main Mode	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2122/22	No Signal from Transmitter ID2 in Main Mode	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2123/23	No Signal from Transmitter ID3 in Main Mode	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2124/24	No Signal from Transmitter ID4 in Main Mode	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2125/25	No Signal from Transmitter ID5 in Main Mode	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2141/41	Transmitter ID1 Error	- Tire pressure warning valve and transmitter	TW-34
C2142/42	Transmitter ID2 Error	- Tire pressure warning valve and transmitter	TW-34
C2143/43	Transmitter ID3 Error	- Tire pressure warning valve and transmitter	TW-34
C2144/44	Transmitter ID4 Error	- Tire pressure warning valve and transmitter	TW-34
C2145/45	Transmitter ID5 Error	- Tire pressure warning valve and transmitter	TW-34

DTC No.	Detection Item	Trouble Area	See page
C2165/65	Abnormal Temperature Inside ID1 Tire	- Tire - Tire pressure warning valve and transmitter	TW-36
C2166/66	Abnormal Temperature Inside ID2 Tire	- Tire - Tire pressure warning valve and transmitter	TW-36
C2167/67	Abnormal Temperature Inside ID3 Tire	- Tire - Tire pressure warning valve and transmitter	TW-36
C2168/68	Abnormal Temperature Inside ID4 Tire	- Tire - Tire pressure warning valve and transmitter	TW-36
C2169/69	Abnormal Temperature Inside ID5 Tire	- Tire - Tire pressure warning valve and transmitter	TW-36
C2171/71	Transmitter ID not Registered in Main Mode	- Tire pressure warning ECU	TW-39
C2176/76	Receiver Error	- Tire pressure warning and receiver - Tire pressure warning ECU - Wire harness	TW-41
C2181/81	Transmitter ID1 not Received (Test Mode DTC)	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2182/82	Transmitter ID2 not Received (Test Mode DTC)	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2183/83	Transmitter ID3 not Received (Test Mode DTC)	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2184/84	Transmitter ID4 not Received (Test Mode DTC)	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2185/85	Transmitter ID5 not Received (Test Mode DTC)	- Tire pressure warning valve and transmitter - Tire pressure antenna and receiver - Tire pressure warning ECU - Wire harness	TW-28
C2191/91	Vehicle Speed Signal Error (Test Mode DTC)	- Vehicle speed sensor - Tire pressure warning ECU - Combination meter - Wire harness	TW-44