



DISPOSAL

1. DISPOSE OF TIRE PRESSURE WARNING VALVE SUB-ASSEMBLY

HINT:

The tire pressure warning valve is powered by a lithium battery. When disposing of the tire pressure sensor, remove the battery and dispose of it properly.

- (a) Use the tip of a screwdriver to pry off the back cover.

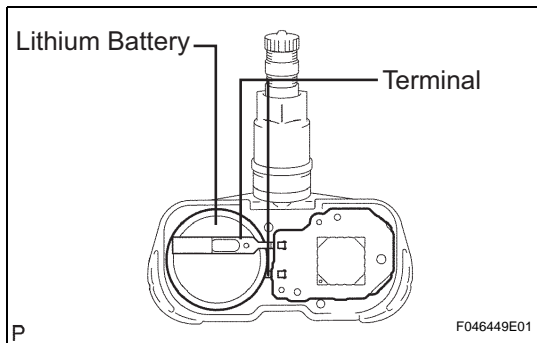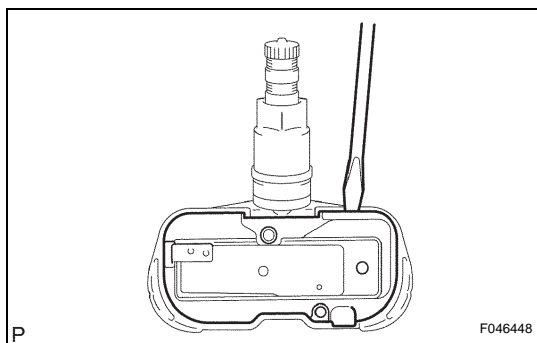

- (b) The battery and base board covered with silicone resin are exposed. While taking out the battery, cut the 2 terminals that connect the battery and the base board.