

# AUTOMATIC TRANSAXLE FLUID

## ON-VEHICLE INSPECTION


### 1. CHECK TRANSAXLE FLUID LEVEL

#### HINT:

Drive the vehicle so that the engine and transaxle are at normal operating temperature.

#### Fluid temperature:

**70 to 80°C (158 to 176°F)**

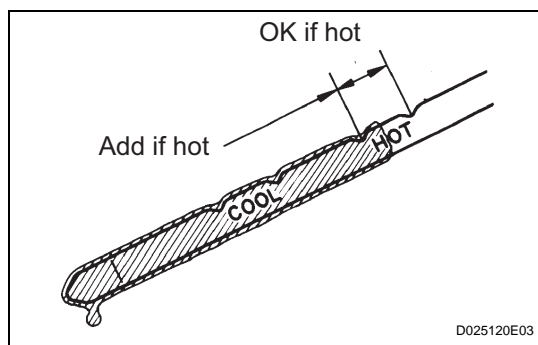

- Park the vehicle on a level surface and set the parking brake.
  - With the engine idling and the brake pedal depressed, move the shift lever to each position from P to L position, and return it to the P position.
  - Take out the ATF dipstick and wipe it clean.
  - Fully push the dipstick back into the pipe.
  - Take it out and check that the fluid level is at the HOT position.
- If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs and/or other parts.