
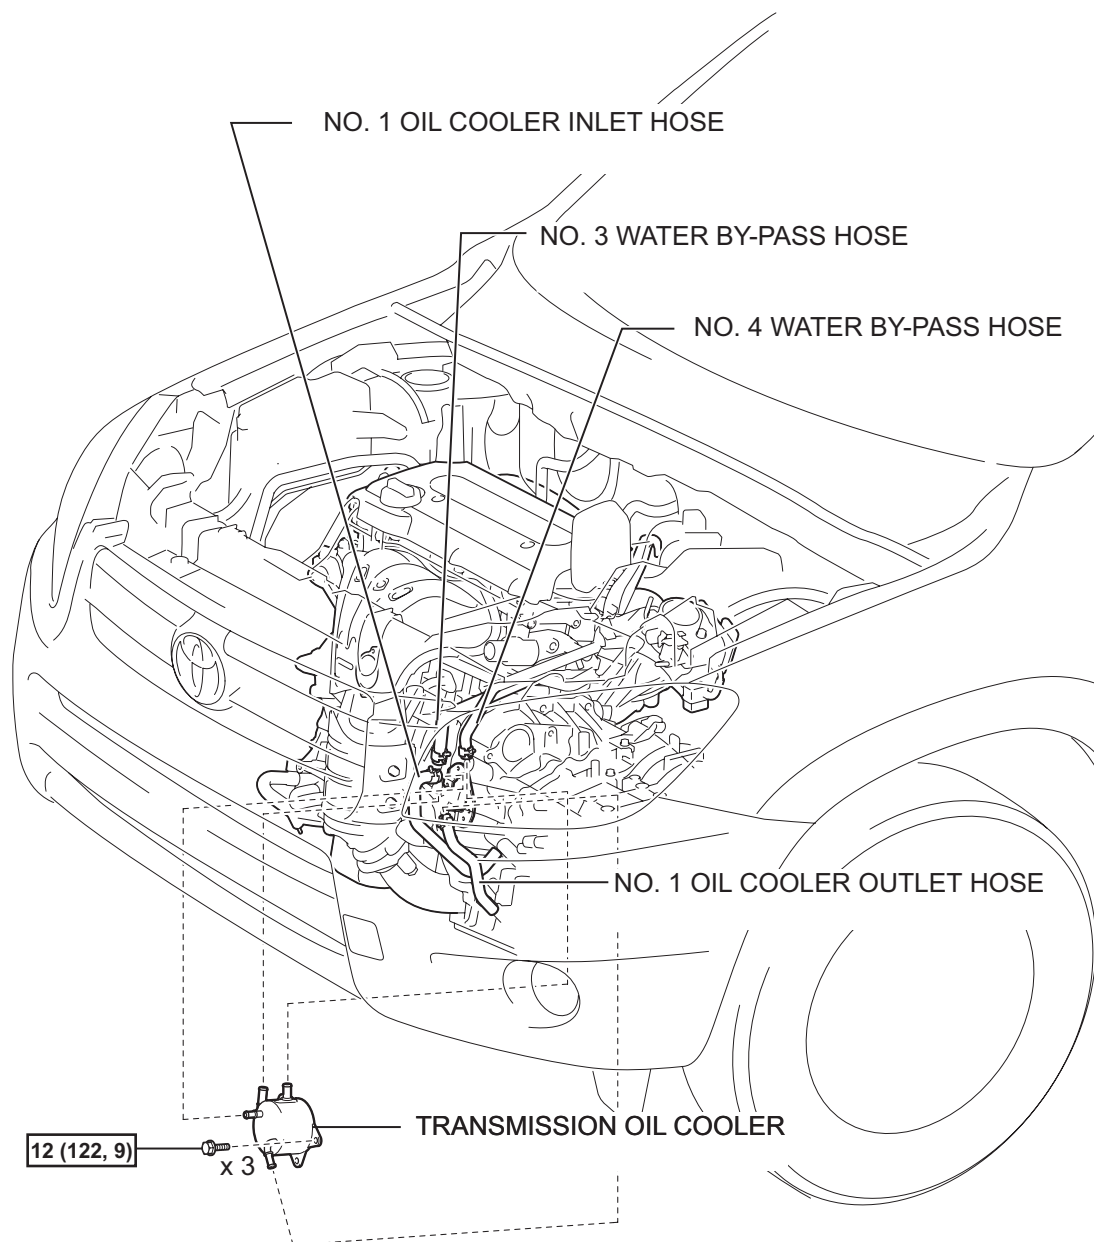


TRANSMISSION OIL COOLER

COMPONENTS

**AX**



N*m (kgf*cm, ft.*lbf) : Specified torque

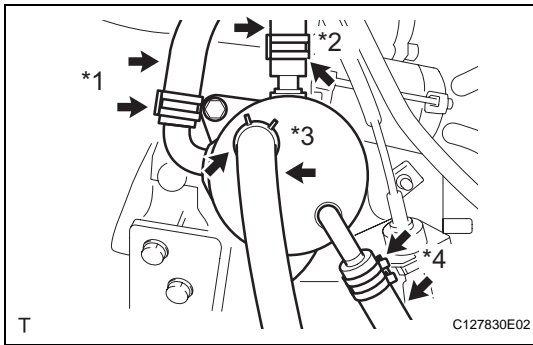

REMOVAL

1. REMOVE TRANSMISSION OIL COOLER


- *1: Disconnect the No. 3 water by-pass hose from the transmission oil cooler.
- *2: Disconnect the No. 4 water by-pass hose from the transmission oil cooler.
- *3: Disconnect the No. 1 oil cooler inlet hose from the transmission oil cooler.
- *4: Disconnect the No. 1 oil cooler outlet hose from the transmission oil cooler.
- Remove the 3 bolts and oil cooler from the bracket.

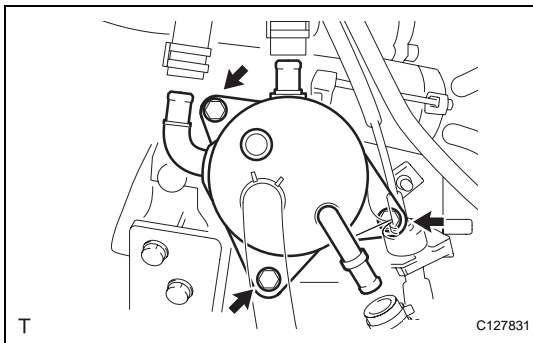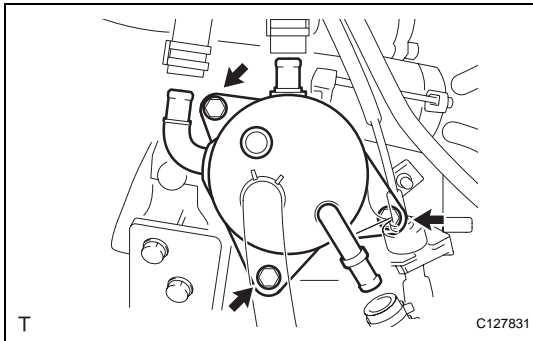

INSTALLATION

1. INSTALL TRANSMISSION OIL COOLER

- Install the oil cooler to the bracket with the 3 bolts.
Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

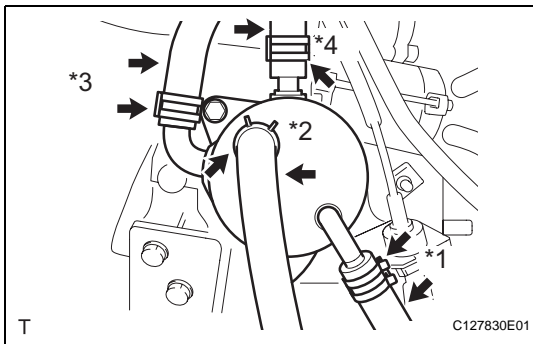

- *1: Connect the No. 1 oil cooler outlet hose to the transmission.
- *2: Connect the No. 1 oil cooler inlet hose to the transmission.
- *3: Connect the No. 3 water by-pass hose to the transmission.
- *4: Connect the No. 4 water by-pass hose to the transmission.

2. ADD AUTOMATIC TRANSAXLE FLUID

3. INSPECT AUTOMATIC TRANSAXLE FLUID

- Inspect the automatic transaxle fluid (see page [AX-102](#)).

4. ADD COOLANT

- Add the coolant (see page [CO-6](#)).