



(d) Remove the nut and arm and blade.

7. REMOVE REAR WIPER MOTOR GROMMET

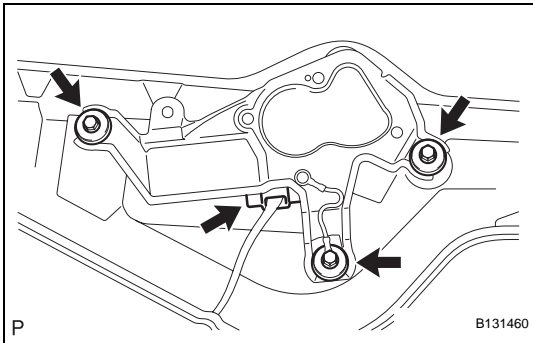

8. REMOVE REAR WIPER MOTOR ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and wiper motor.

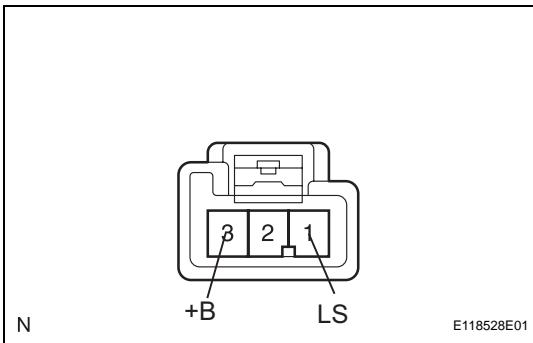

INSPECTION

1. INSPECT REAR WIPER MOTOR

- (a) Connect the battery's positive (+) lead to terminal 3 (+B) and the negative (-) lead to terminal 1 (LS).
- (b) Check that the rear wiper motor operates.

OK:

Rear wiper motor operates.

NOTICE:

Check that the body ground is connected.

If the result is not as specified, replace the motor.

INSTALLATION


1. INSTALL REAR WIPER MOTOR ASSEMBLY


- (a) Install the wiper motor with the 3 bolts.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
- (b) Connect the connector.

2. INSTALL REAR WIPER MOTOR GROMMET


3. INSTALL REAR WIPER ARM AND BLADE ASSEMBLY

- (a) Stop the wiper motor at the automatic stop position.

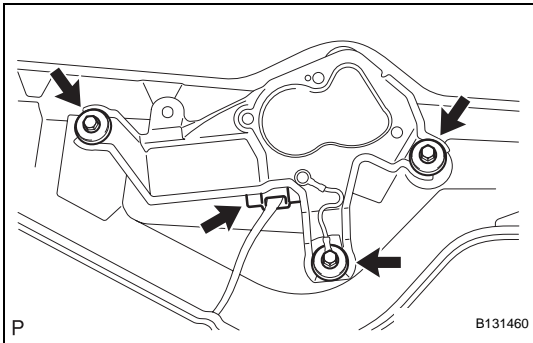

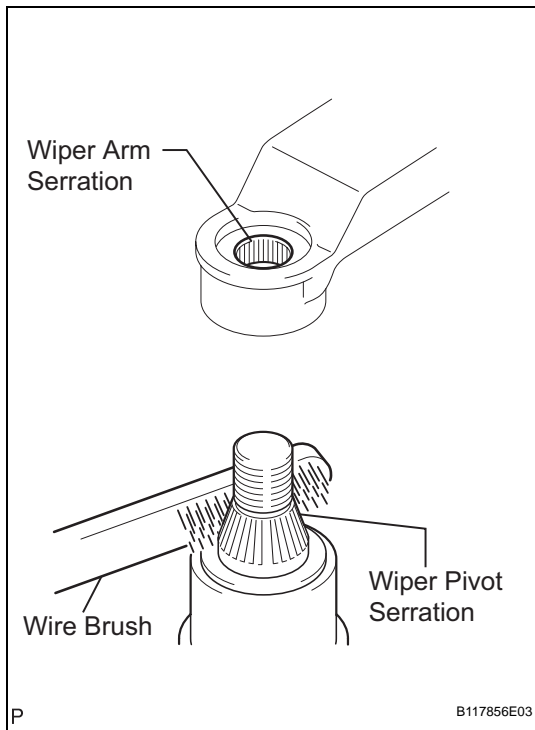

- (b) Clean the wiper arm serration with a round file or equivalent.
- (c) Clean the wiper pivot serration with a wire brush.

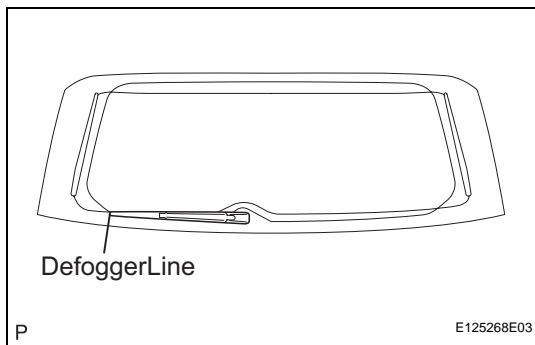


- (d) Install the arm and blade with the nut. Make sure that the arm and blade comes to the position shown in the illustration.

Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)

HINT:

- Hold down the arm hinge by hand while tightening the nut.
- Install the arm and blade so that the rear wiper blade is aligned with the ceramic line.

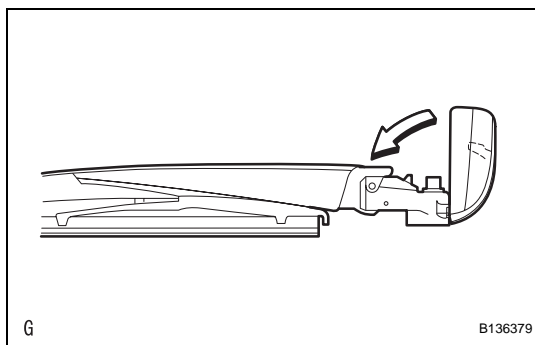

- (e) Install the cap.

4. **INSTALL BACK DOOR TRIM BOARD ASSEMBLY**
(See page [ED-66](#))
5. **INSTALL BACK DOOR SIDE GARNISH RH** (See page [ED-67](#))
6. **INSTALL BACK DOOR SIDE GARNISH LH** (See page [ED-67](#))
7. **INSTALL BACK DOOR CENTER GARNISH** (See page [ED-67](#))
8. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**