


700-01-00

保险及继电器信息

700-01-00

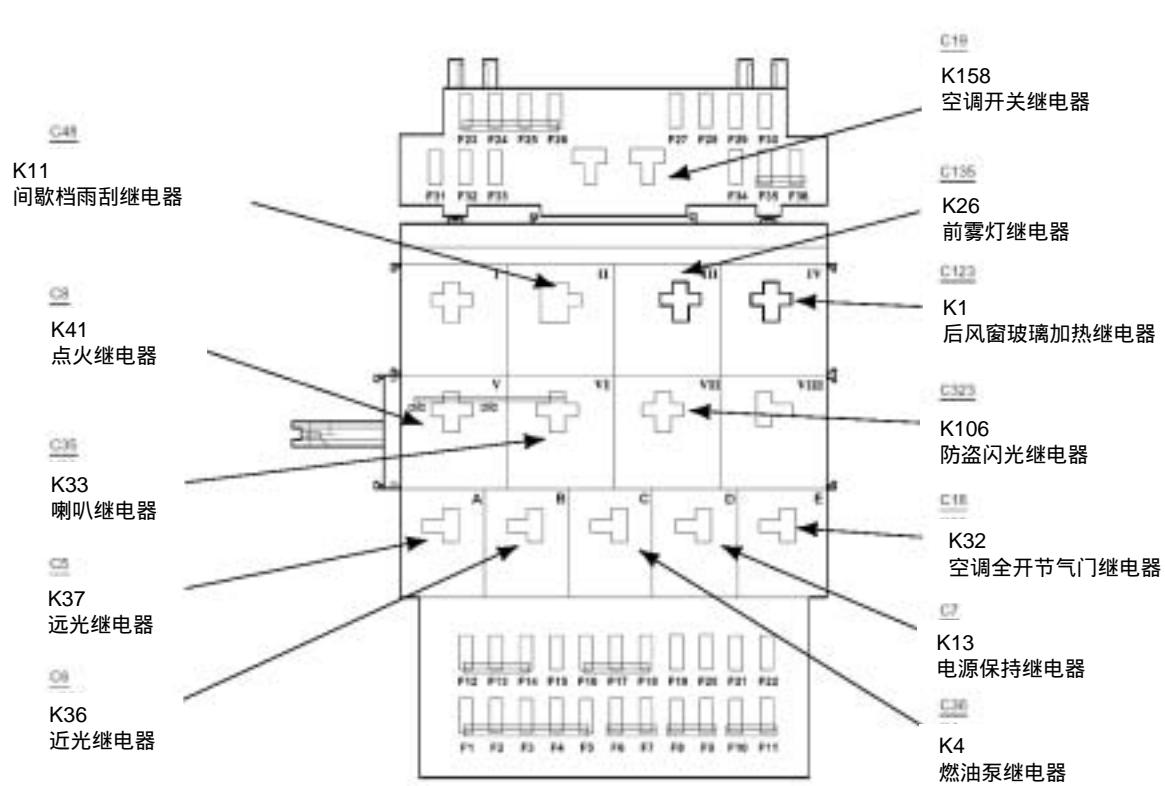

蓄电池接线盒 (BJB)

章节	说明	保险编号			80A	80A	60A
		FA	FB	FC			
206-09A-00	防抱死控制系统						
303-03-00	发动机冷却系统			●			
303-04-00	燃油的加注与控制系统	●					
303-06-00	起动系统						
303-07-00	发动机点火系						
303-14-00	发动机电控系统	●					
307-01-00	自动变速箱						
412-03A-00	空调			●			
413-00-00	组合仪表及仪表板照明						
413-01-00	组合仪表						
413-06-00	喇叭						
413-07-00	时钟						
414-02-00	发电机与调节器						
415-01-00	音响装置						
415-03-00	扬声器						
417-01-00	外部灯光	●	●				
417-02-00	内部灯光	●					
418-00-00	数据通信网络						
419-01A-00	主动防盗系统						
501-09-00	后视镜						
501-11-00	玻璃 , 框架及其机构						
501-12-00	仪表板与控制台	●					
501-14-00	门把手 , 门锁 , 门闩及进入系统	●					
501-16-00	雨刮器及喷水		●				
501-20B-00	辅助约束装置						
		FA	FB	FC			
		80A	80A	60A			

中央接线盒 (CJB)

章节	说明	保险编号										
		1 15A	2 10A	3 20A	4 10A	5 15A	6 5A	7 5A	8 15A	9 20A	10 10A	11 10A
206-09A-00	防抱死控制系统											
303-03-00	发动机冷却系统				●							
303-04-00	燃油的加注与控制系统				●				●			
303-06-00	起动系统											
303-07-00	发动机点火系											
303-14-00	发动机电控系统				●				●			
307-01-00	自动变速箱											
412-03A-00	空调	●		●		●						
413-00-00	组合仪表及仪表板照明					●	●					
413-01-00	组合仪表					●						
413-06-00	喇叭					●						
413-07-00	时钟	●										
414-02-00	发电机与调节器											
415-01-00	音响装置	●				●						
415-03-00	扬声器											
417-01-00	外部灯光					●	●	●		●	●	●
417-02-00	内部灯光	●										
418-00-00	模块通信网络	●										
419-01A-00	主动防盗系统					●						
501-09-00	后视镜	●										
501-11-00	玻璃，框架及其机构		●				●					
501-12-00	仪表板与控制台	●										
501-14-00	门把手，门锁，门闩及进入系统	●					●					
501-16-00	雨刮器与喷水											
501-20B-00	辅助约束装置											
		1 15A	2 10A	3 20A	4 10A	5 15A	6 5A	7 5A	8 15A	9 20A	10 10A	11 10A

中央接线盒 (CJB)

-4

保险编号																				章节			
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	32	34	35	36	
20A	10A 15A	10A	30A	15A	30A	7.5A	15A	10A	10A	20A	30A	15A	5A	5A	15A	10A	10A	3A	10A	7.5A			
●												●	●					●				206-09A-00	
																						303-03-00	
																		●				303-04-00	
																						303-06-00	
						●																303-07-00	
●	●					●																303-14-00	
●															●	●						307-01-00	
●	●	●																				412-03A-00	
		●				●																413-00-00	
●							●															413-01-00	
								●														413-06-00	
									●													413-07-00	
●										●												414-02-00	
											●											415-01-00	
												●										415-03-00	
●	●	●				●	●					●	●									417-01-00	
																						417-02-00	
																						418-00-00	
												●						●				419-01A-00	
																						501-09-00	
●						●																501-11-00	
																						501-12-00	
												●						●				501-14-00	
●																						501-16-00	
●																		●				501-20B-00	
12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	32	34	35	36	
20A	10A 15A	10A	30A	15A	30A	7.5A	15A	10A	10A	20A	30A	15A	5A	5A	15A	10A	10A	3A	10A	7.5A			