



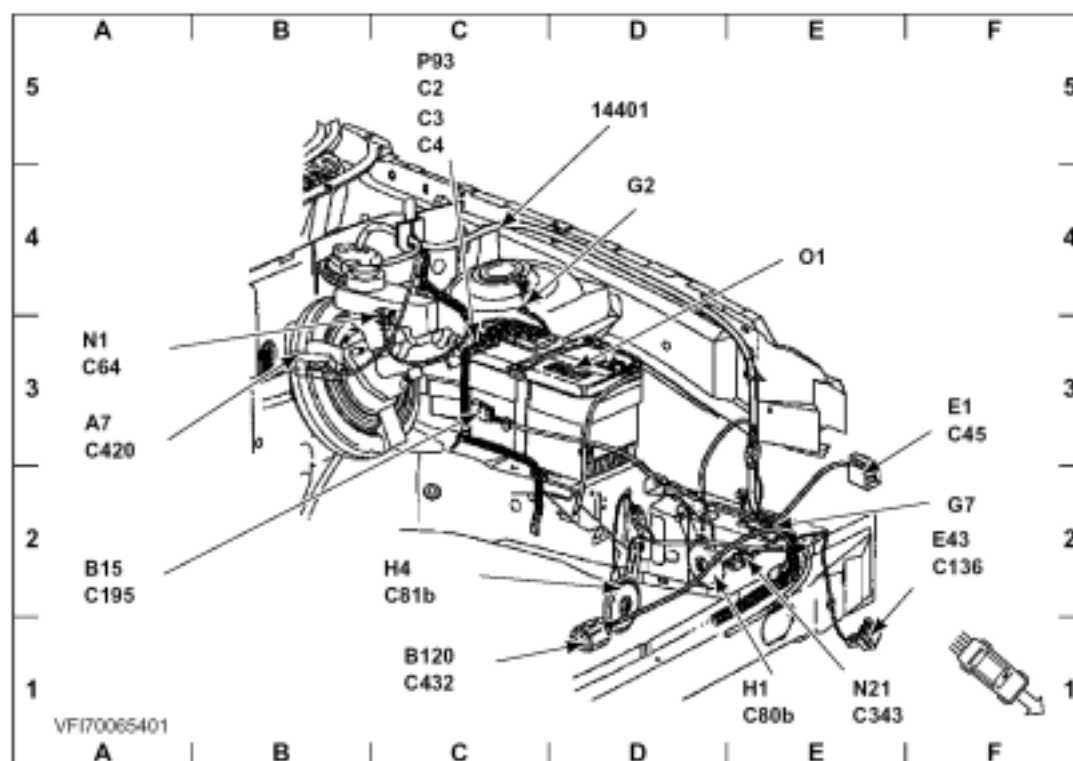


发动机舱,左侧

14401 .主线束	D 5	C343.....	E 1
A7ABS 控制模块.....	A 3	C420	A 3
B15.....车轮速度传感器, 左前...	A 2	C432.....	C 1
B120.. 变速器档位传感器.....	C 1	E1	左大灯
C2.....	C 5	E43	左前雾灯.....
C3	C 5	G2.....	D 4
C4.....	C 5	G7.....	F 2
C45.....	F 3	H1	喇叭
C64.....	A 3	H4	第二喇叭.....
C80b	E 1	N1	制动液位开关.....
C81b	C 2	N21	发动机舱开关.....
C136	F 2	O1.....	蓄电池
C195.....	A 2	P93	蓄电池接线盒(BJB)....

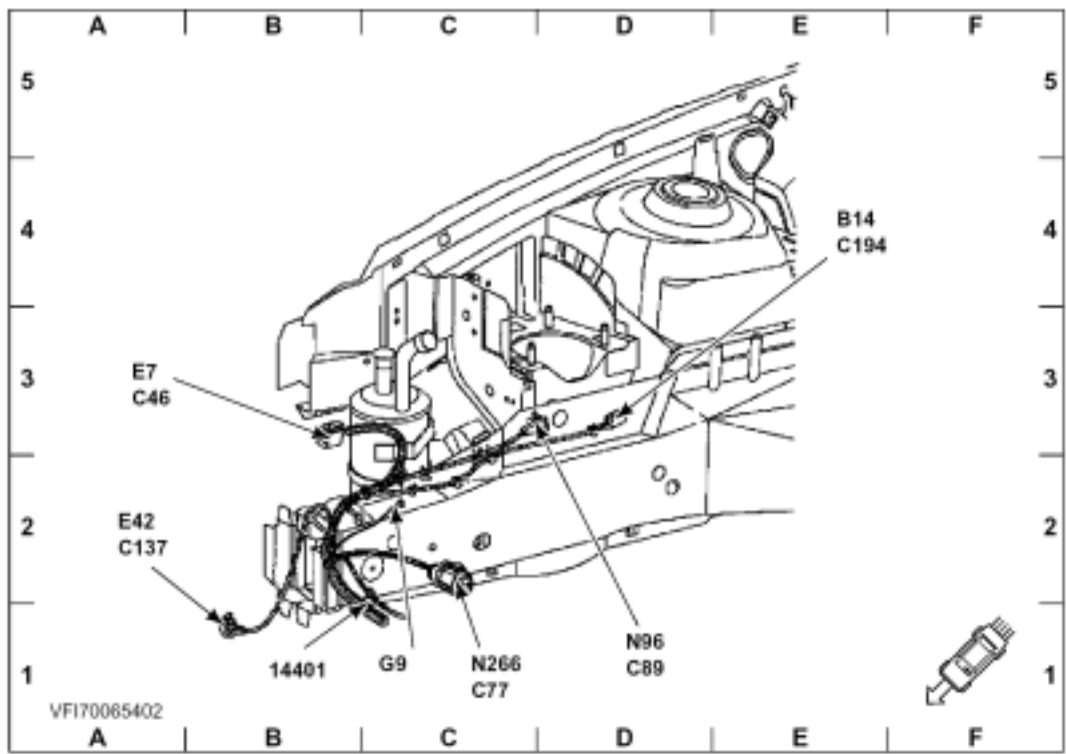


发动机舱，右侧

14401	主线束	B 1	C194		E 4
B14	车轮速度传感器，右前	E 4	E7	右大灯	A 3
C46		A 3	E42	右前雾灯	A 2
C77		C 1	G9		C 1
C89		D 1	N96	动力转向压力开关	D 1
C137		A 2	N266	三通压力开关	C 1

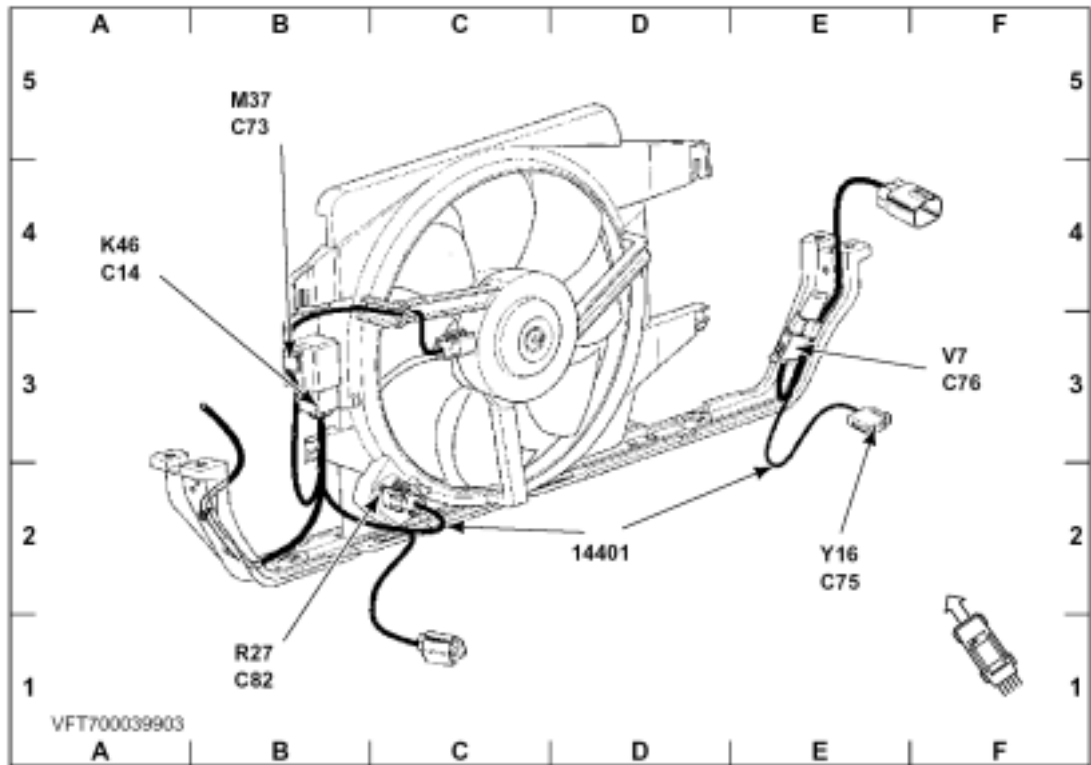


散热器上

14401	主线束	D 2	K46	高速冷却风扇继电器	A 4
C14.....		A 4	M37	发动机冷却风扇电机.....	B 5
C73.....		B 5	R27	冷却风扇低速电阻	B 1
C75		E 2	V7	空调压缩机离合器二极管 ..	F 3
C76.....		F 3	Y16	空调压缩机离合器	E 2
C82.....		B 1			

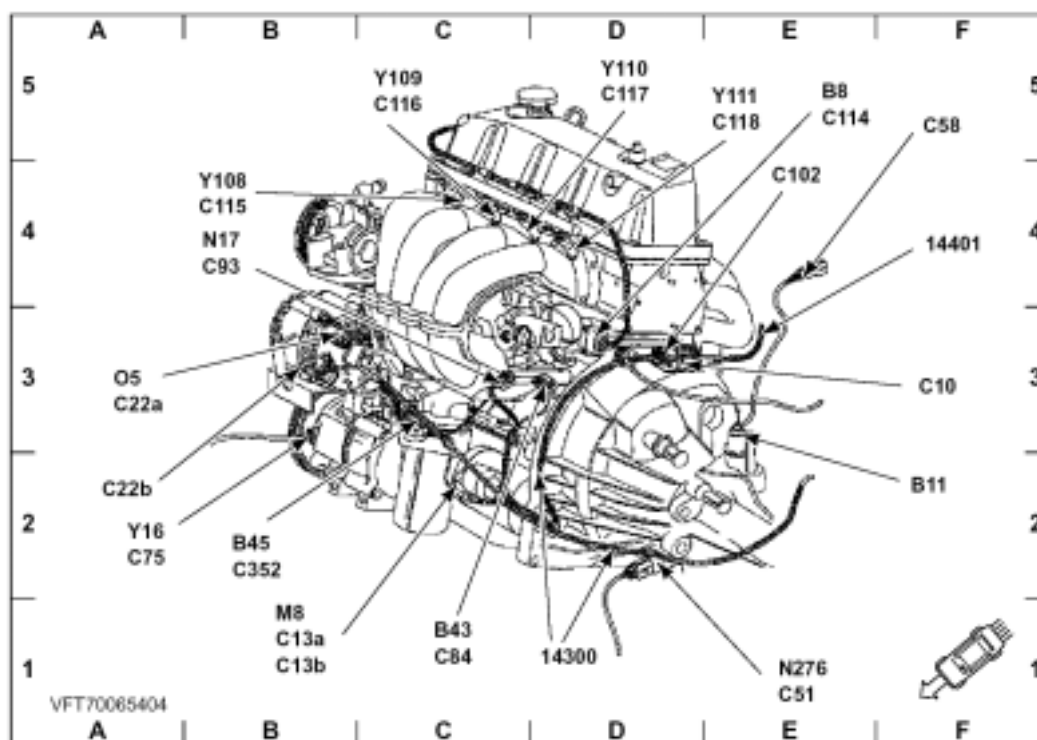


发动机，手动变速箱

14300 线束-蓄电池输出	D 1	C102...	E 4
14401 主线束	F 4	C114 ..	E 5
B8..... 节气门位置传感器 (TPS)	E 5	C115...	B 4
B11..... 车速传感器 (VSS)	F 2	C116 ..	C 5
B43 曲轴位置传感器	C 1	C117...	D 5
B45 爆震传感器	B 2	C118...	E 5
C10.....	F 3	C352...	B 2
C13a.....	B 1	M8..... 起动马达	B 1
C13b	B 1	N17 机油压力开关	B 4
C22b	A 2	N276 .. 倒档开关	E 1
C22a	A 3	O5 发电机.....	A 3
C51	E 1	Y16 空调压缩机离合器.....	A 2
C58.....	F 5	Y108... 喷油嘴 1.....	B 4
C75	A 2	Y109 .. 喷油嘴 2.....	C 5
C84	C 1	Y110 .. 喷油嘴 3	D 5
C93	B 4	Y111 .. 喷油嘴 4.....	E 5

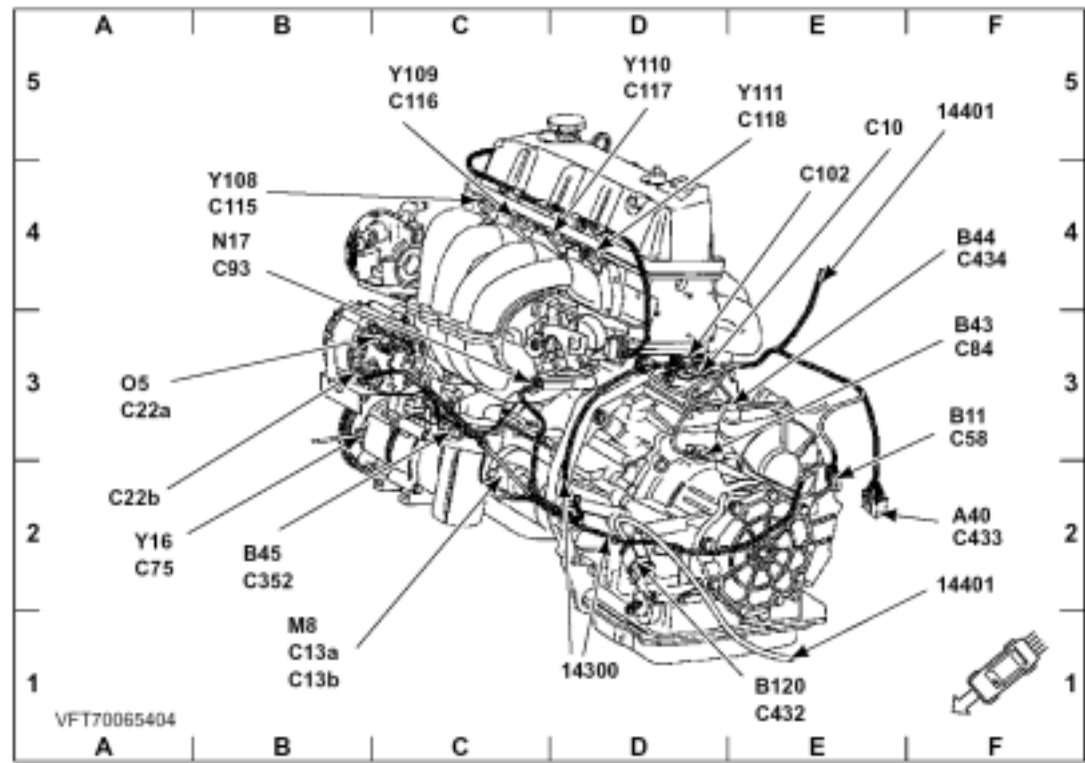


发动机，自动变速箱

14300	线束-蓄电池输出	D 1	C102		E 4
14401	主线束	F 2	C115		B 4
14401	主线束	F 5	C116		C 5
A40	变速器阀体总成.....	F 2	C117		D 5
B11	车速传感器 (VSS)	F 3	C118		E 5
B43	曲轴位置传感器.....	F 3	C352		B 2
B44	涡轮轴速度传感器 (TSS) ...	F 4	C432		E 1
B45	爆震传感器	B 2	C433		F 2
B120.....	变速器档位传感器	E 1	C434		F 4
C10		E 5	M8	起动马达.....	B 1
C13a		B 1	N17	机油压力开关.....	B 4
C13b		B 1	O5	发电机	A 3
C22b		A 2	Y16	空调压缩机离合器	A 2
C22a		A 3	Y108	喷油嘴1	B 4
C58.....		F 3	Y109	喷油嘴2	C 5
C75		A 2	Y110	喷油嘴3	D 5
C84.....		F 3	Y111.....	喷油嘴4	E 5
C93		B 4			

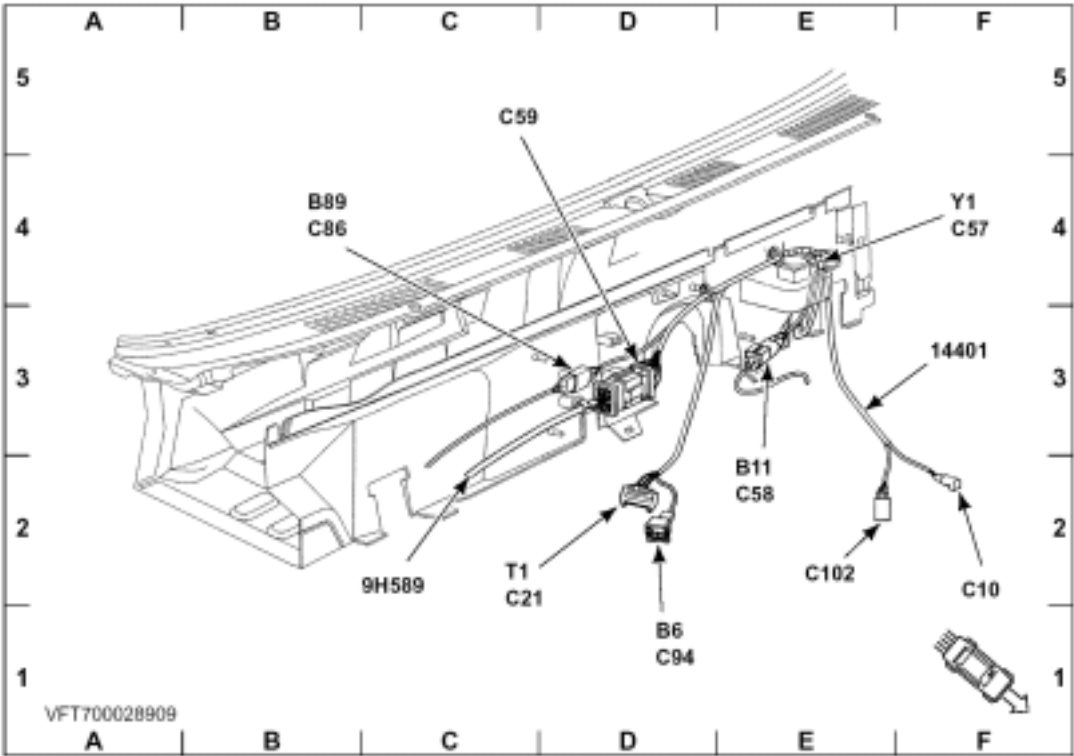

发动机防火墙


14401	主线束	F3	C57		F 4
9H589	线束-发动机控制	C 2	C58		E 2
B6	冷却液温度传感器	D 1	C59		C 5
B11	车速传感器 (VSS)	E 2	C86		B 4
B89	氧传感器(HO2S)	B 4	C94		D 1
C10		F 2	C102		E 2
C21		C 2	T1	点火线圈.....	C 2
			Y1	活性炭罐电磁阀	F 4

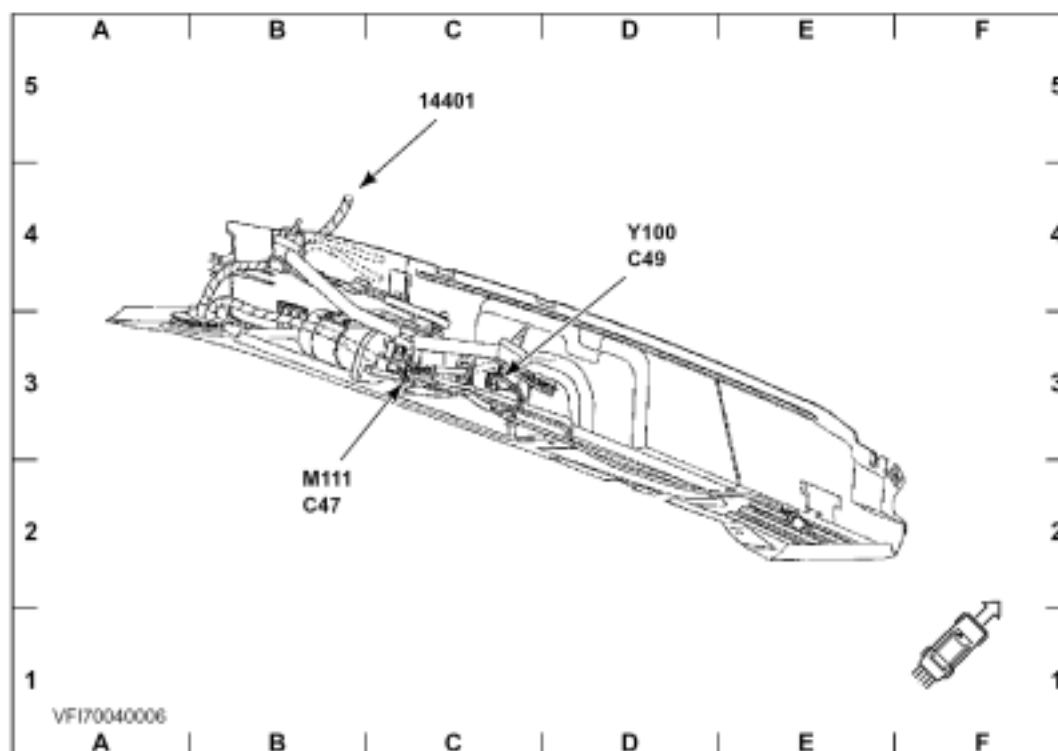

发动机防火墙


14401 .. 主线束 C 5
 C47 B 2
 C49 D 4

M111..... 挡风玻璃雨刮电机 B 2
 Y100 暖风控制电磁阀 D 4

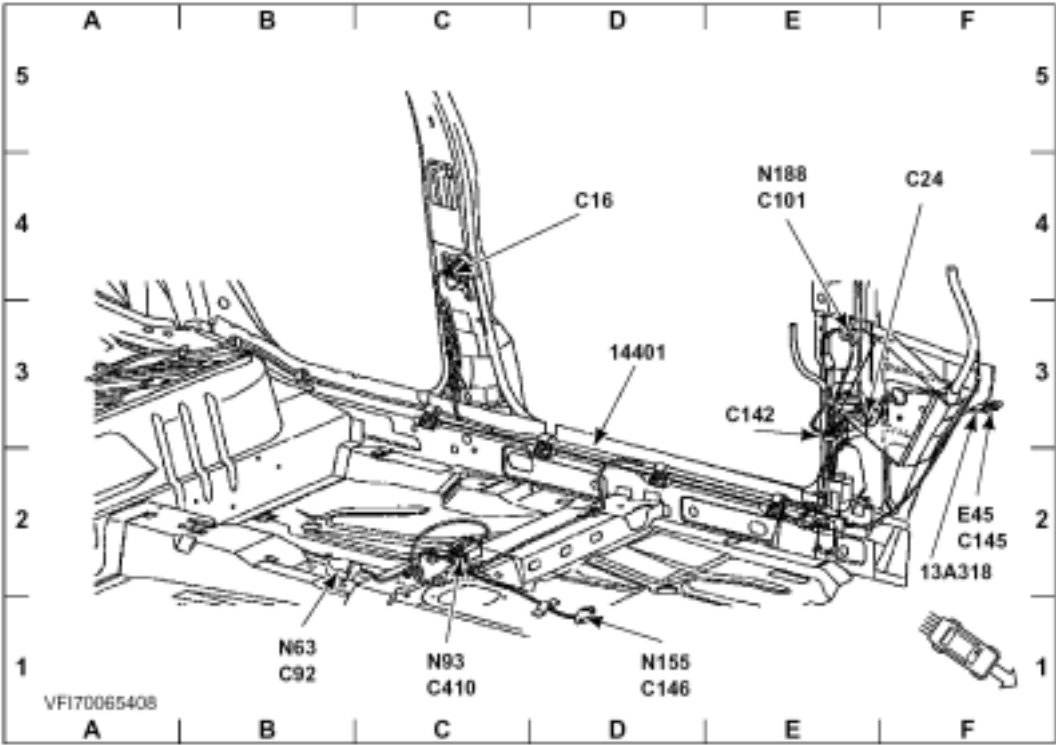

乘客车厢，左侧


13A318... 线束-转向灯.....	C145	F 2
..... F 2	C146	D 1
14401主线束	C410	C 1
D 3	E45	侧转向灯，左侧 ... F 2
C16	N63	驻车制动开关 B 1
D 4	N93	排档杆单元 C 1
C24	N155	行李箱释放开关 D 1
F 4	N188	左前车门开关..... E 4
C92		
B 1		
C101		
E 4		
C142		
E 3		

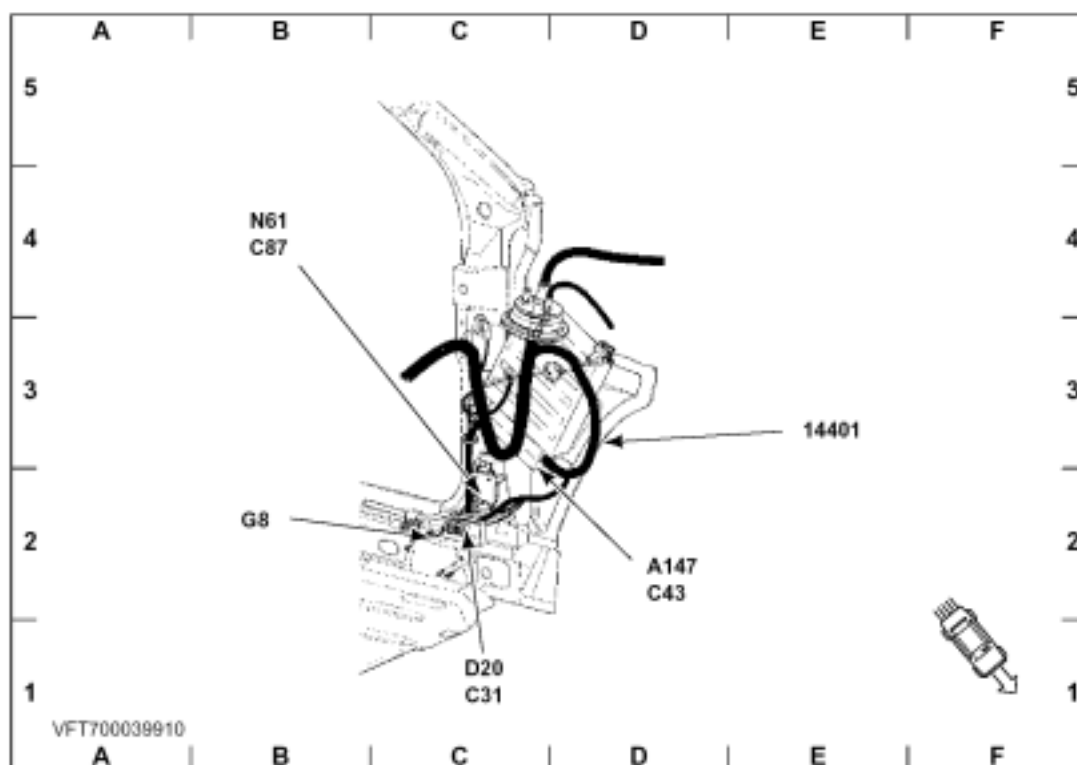

左 A-柱


14401 主线束 E 3
 A147 动力控制模块(PCM) ..D 2
 C31C 1
 C43D 2

C87B 4
 D20数据接口(DLC) C 1
 G8..... B 2
 N61燃油切断阀B 4

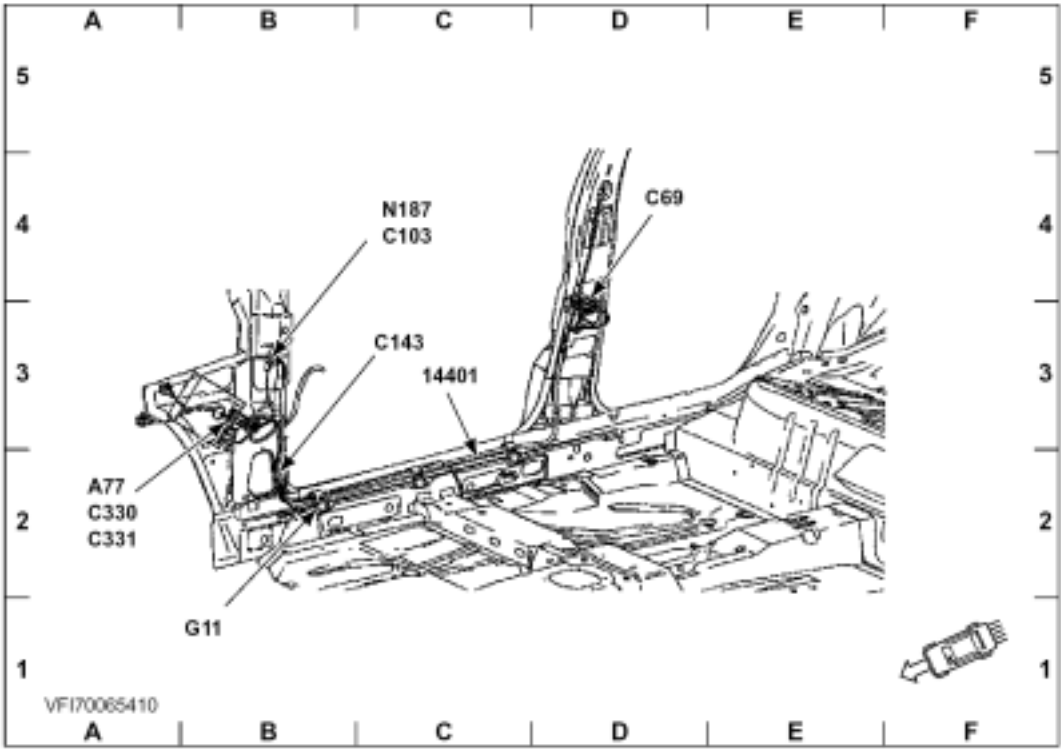

乘客车厢，右侧


14401	主线束	C 3	C330		A 2
A77	防盗/中控锁模块.....	A 2	C331		A 2
C69		D 4	G11		B 1
C103		C 4	N187	右前车门开关.....	C 4
C143.....		C 3			

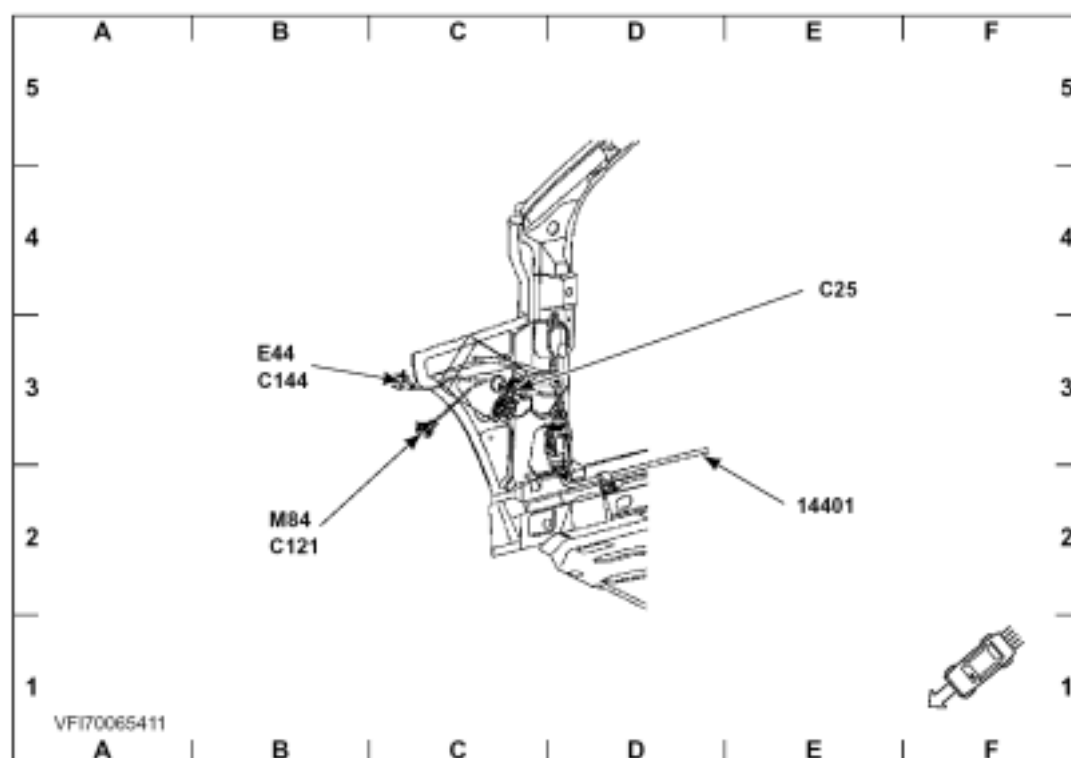

右 A-柱


14401 .. 主线束 E 2
 C25 E 4
 C121 B 2

C144 B 3
 E44 侧转向灯 B 3
 M84..... 喷水电机，前与后 B 2

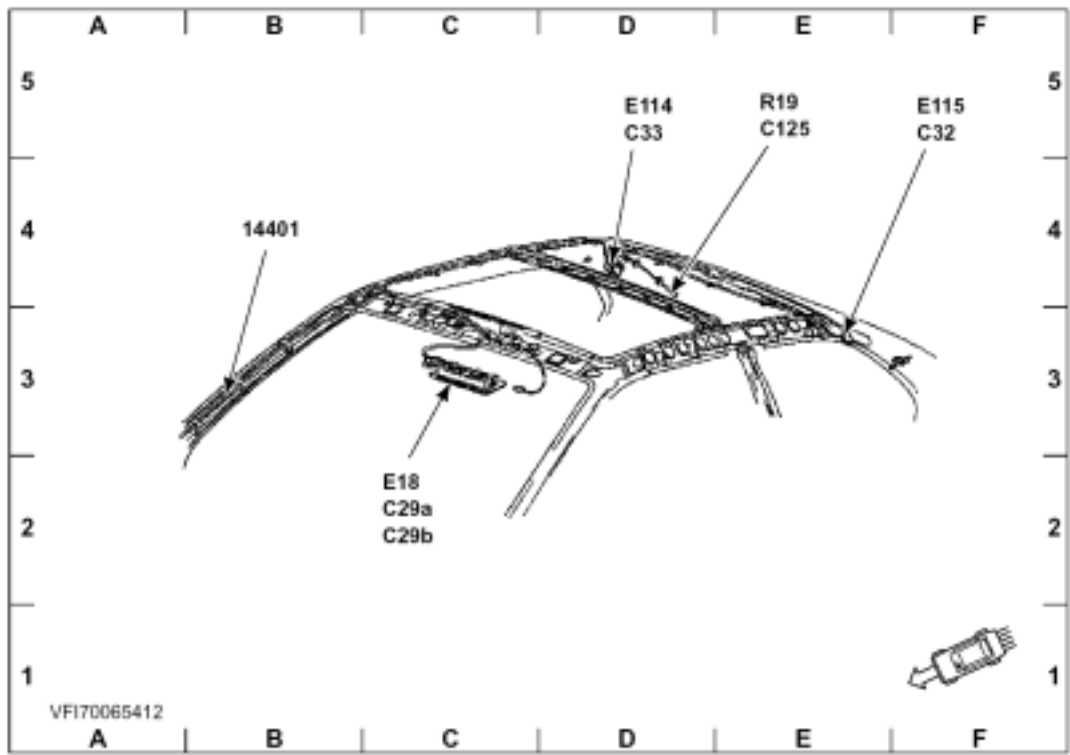


车顶

14401	主线束	B 4	C125		E 5
C29a.....		C 2	E18	顶篷灯，前	C 2
C29b.....		C 2	E114	右后阅读灯	D 5
C32.....		F 5	E115	左后阅读灯	F 5
C33		D 5	R19	后风窗加热器.....	E 5

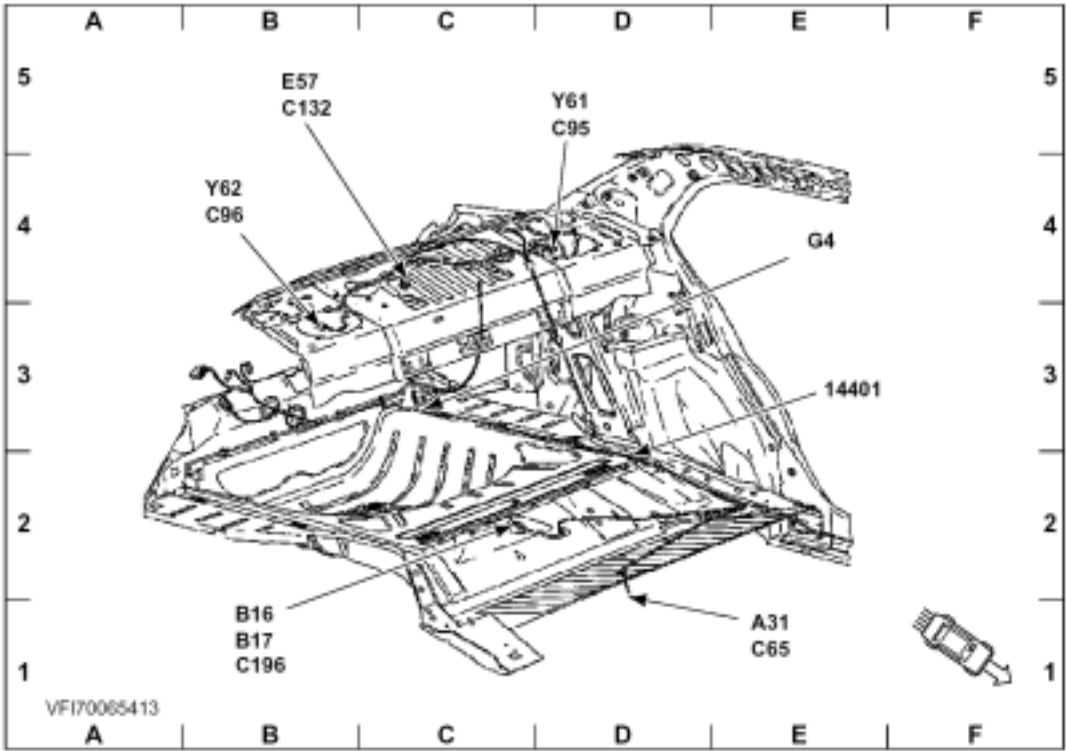


行李箱，左侧

14401	主线束	E 3	C132		B 5
A31	油箱单元	E 1	C196		B 1
B16	车轮速度传感器，右后侧 .	B 1	E57	行李箱灯	B 5
B17	车轮速度传感器，左后侧 .	B 1	G4		E 4
C65		E 1	Y61	左后扬声器	D 5
C95		D 5	Y62	右后扬声器	B 4
C96		B 4			

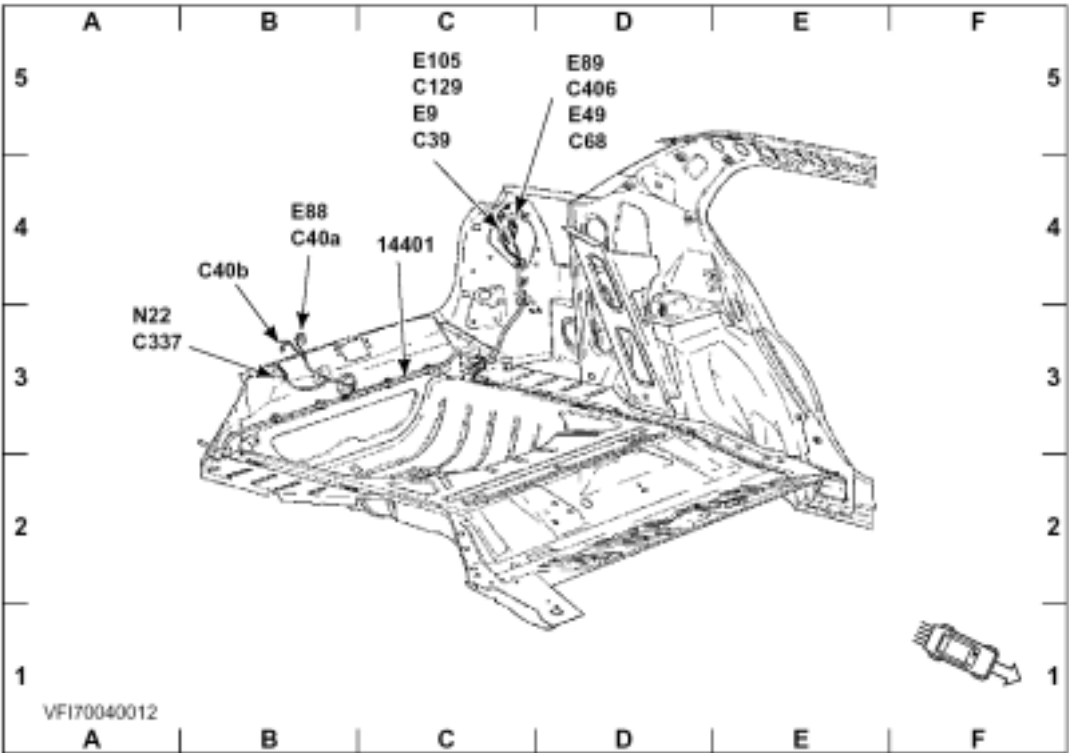


行李箱，左侧

14401	主线束	C 4	C406		D 5
C39		C 5	E9	尾灯总成，左侧	C 5
C40b		B 4	E49	左后转向灯	D 5
C40a		B 4	E88	牌照灯	B 4
C68		D 5	E89	后雾灯，左侧	D 5
C129		C 5	E105	左倒车灯	C 5
C337		A 3	N22	行李箱开关	A 3

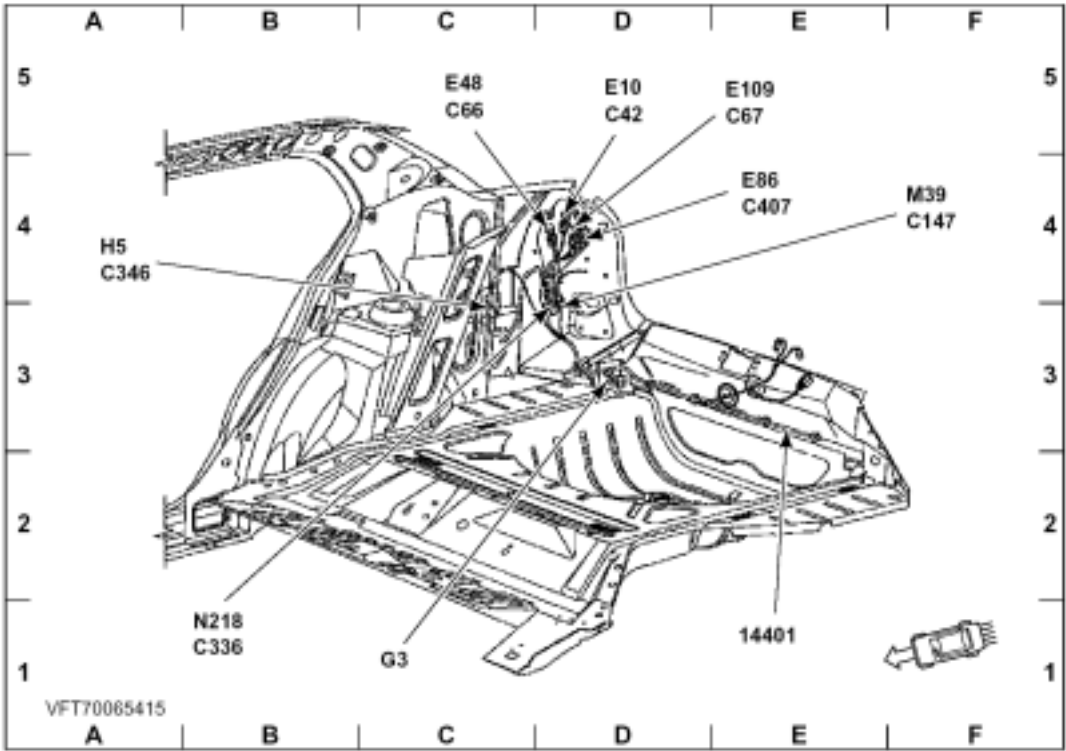


行李箱，右侧

14401	主线束	E 1	E10	尾灯总成，右侧	D 5
C42		D 5	E48	右后转向灯	C 5
C66		C 5	E86	后雾灯，右侧	E 4
C67		E 5	E109	倒车灯，右侧	E 5
C147		F 4	G3		C 1
C336		B 1	H5	防盗-喇叭	A 4
C346		A 4	M39	行李箱电机	F 4
C407		E 4	N218	行李箱防盗开关	B 1

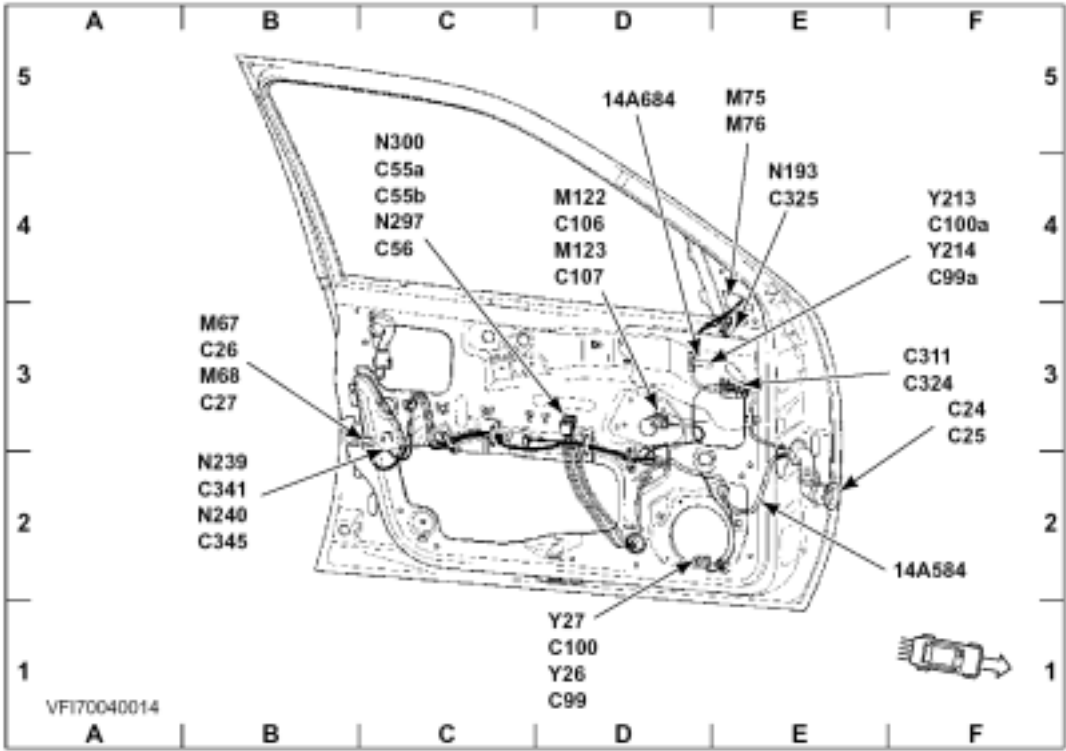


左前车门,与右前车门相似

14A684 ... 线束-外后视镜控制	D 5		
14A584 ... 线束-车门	F 2		
C24.....	F 3		
C25	F 3		
C26	B 3		
C27	B 3		
C55a	C 4		
C55b	C 4		
C56	C 4		
C99.....	D 1		
C99a	F 4		
C100	D 1		
C100a	F 4		
C106.....	D 4		
C107	D 4		
C311.....	F 3		
C324	F 3		
C325	E 4		
C341.....	B 2		
		C345	B 2
		M67	车门锁止电机，左前车门 .. B 3
		M68	车门锁止电机，右前车门 .. B 3
		M75	外后视镜电机，左前车门 .. E 5
		M76	外后视镜电机，右前车门 .. E 5
		M122.....	车窗升降电机，左前车门... D 4
		M123.....	车窗升降电机，右前车门 .. D 4
		N193.....	电动后视镜调节开关..... E 4
		N239	车门微开开关，左前车门 .. B 2
		N240	车门微开开关，右前车门 .. B 2
		N297	车窗控制开关，左前车门 . C 4
		N300.....	车窗控制开关，右前车门 .. C 5
		Y26	前车门扬声器，右侧..... D 1
		Y27	前车门扬声器，左侧..... D 1
		Y213	扩音器，左前门..... F 4
		Y214	扩音器，右前门..... F 4

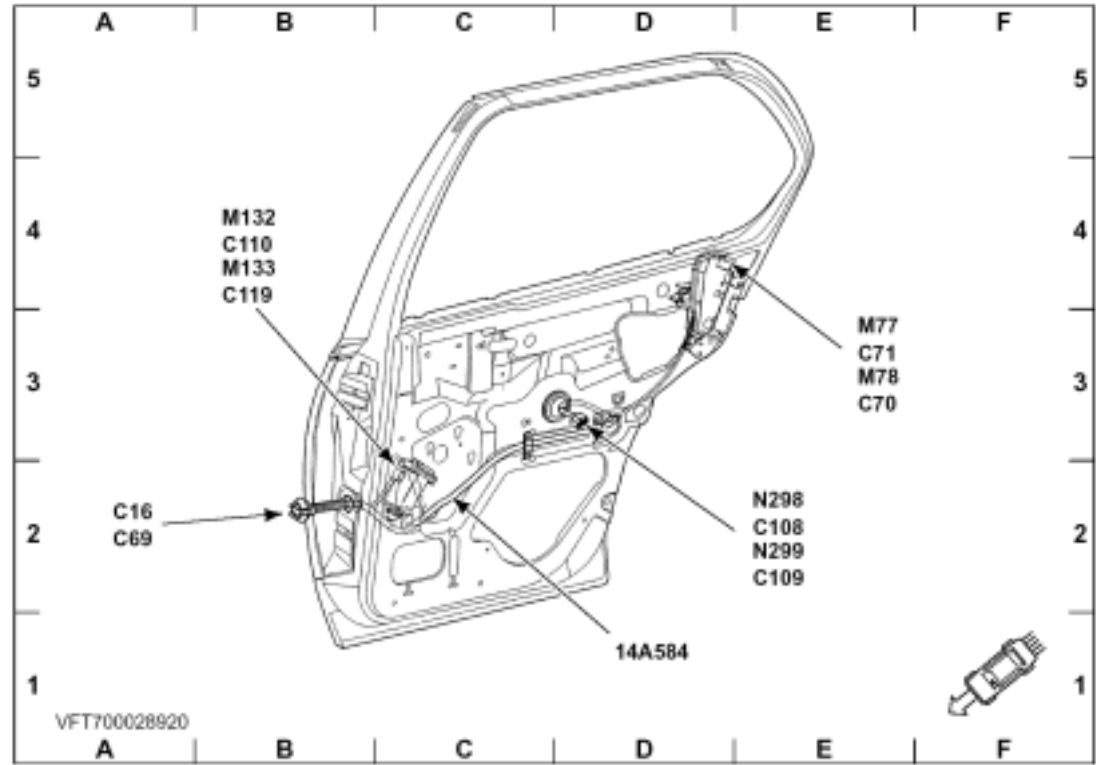


右后车门，与左后车门相似

14A584...主线束-门	D 1	C119	B 4
C16	A 2	M77.....车门锁止电机，右后车门 ..	E 3
C69.....	A 2	M78	车门锁止电机，左后车门 . E 3
C70.....	E 3	M132.....车窗升降马达，后门左侧 .	B 4
C71	E 3	M133.....车窗升降马达，后门右侧 .	B 4
C108	E 2	N298.....车窗控制开关，后门左侧 ..	E 2
C109	E 2	N299.....车窗控制开关，后门右侧 ..	E 2
C110	B 4		

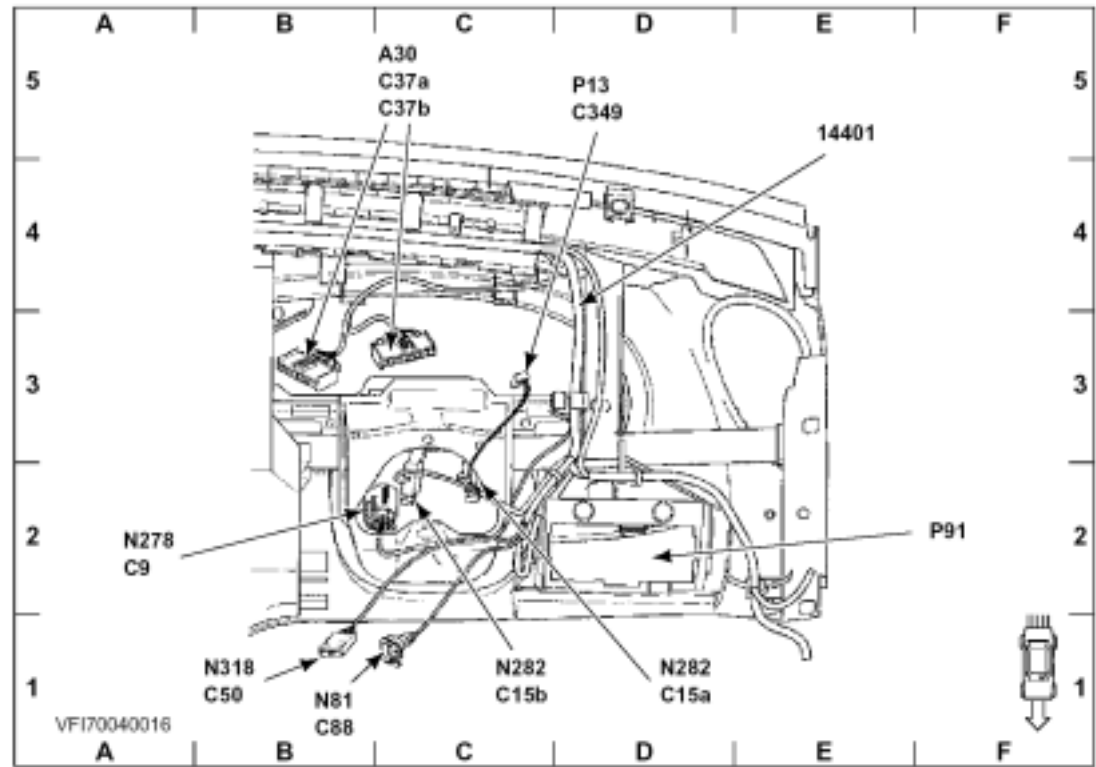


仪表板，驾驶员侧，后视图

14401	主线束	E 5	C50		B 1
A30	组合仪表.....	C 5	C204		D 5
A102	被动防盗收发器模块	D 5	N278	点火开关	A 2
C9		A 2	N282	多功能开关	C 1
C15b		C 1	N282	多功能开关	D 1
C15a		D 1	N318	制动灯开关	B 1
C37a		C 5	P91	中央接线盒 (CJB).....	F 2
C37b		C 5			

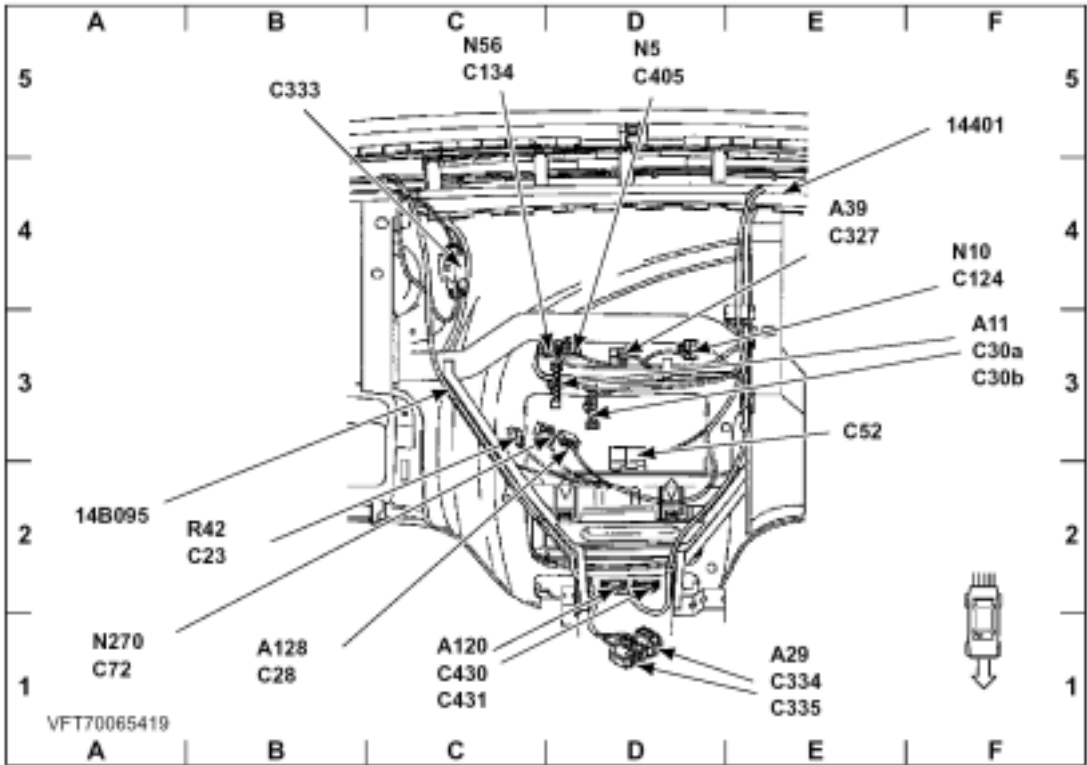


仪表板，中心，后视图

14B095 . 线束-安全气囊	A 2	C134	C 5
14401 ... 主线束	F 5	C327	E 4
A11 收音机	F 3	C333	B 5
A29 安全气囊模块	E 1	C334	E 1
A39 时钟	E 4	C335.....	E 1
A120..... 自动变速箱模块.....	C 1	C405.....	D 5
A128 加热控制模块	B 1	C430	C 1
C23.....	B 2	C431.....	C 1
C28	B 1	N5 后雾灯开关	D 5
C30a	F 3	N10 后风窗加热器开关	F 4
C30b	F 3	N56 前雾灯开关	C 5
C52.....	E 3	N270..... 暖风机开关	A 1
C72	A 1	R42 前点烟器.....	B 2
C124	F 4		

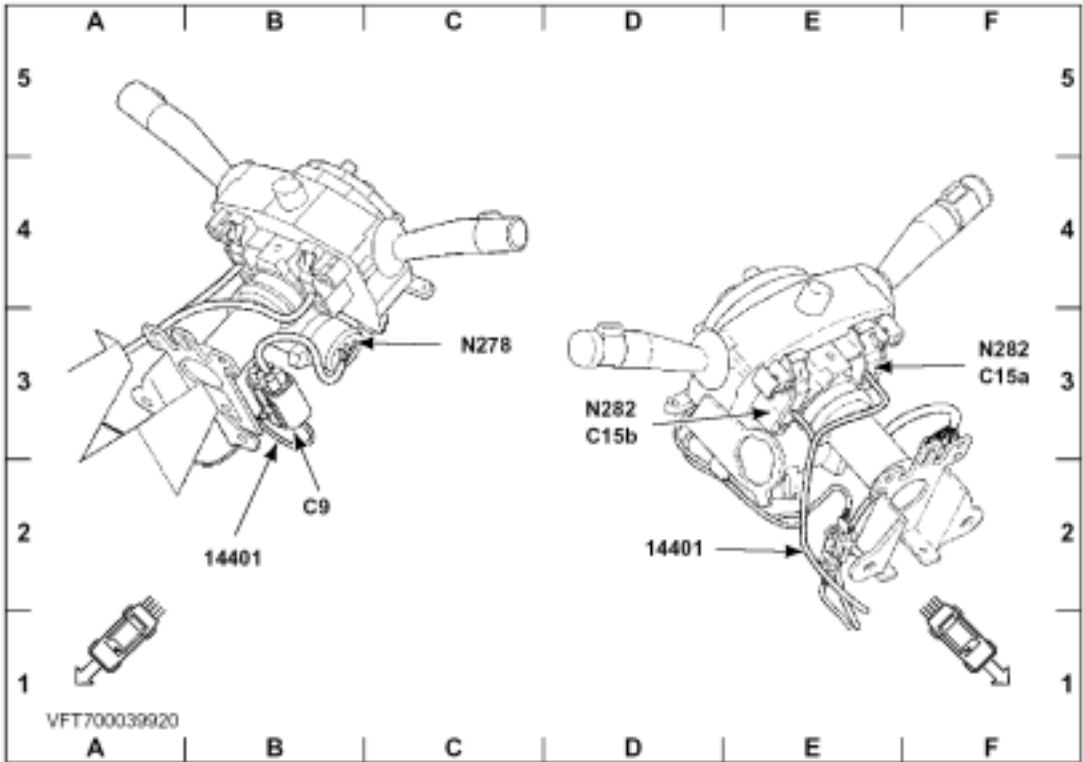


转向柱

14401 主线束	D 2	C15b.....	D 3
14401主线束	B 2	N278点火开关	C 3
C9	B 2	N282多功能开关	F 3
C15a	F 3	N282 多功能开关	D 3

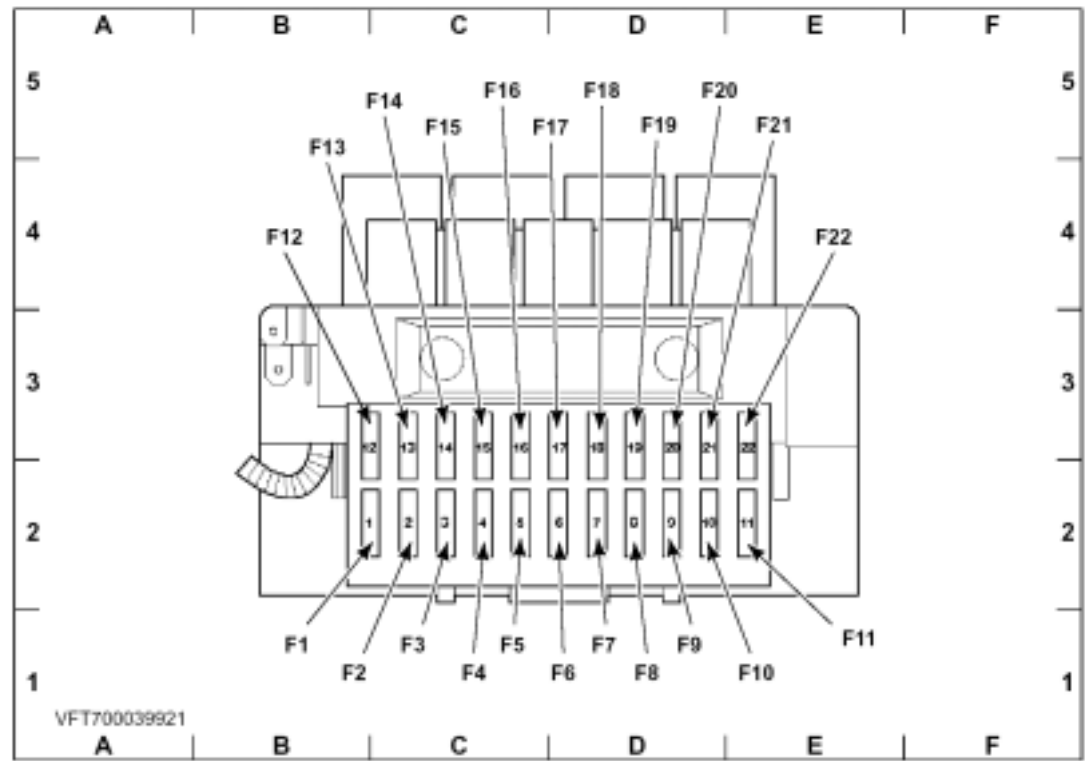

中央接线盒(CJB), 前视图

F1	B 1	F12	B 4
F2	B 1	F13	B 5
F3	C 1	F14	C 5
F4	C 1	F15	C 5
F5	C 1	F16	C 5
F6	D 1	F17	D 5
F7	D 1	F18	D 5
F8	D 1	F19	D 5
F9	D 1	F20	D 5
F10	E 1	F21	E 5
F11	E 1	F22	E 4

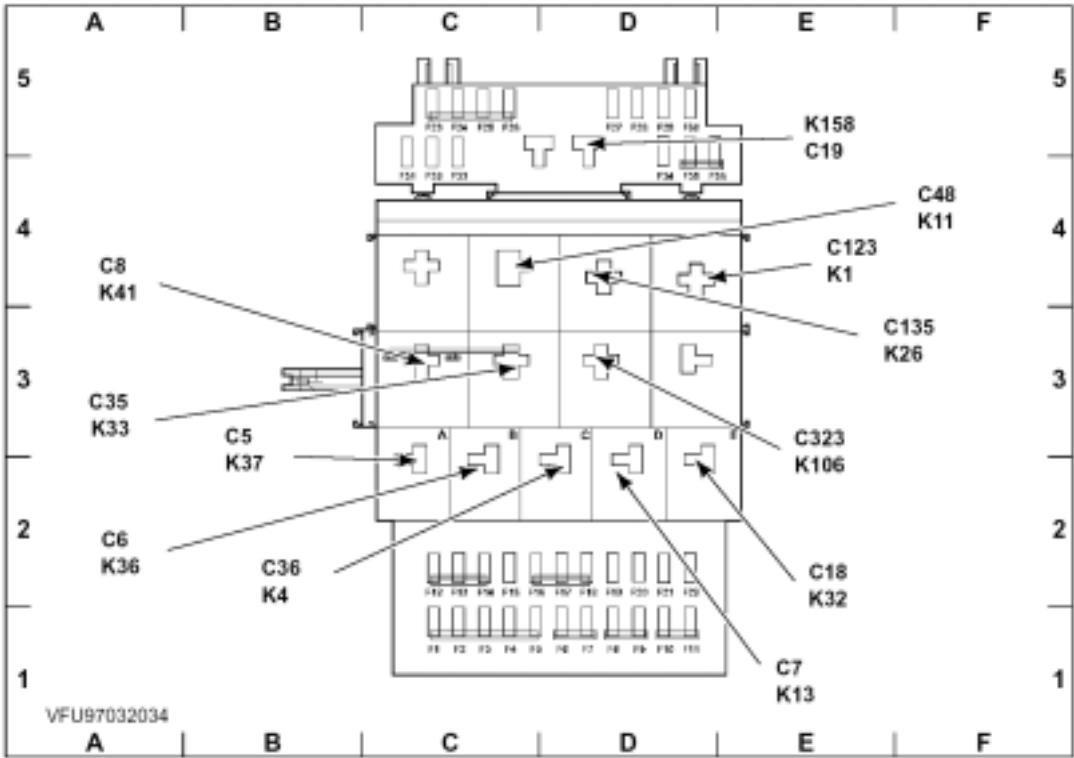

中心接线盒(CJB), 俯视图

C5	B 3	K1	后风窗加热继电器	E 4
C6	A 2	K4	燃油泵继电器	B 2
C7	E 1	K11	前间歇档雨刮继电器.....	F 4
C8	A 4	K13	电源保持继电器	E 1
C18.....	E 2	K26	前雾灯继电器.....	F 3
C19.....	E 5	K32	空调全开节气门(WOT)继电器	E 2
C35	A 3	K33	喇叭继电器	A 3
C36	B 2	K36	近光继电器	A 2
C48	F 4	K37	远光继电器	B 2
C123.....	E 4	K41	点火继电器	A 4
C135.....	F 3	K106	防盗闪光继电器	E 2
C323.....	E 3	K158	空调开关继点器	E 5