


Air conditioner with automatic control

From model year 2000

Fuse box

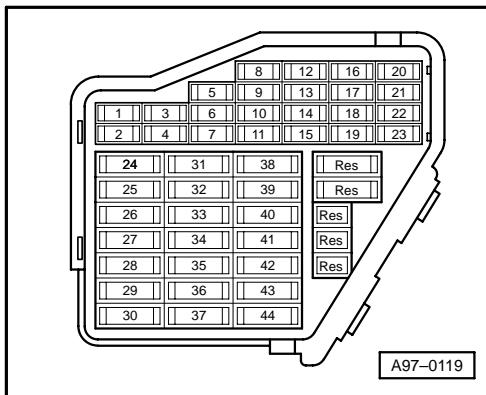


Fuse colours:

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7.5 A - brown
- 5 A - beige

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.


13-point relay carrier

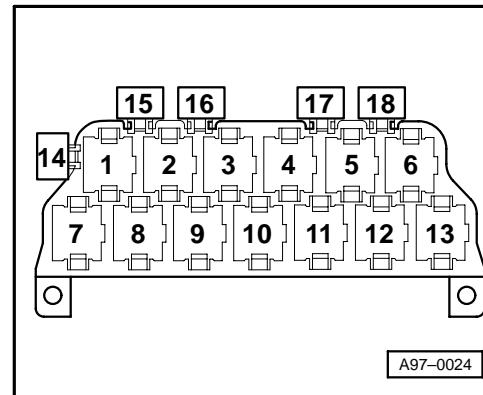


Position of relays:


- 3** - Solar cell isolation relay (J309)
- 5** - Magnetic coupling relay (J44)

Micro-central electrics

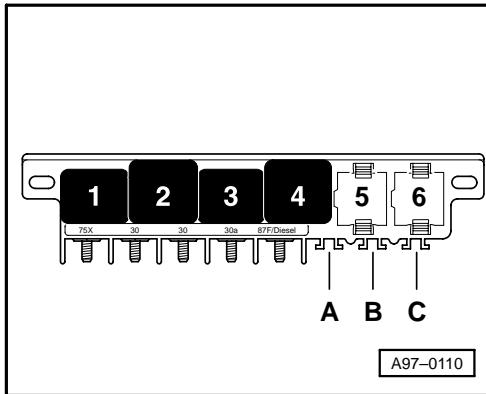

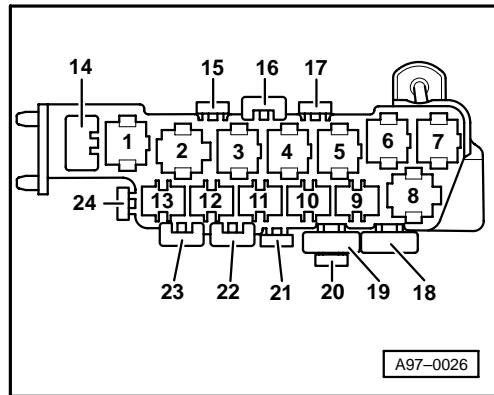8-point relay carrier**Position of relays:**


- 1** - Radiator fan run-on relay (J138)
- 2** - Radiator fan 2nd speed relay (J101)
- 3** - Radiator fan relay (J26)
- 20** - Radiator fan single fuse (S42)
- 21** - Radiator fan control unit fuse (S142)

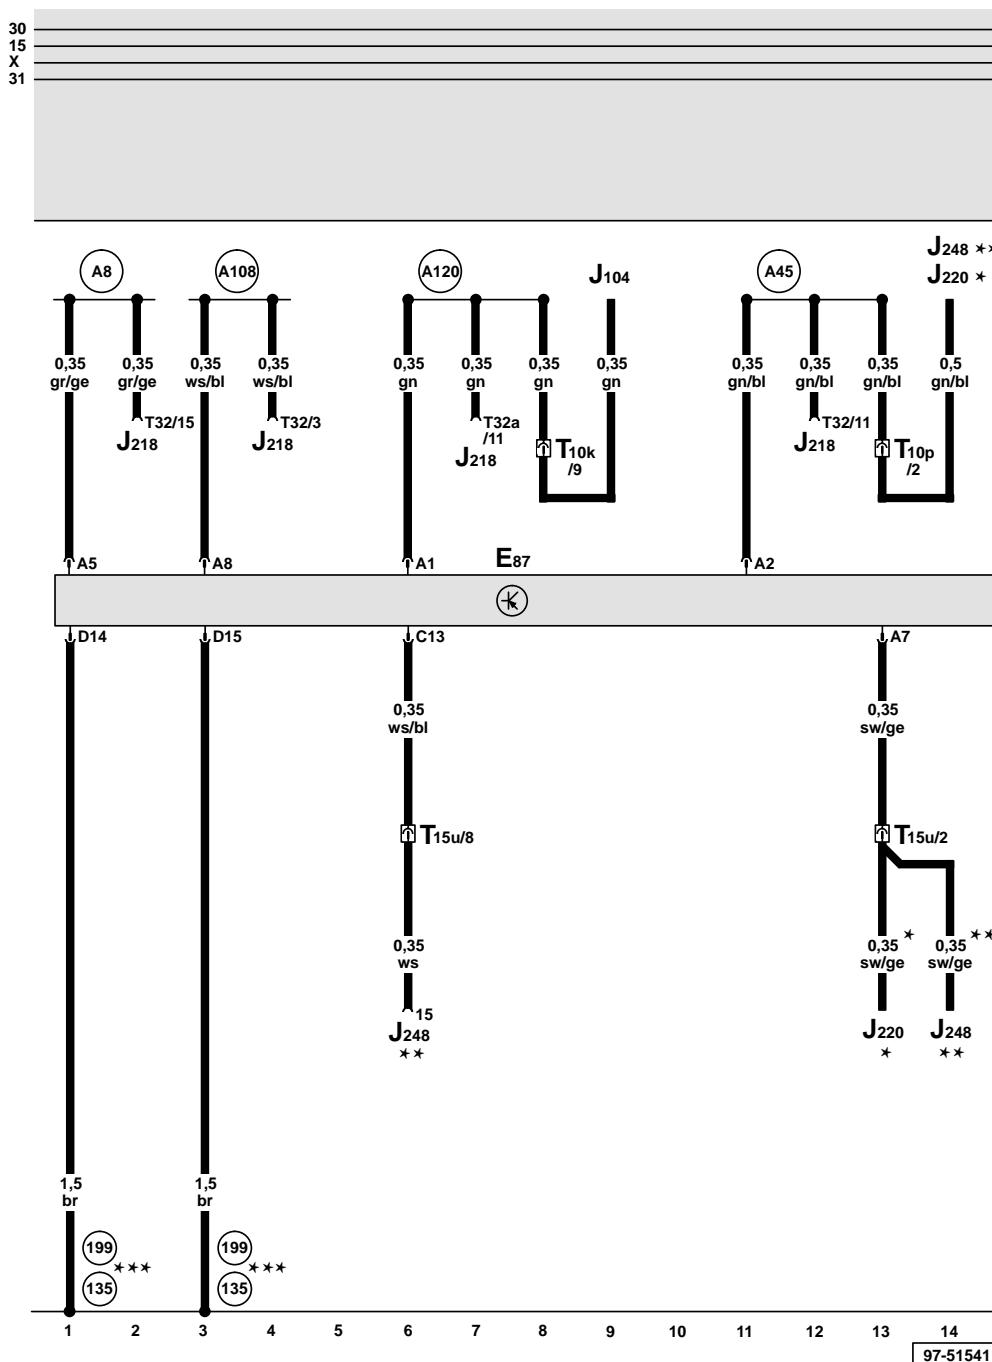

Control and display unit for air conditioner


- E87 – Control and display unit for air conditioner
- J104 – ABS with EDL control unit
- J218 – Combi-processor in dash panel insert
- J220 – Motronic control unit
- J248 – Diesel direct injection system control unit
- T10k – 10-pin connector, orange, connector point, A pillar, left
- T10p – 10-pin connector, black, connector point, electronics box, plenum chamber
- T15u – 15-pin connector, red, connector point, electronics box, plenum chamber
- T32 – 32-pin connector, blue, on dash panel insert
- T32a – 32-pin connector, green, on dash panel insert
- (135) – Earth connection -2-, in dash panel wiring harness
- (199) – Earth connection -3-, in dash panel wiring harness
- (A8) – Positive (+) connection (58d), in dash panel wiring harness (display illumination)
- (A45) – Connection (engine speed signal), in dash panel wiring harness
- (A108) – Connection (speed signal), in dash panel wiring harness
- (A120) – Connection (stationary time), in dash panel wiring harness
- * – Models with petrol engines
- ** – Models with diesel engines
- *** – Both possible

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow

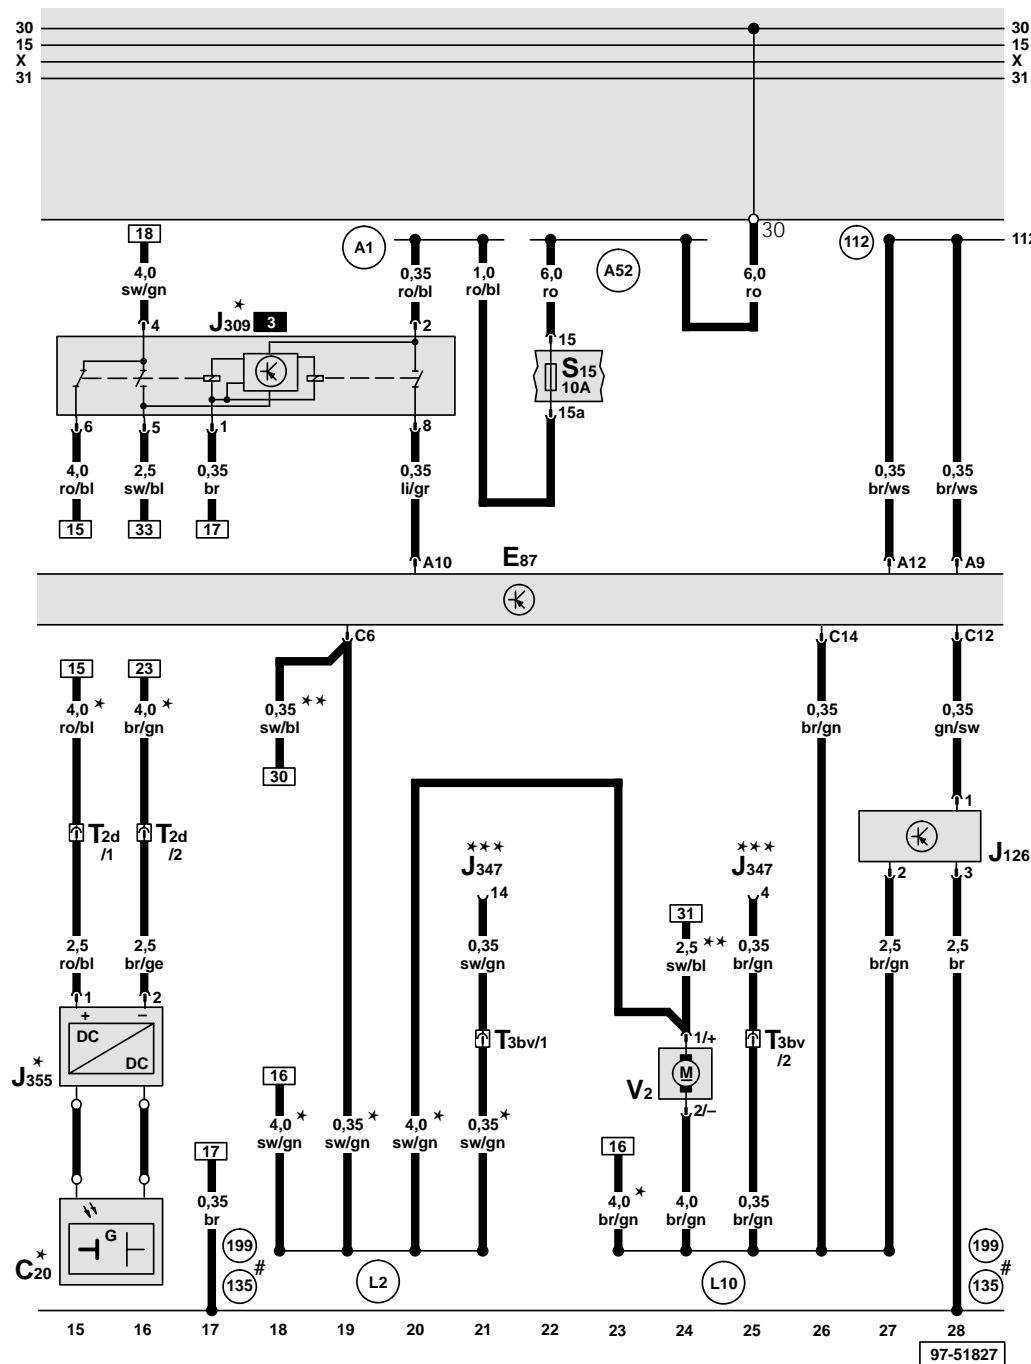

Vent temperature sender, fresh air blower, solar roof


- C20 – Solar cells
- E87 – Control and display unit for air conditioner
- J126 – Fresh air blower control unit
- J309 – Solar cell isolation relay
- J347 – Ultra-sonic sensor control unit
- J355 – Solar operation control unit
- S15 – Fuse in fuse box
- T2d – 2-pin connector, blue, connector point, A pillar, left
- T3bv – 3-pin connector, orange, connector point, A pillar, right
- V2 – Fresh air blower
- (112) – Earth connection -2-, in air conditioner wiring harness
- (135) – Earth connection -2-, in dash panel wiring harness
- (199) – Earth connection -3-, in dash panel wiring harness
- (A1) – Positive (+) connection (30a), in dash panel wiring harness
- (A52) – Positive (+) connection -2- (30), in dash panel wiring harness
- (L2) – Connection, in air conditioner wiring harness
- (L10) – Connection -2-, in air conditioner wiring harness
- * – Models with solar roof
- ** – Models without solar roof
- *** – Models with anti-theft alarm system
- # – Both possible

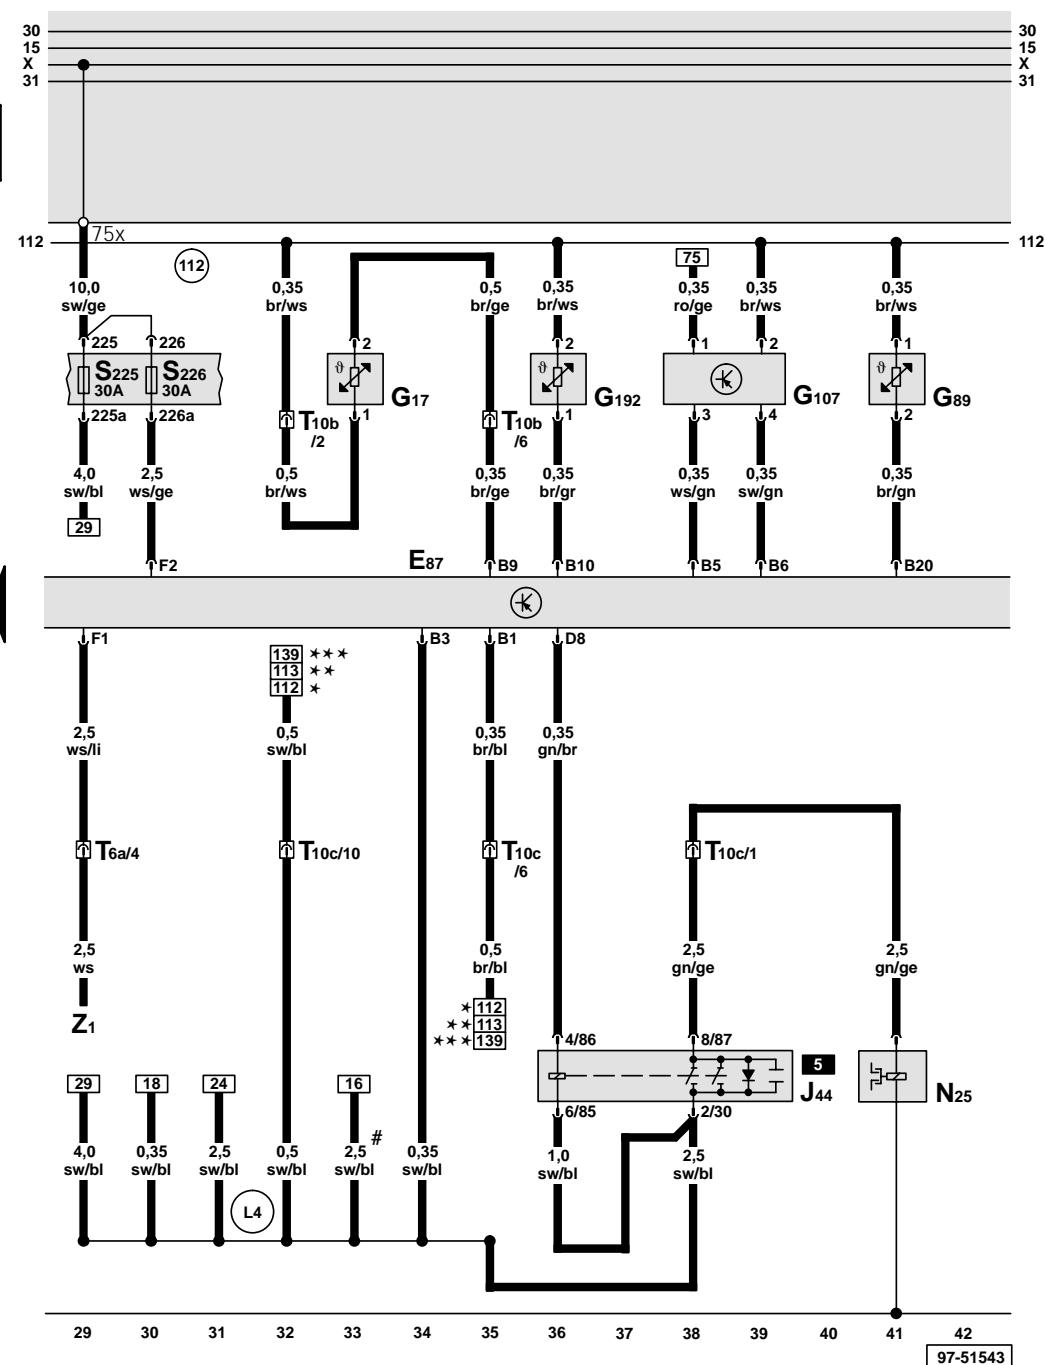

Air conditioning system magnetic coupling,
magnetic coupling relay, ambient temperature
sensor

- E87 – Control and display unit for air conditioner
- G17 – Ambient temperature sensor
- G89 – Fresh air intake duct temperature sensor
- G107 – Sunlight penetration photo sensor
- G192 – Vent temperature sender, footwell
- J44 – Magnetic coupling relay
- N25 – Air conditioner magnetic coupling
- S225 – Fuse 25 in fuse box
- S226 – Fuse 26 in fuse box
- T6a – 6-pin connector, blue, connector point, A pillar, left
- T10b – 10-pin connector, red, connector point, A pillar, left
- T10c – 10-pin connector, grey, connector point, A pillar, left
- Z1 – Heated rear window
- (112) – Earth connection -2-, in air conditioner wiring harness
- (L4) – Connection (75 a), in air conditioner wiring harness
- * – Only models with radiator fan control unit for petrol engines
- ** – Only models with radiator fan relay for petrol engines
- *** – Models with diesel engines
- # – Models with solar roof


ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow

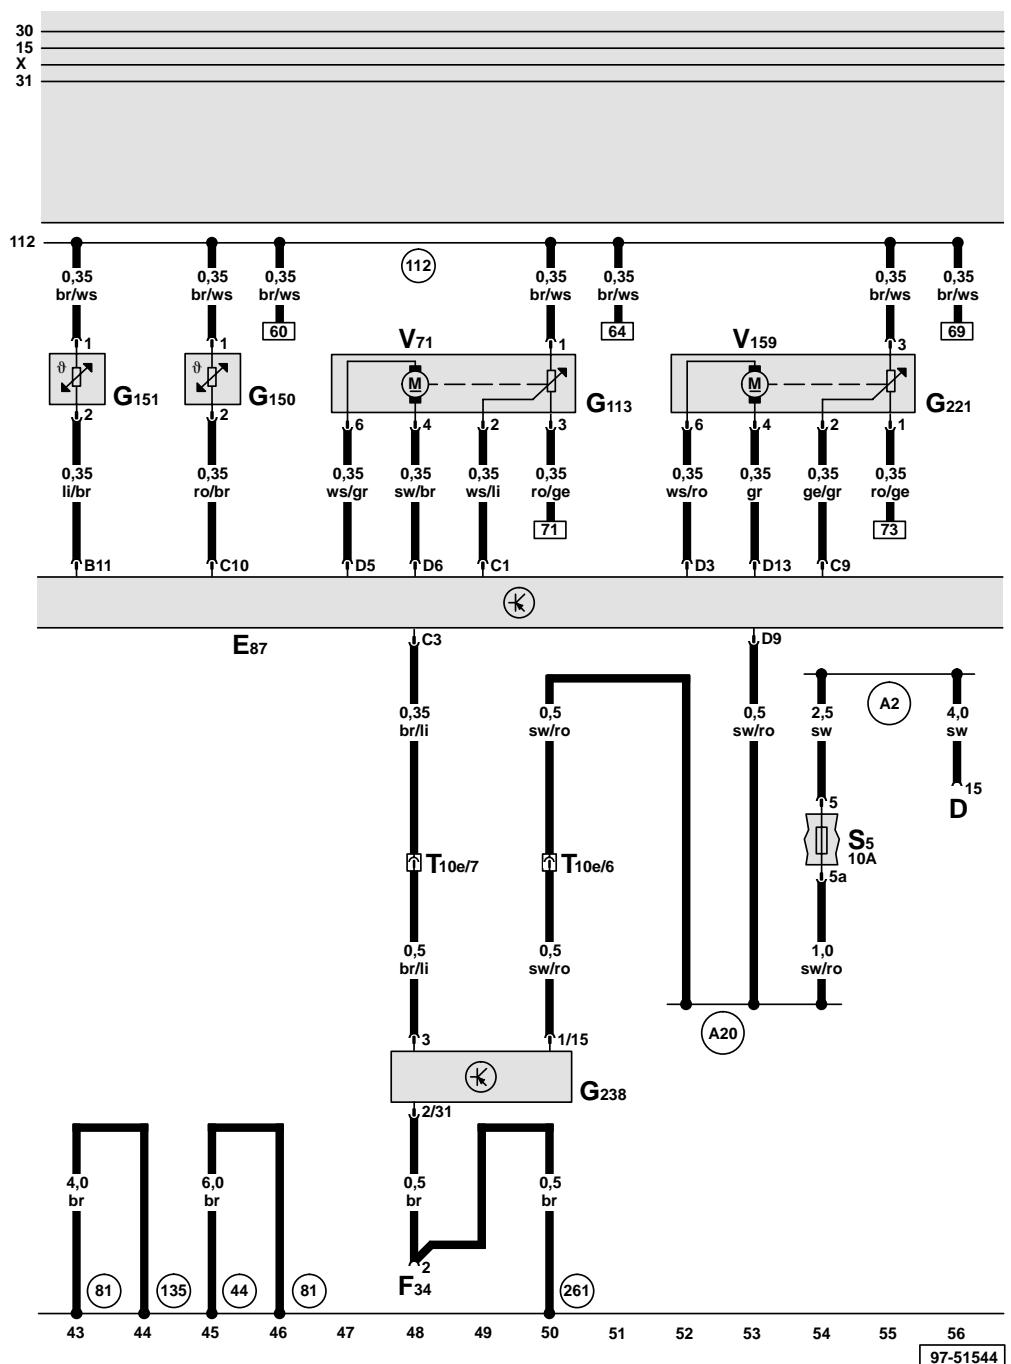

Air flow flap control motor, control motor for right temperature flap, vent temperature senders, air quality sensor


- D - Ignition/starter switch
 - E87 - Control and display unit for air conditioner
 - F34 - Brake fluid level warning contact
 - G113 - Control motor potentiometer, air flow flap
 - G150 - Left vent temperature sender
 - G151 - Right vent temperature sender
 - G221 - Control motor potentiometer, right temperature flap
 - G238 - Air quality sensor
 - S5 - Fuse in fuse box
 - T10e - 10-pin connector, purple, connector point, A pillar, left
 - V71 - Air flow flap control motor
 - V159 - Temperature flap control motor, right
 - (44) - Earth point, lower part of left A-pillar
 - (81) - Earth connection -1-, in dash panel wiring harness
 - (112) - Earth connection -2-, in air conditioner wiring harness
 - (135) - Earth connection -2-, in dash panel wiring harness
 - (261) - Earth connection, in heated washer jet wiring harness
 - (A2) - Positive (+) connection (15), in dash panel wiring harness
 - (A20) - Connection (15a), in dash panel wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow

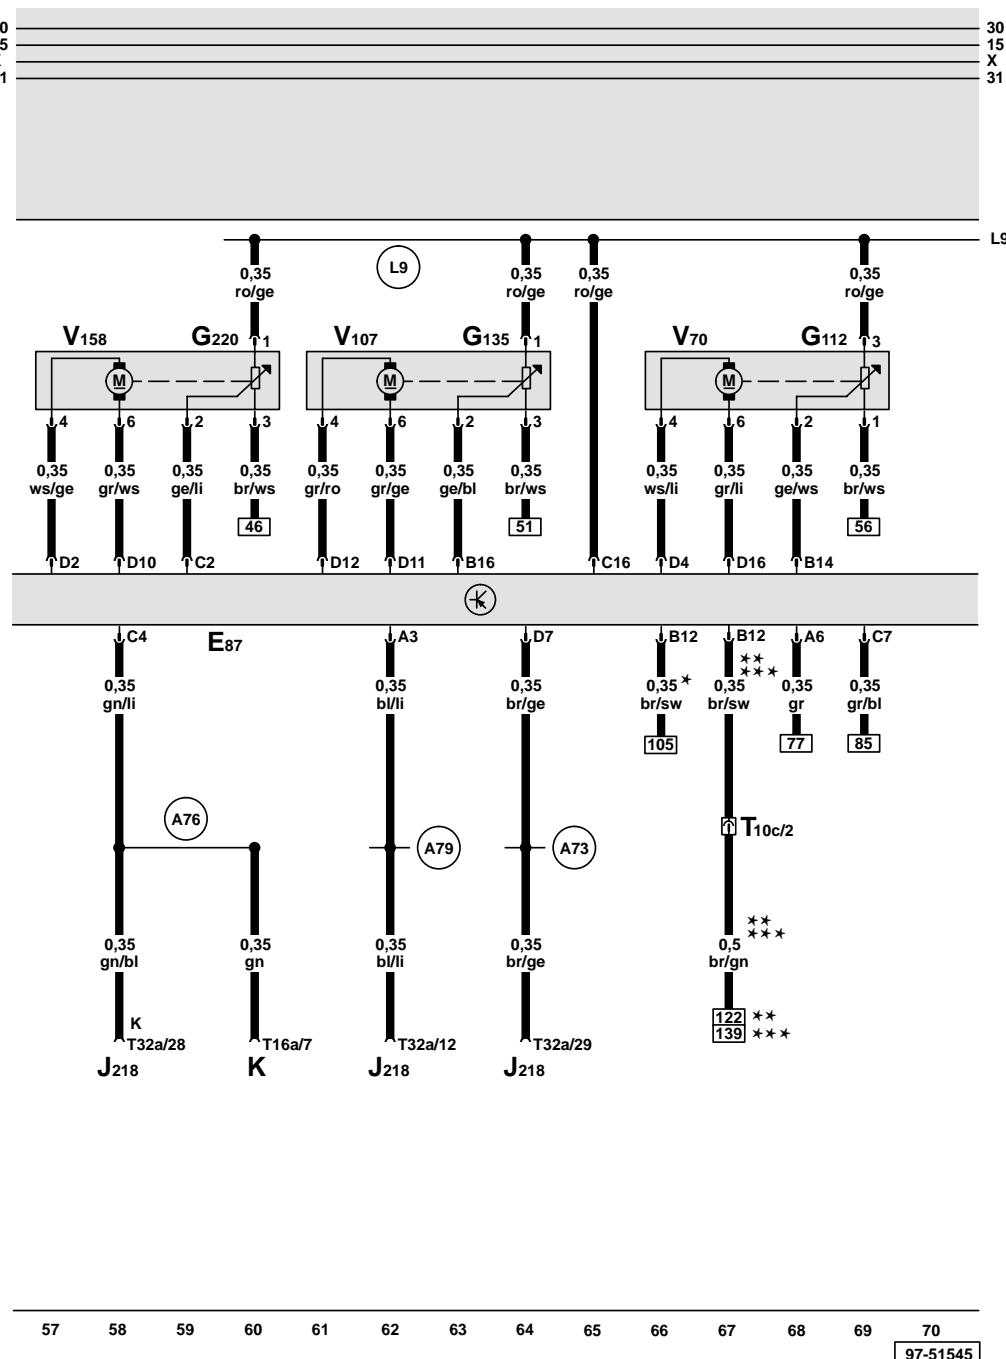


Control motors, potentiometers

- E87 – Control and display unit for air conditioner
- G112 – Control motor potentiometer, central flap
- G135 – Control motor potentiometer, defroster flap
- G220 – Control motor potentiometer, left temperature flap
- J218 – Combi-processor in dash panel insert
- K – Diagnosis connection
- T10c – 10-pin connector, grey, connector point, A pillar, left
- T16a – 16-pin connector, diagnosis connection
- T32a – 32-pin connector, green, on dash panel insert
- V70 – Central flap control motor
- V107 – Defroster flap control motor
- V158 – Temperature flap control motor, left
- (A73) – Connection (ambient temperature display), in dash panel wiring harness
- (A76) – Connection (diagnosis wire K), in dash panel wiring harness
- (A79) – Connection (hot light switch), in dash panel wiring harness
- (L9) – Connection -1-, in air conditioner wiring harness
- * – Only models with radiator fan control unit for petrol engines
- ** – Only models with radiator fan relay for petrol engines
- *** – Models with diesel engines


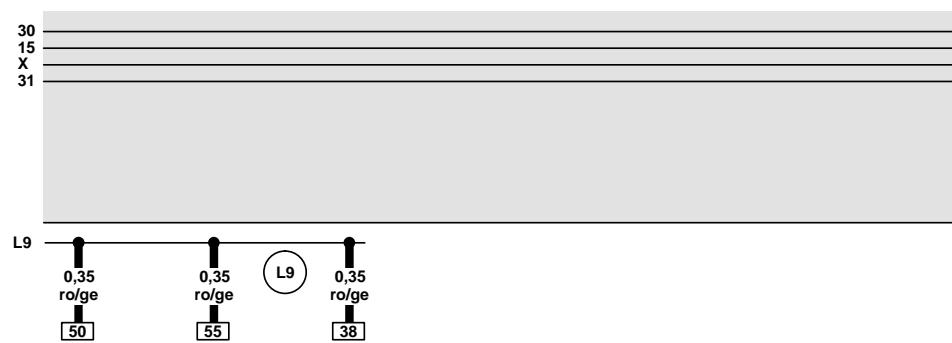

Control and display unit for air conditioner, fuses 3, 4

- E1 – Lighting switch
- E22 – Intermittent wiper switch
- E87 – Control and display unit for air conditioner
- J31 – Automatic intermittent wash/wipe relay
- J220 – Motronic control unit
- J248 – Diesel direct injection system control unit
- S3 – Fuse in fuse box
- S4 – Fuse in fuse box
- T8I – 8-pin connector, behind dash panel, right
- T10f – 10-pin connector, brown, connector point, A pillar, left
- T15u – 15-pin connector, red, connector point, electronics box, plenum chamber
- W6 – Glove box light
- X – Number plate light

- (A53) – Positive (+) connection (58), in dash panel wiring harness
- (A68) – Connection (C15, air conditioner), in dash panel wiring harness
- (A96) – Connection (53c), in dash panel wiring harness
- (L9) – Connection -1-, in air conditioner wiring harness
- * – Models with petrol engines
- ** – Models with diesel engines

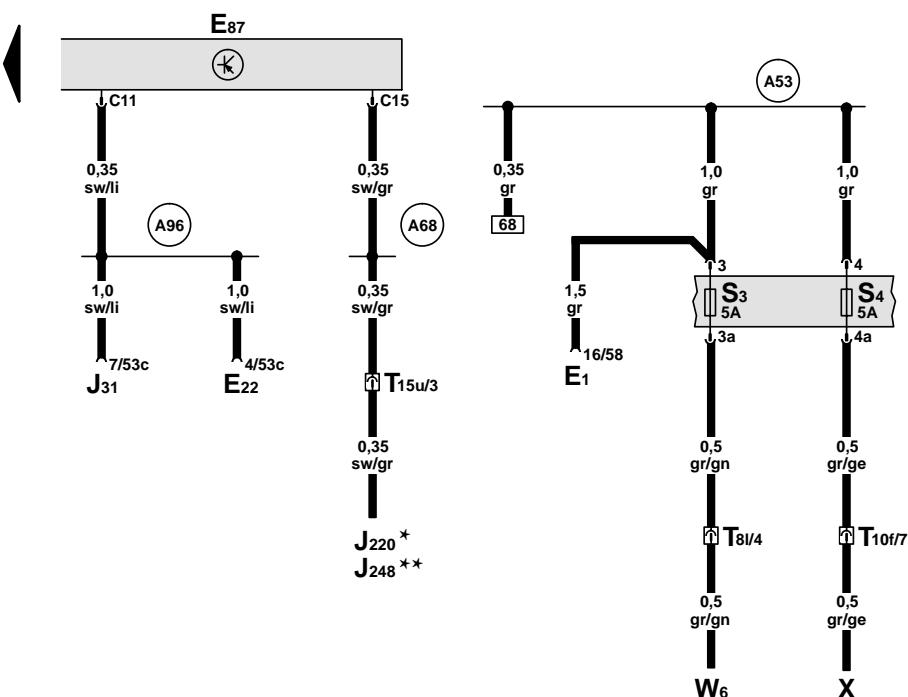

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow

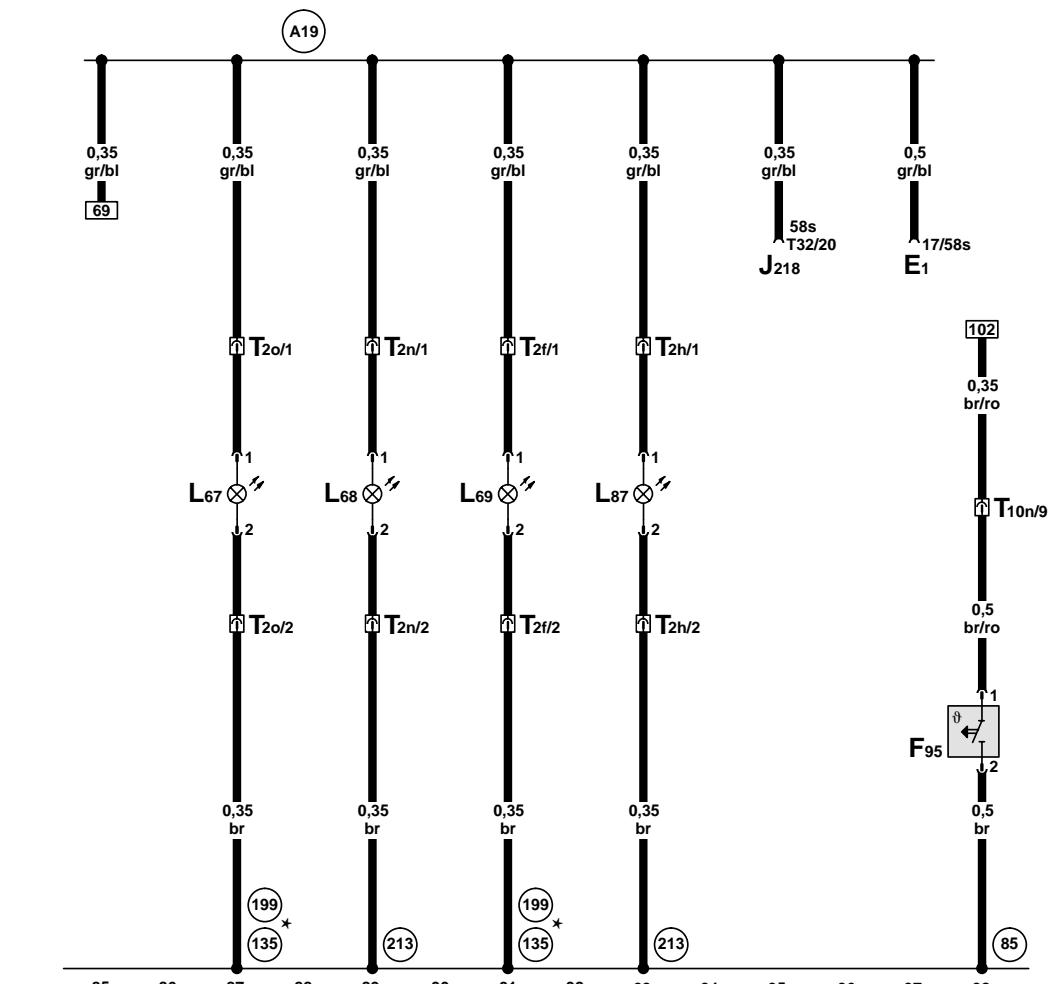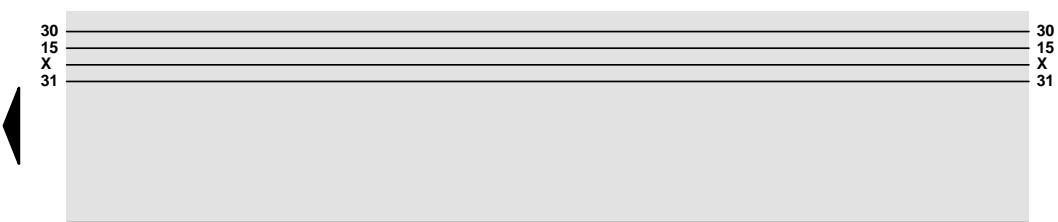


Illumination for dash panel vents

- | | |
|-------|--|
| E1 | - Lighting switch |
| F95 | - Thermo-switch for continued coolant circulation |
| J218 | - Combi-processor in dash panel insert |
| L67 | - Dash panel left vent illumination |
| L68 | - Dash panel central vent illumination |
| L69 | - Dash panel right vent illumination |
| L87 | - Central rear vent illumination |
| T2f | - 2-pin connector, brown, behind dash panel, right |
| T2h | - 2-pin connector, black, in centre console |
| T2n | - 2-pin connector, brown, behind dash panel, centre |
| T2o | - 2-pin connector, brown, behind dash panel, left |
| T10n | - 10-pin connector, orange, connector point, electronics box, plenum chamber |
| T32 | - 32-pin connector, blue, on dash panel insert |
| (85) | - Earth connection -1-, in engine compartment wiring harness |
| (135) | - Earth connection -2-, in dash panel wiring harness |
| (199) | - Earth connection -3-, in dash panel wiring harness |
| (213) | - Earth connection -4-, in dash panel wiring harness |
| (A19) | - Connection (58s), in dash panel wiring harness (switch illumination) |
- * - Both possible

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange

97-51547

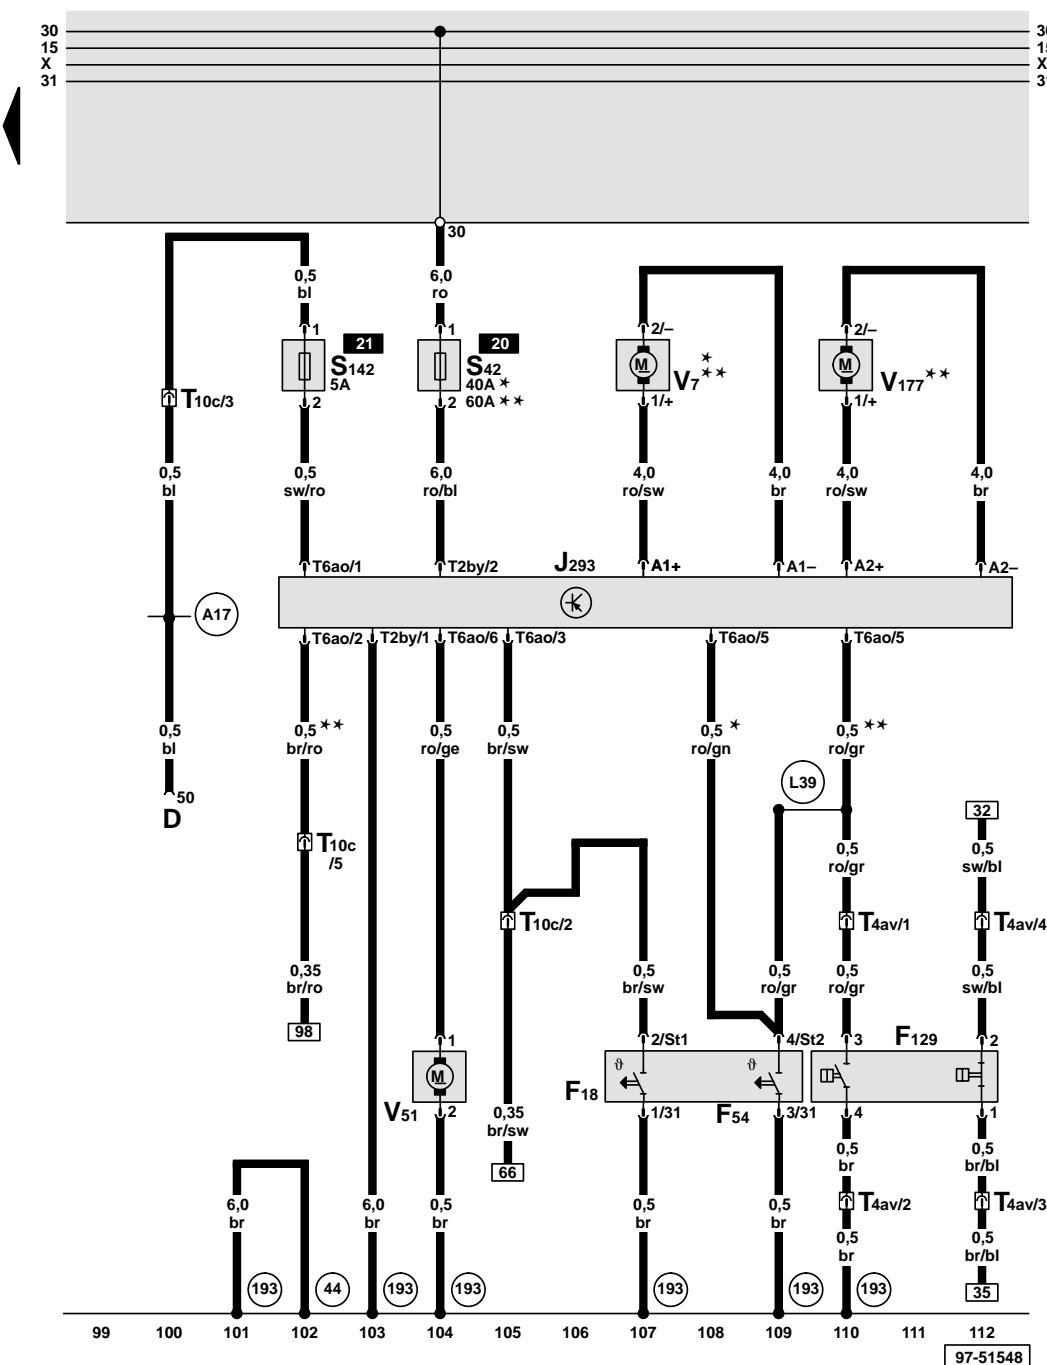


Engine cooling with radiator fan control unit for petrol engines

- D - Ignition/starter switch
- F18 - Radiator fan thermo-switch
- F54 - Radiator fan thermo-switch
- F129 - Air conditioner pressure switch
- J293 - Radiator fan control unit, in engine compartment, front left
- S42 - Radiator fan single fuse
- S142 - Radiator fan control unit fuse
- T2by - 2-pin connector, on radiator fan control unit
- T4av - 4-pin connector, red, in engine compartment, left
- T6ao - 6-pin connector, on radiator fan control unit
- T10c - 10-pin connector, grey, connector point, A pillar, left
- V7 - Radiator fan
- V51 - Continued coolant circulation pump
- V177 - Radiator fan -2-
- (44) - Earth point, lower part of left A pillar
- (193) - Earth connection -1-, in radiator fan wiring harness
- (A17) - Connection (61), in dash panel wiring harness
- (L39) - Connection (air conditioner pressure switch) -1-, in Climatronic wiring harness
- * - Radiator fan (300 W)
- ** - Radiator fan (300 W + 200 W)

WS = white
 SW = black
 RO = red
 BR = brown
 GN = green
 BL = blue
 GR = grey
 LI = purple
 GE = yellow
 OR = orange

99 100 101 102 103 104 105 106 107 108 109 110 111 112


97-51548

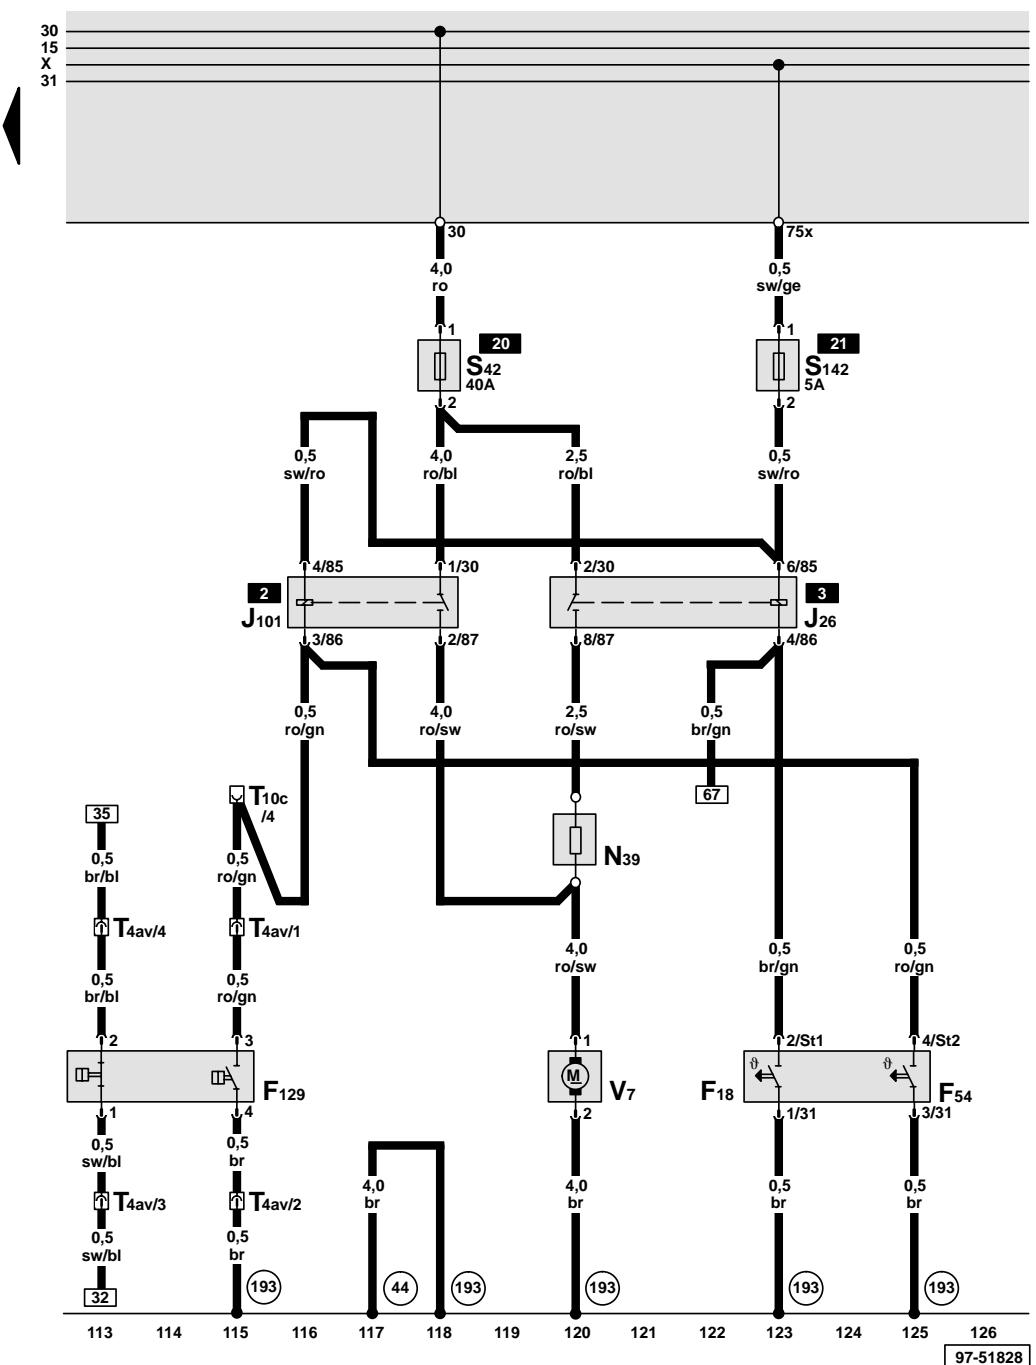

Engine cooling with radiator fan relay for petrol engines

- F18 – Radiator fan thermo-switch
- F54 – Radiator fan thermo-switch
- F129 – Air conditioner pressure switch
- J26 – Radiator fan relay
- J101 – Radiator fan 2nd speed relay
- N39 – Radiator fan series resistor
- S42 – Radiator fan single fuse
- S142 – Radiator fan control unit fuse
- T4av – 4-pin connector, red, in engine compartment, left
- T10c – 10-pin connector, grey, connector point, A pillar, left
- V7 – Radiator fan
- (44) – Earth point, lower part of left A pillar
- (193) – Earth connection -1-, in radiator fan wiring harness

WS = white
 SW = black
 RO = red
 BR = brown
 GN = green
 BL = blue
 GR = grey
 LI = purple
 GE = yellow
 OR = orange

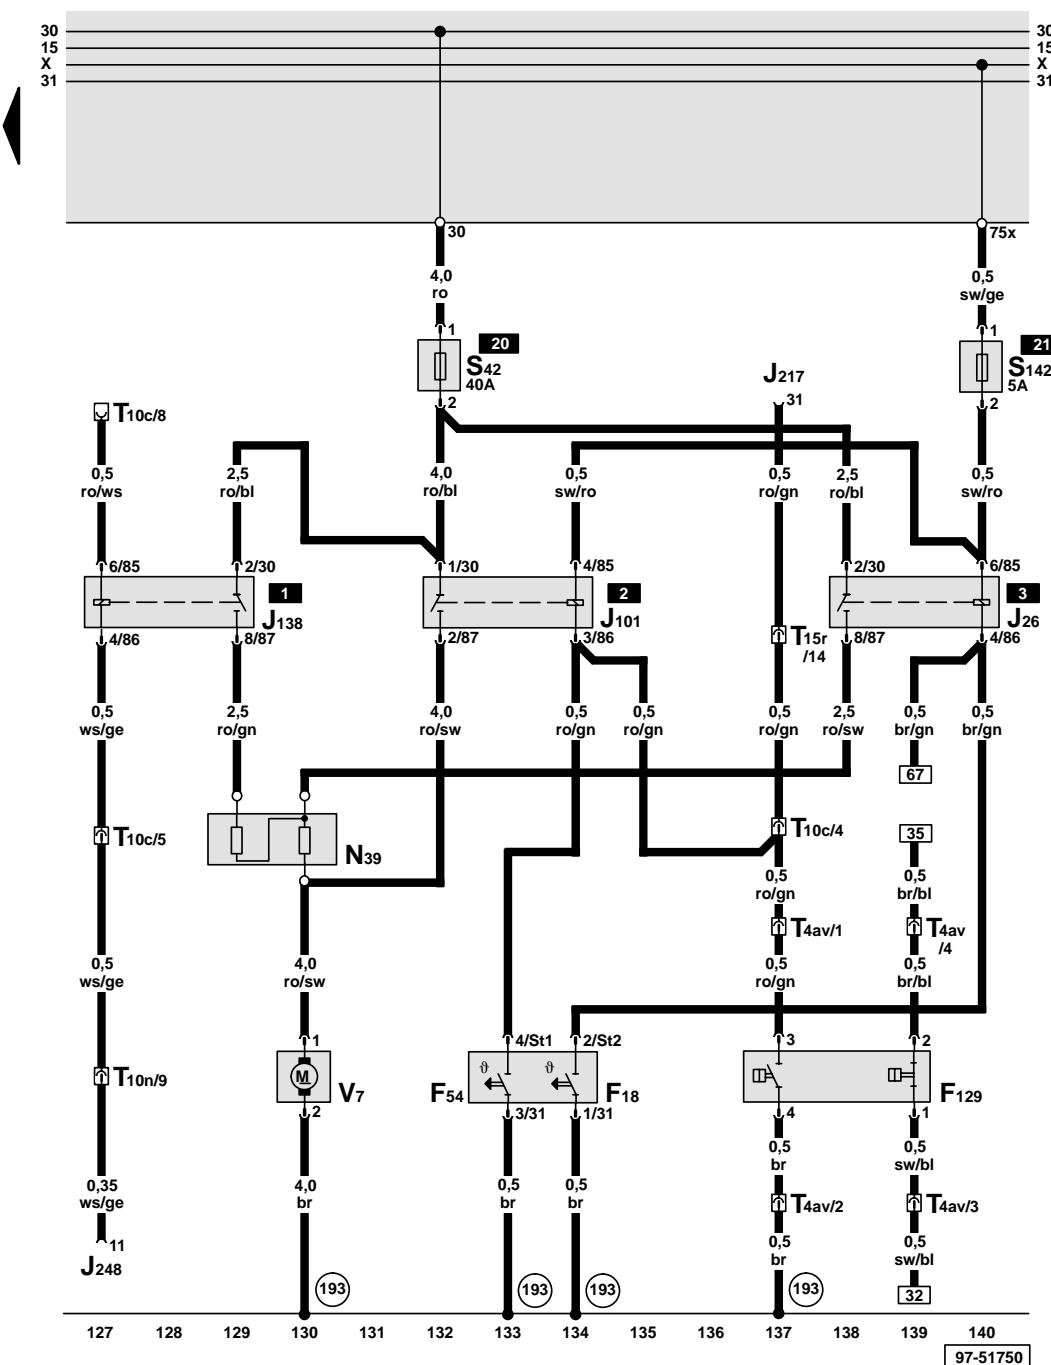

Engine cooling for diesel engines

- F18 – Radiator fan thermo-switch
- F54 – Radiator fan thermo-switch
- F129 – Air conditioner pressure switch
- J26 – Radiator fan relay
- J101 – Radiator fan 2nd speed relay
- J138 – Radiator fan run-on relay
- J217 – Automatic gearbox control unit
- J248 – Diesel direct injection system control unit
- N39 – Radiator fan series resistor
- S42 – Radiator fan single fuse
- S142 – Radiator fan control unit fuse
- T4av – 4-pin connector, red, in engine compartment, left
- T10c – 10-pin connector, grey, connector point, A pillar, left
- T10n – 10-pin connector, orange, connector point, electronics box, plenum chamber
- T15r – 15-pin connector, blue, connector point, A pillar, right
- V7 – Radiator fan
- (193) – Earth connection -1-, in radiator fan wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange