


CAN bus network, drive train,

from May 1999

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

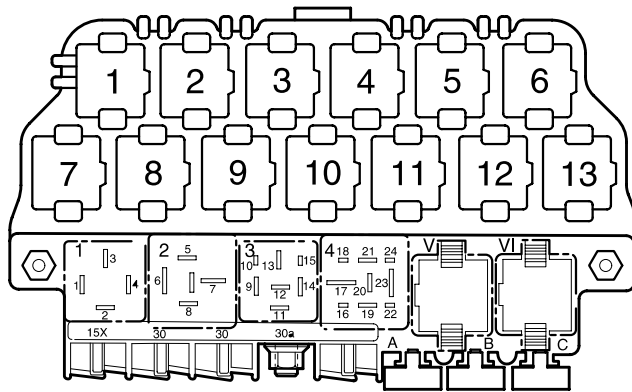

97-14163

Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7.5 A – brown
- 5 A – beige
- 3 A – lilac




Dash panel insert, diagnosis interface for data bus, self-diagnosis connection, airbag control unit connection

- D - Ignition/starter switch
- J234 - Airbag control unit
- J285 - Control unit with display in dash panel insert
- J533 - Diagnosis interface for data bus, in dash panel insert
- J... - Engine control unit
- S5 - Fuse in relay plate fuse box
- S12 - Fuse in relay plate fuse box
- T10 - 10-pin connector, orange, in protective housing for connectors, left in plenum chamber
- T16 - 16-pin connector, in centre of dash panel, self-diagnosis connection
- T32 - 32-pin connector, blue
- T32a - 32-pin connector, green
- T75 - 75-pin connector


- 42 - Earth point, next to steering column
- 81 - Earth connection -1-, in dash panel wiring harness
- 501 - Screw connection -2- (30), on relay plate
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A20 - Connection (15a), in dash panel wiring harness
- A76 - Connection (diagnosis wire K), in dash panel wiring harness
- A121 - Connection (high bus), in dash panel wiring harness
- A122 - Connection (low bus), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

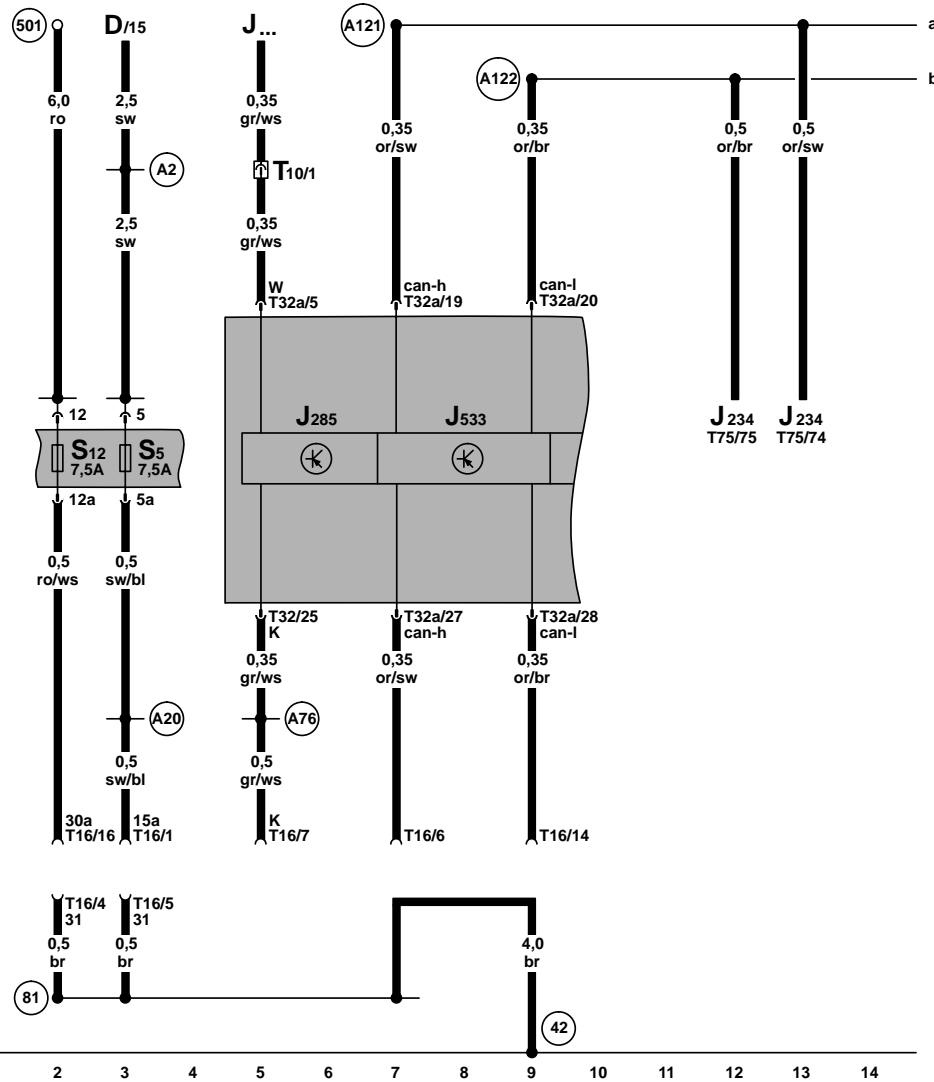

97-26631

Connection for: ABS with EDL control unit, steering angle sender, four-wheel drive control unit, automatic gearbox control unit, engine control unit

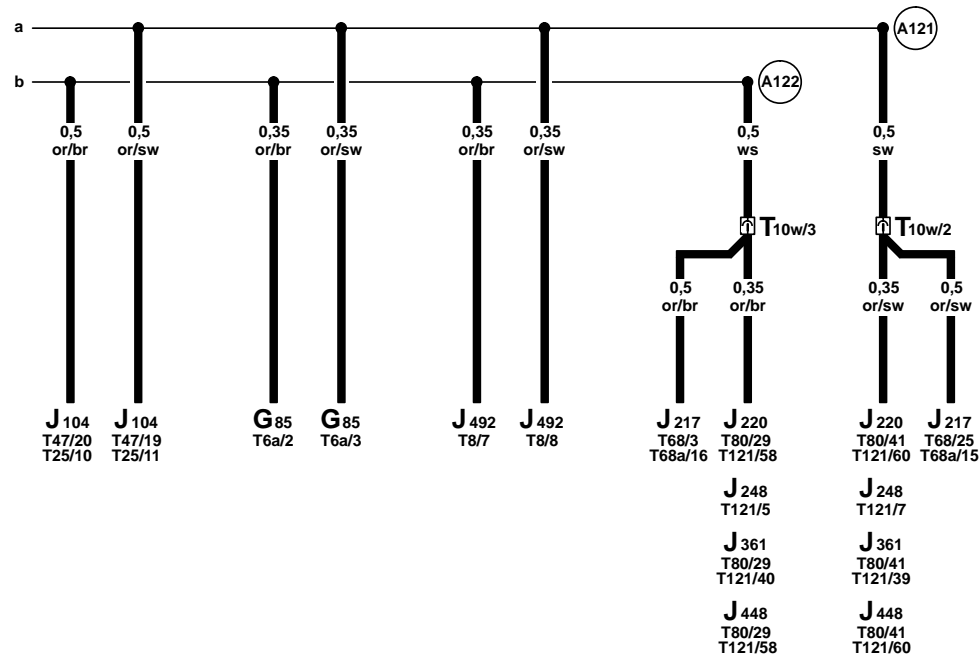

- G85 – Steering angle sender, on steering column
 - J104 – ABS with EDL control unit
 - J217 – Automatic gearbox control unit gearbox
 - J220 – Motronic control unit
 - J248 – Diesel direct injection system control unit
 - J361 – Simos control unit, in centre of plenum chamber
 - J448 – 4AV/4LV control unit (injection system)
 - J492 – Four-wheel drive control unit, near rear axle gearbox
 - T6a – 6-pin connector
 - T8 – 8-pin connector
 - T10w – 10-pin connector, white, in protective housing for connectors, left in plenum chamber
 - T25 – 25-pin connector, on control unit for ABS with EDL
 - T47 – 47-pin connector, control unit for ABS with EDL/TCS/ESP
 - T68 – 68-pin connector, for vehicles with 4 speed automatic gearbox (AG 4)
 - T68a – 68-pin connector, for vehicles with 5 speed automatic gearbox (AG 5)
 - T80 – 80-pin connector
 - T121 – 121-pin connector
- (A121) – Connection (high bus), in dash panel wiring harness
 (A122) – Connection (low bus), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange