


Electric seat adjustment front, memory for driver's seat and exterior mirror,

from May 1999

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

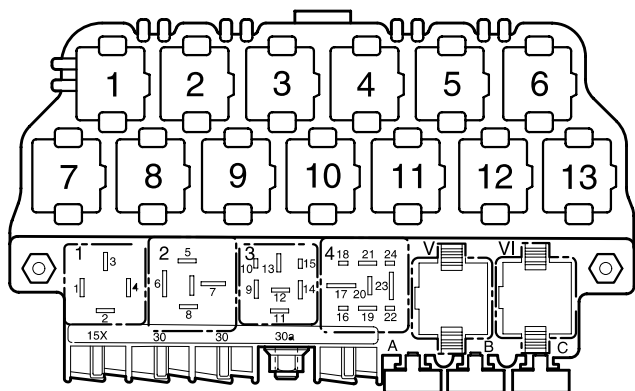

97-14163

Relay locations on the 13 position additional relay carrier above the relay plate:

Relay locations on relay plate:

- 2** X contact relief relay (100)

Note:

The number in brackets behind the part designation denotes the control number on the housing.


Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7.5 A - brown
- 5 A - beige
- 3 A - lilac




Seat adjustment (with memory) control unit, height adjustment button, longitudinal adjustment button, backrest adjustment switch driver's seat, "Emergency " "OFF" " switch" for memory funktion

- E96 – Backrest adjustment switch, driver's seat
- E190 – "Emergency " "OFF" " switch" for memory funktion
- E208 – Front height adjustment button, upwards, driver's seat
- E209 – Front height adjustment button, downwards, driver's seat
- E210 – Rear height adjustment button, upwards, driver's seat
- E211 – Rear height adjustment button, downwards, driver's seat
- E212 – Longitudinal adjustment button, forwards, driver's seat
- E213 – Longitudinal adjustment button, backwards, driver's set
- E218 – Memory seat driver's 1 button
- E219 – Memory seat driver's 2 button
- E220 – Memory seat driver's 3 button
- J136 – Seat adjustment with memory control unit, under driver's seat
- T16c – 16-pin connector
- T28 – 28-pin connector

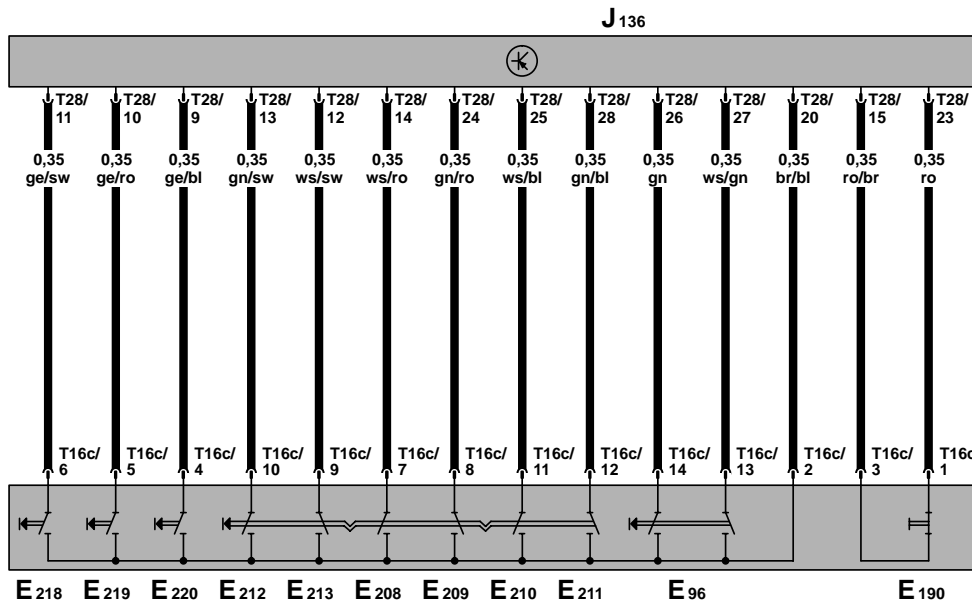

 - ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- ge = yellow
- or = orange



Seat adjustment (with memory) control unit, seat longitudinal adjustment motor, seat front height adjustment motor, seat rear height adjustment motor

J136 – Seat adjustment with memory control unit, under driver's seat

T4 – 4-pin connector

T4a – 4-pin connector


T4b – 4-pin connector

T12c – 12-pin connector

V28 – Seat longitudinal adjustment motor, driver's

V29 – Seat front height adjustment motor, driver's

V30 – Seat rear height adjustment motor, driver's

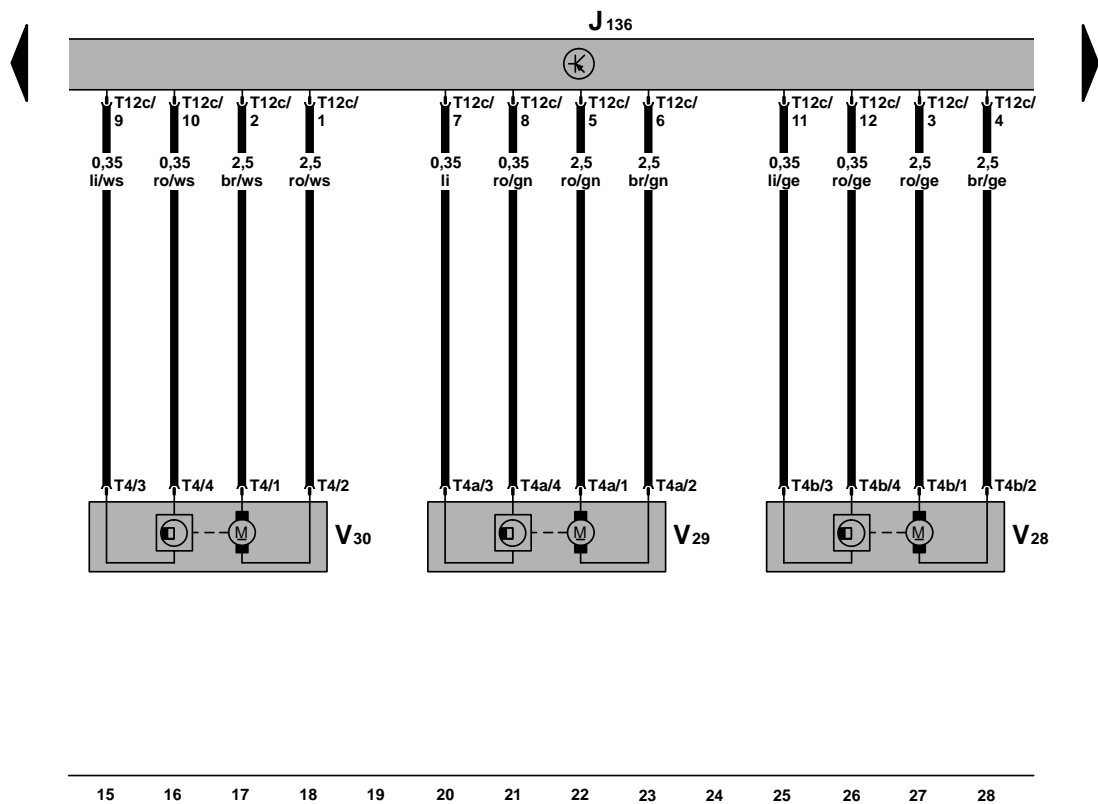


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

Seat adjustment (with memory) control unit, backrest (top) adjustment motor


- F4 - Reversing light switch
- J136 - Seat adjustment with memory control unit, under driver's seat
- J226 - Starter inhibitor and reversing light relay
- T4c - 4-pin connector
- T6g - 6-pin connector, red, under driver's seat
- T8d - 8-pin connector
- T10 - 10-pin connector, orange, in protective housing for connectors, in plenum chamber, left
- T10u - 10-pin connector, brown, connector point left A-pillar
- T28 - 28-pin connector
- V45 - Backrest adjustment motor, driver's seat

- (A34) - Connection (75x), in dash panel wiring harness
- (A87) - Connection (RL), in dash panel wiring harness
- (W39) - Connection -1- (mirror memory), in floor wiring harness
- (W45) - Connection -2- (mirror memory), in floor wiring harness

- \* - Only models with manual gearbox
- - Only models with automatic gearbox

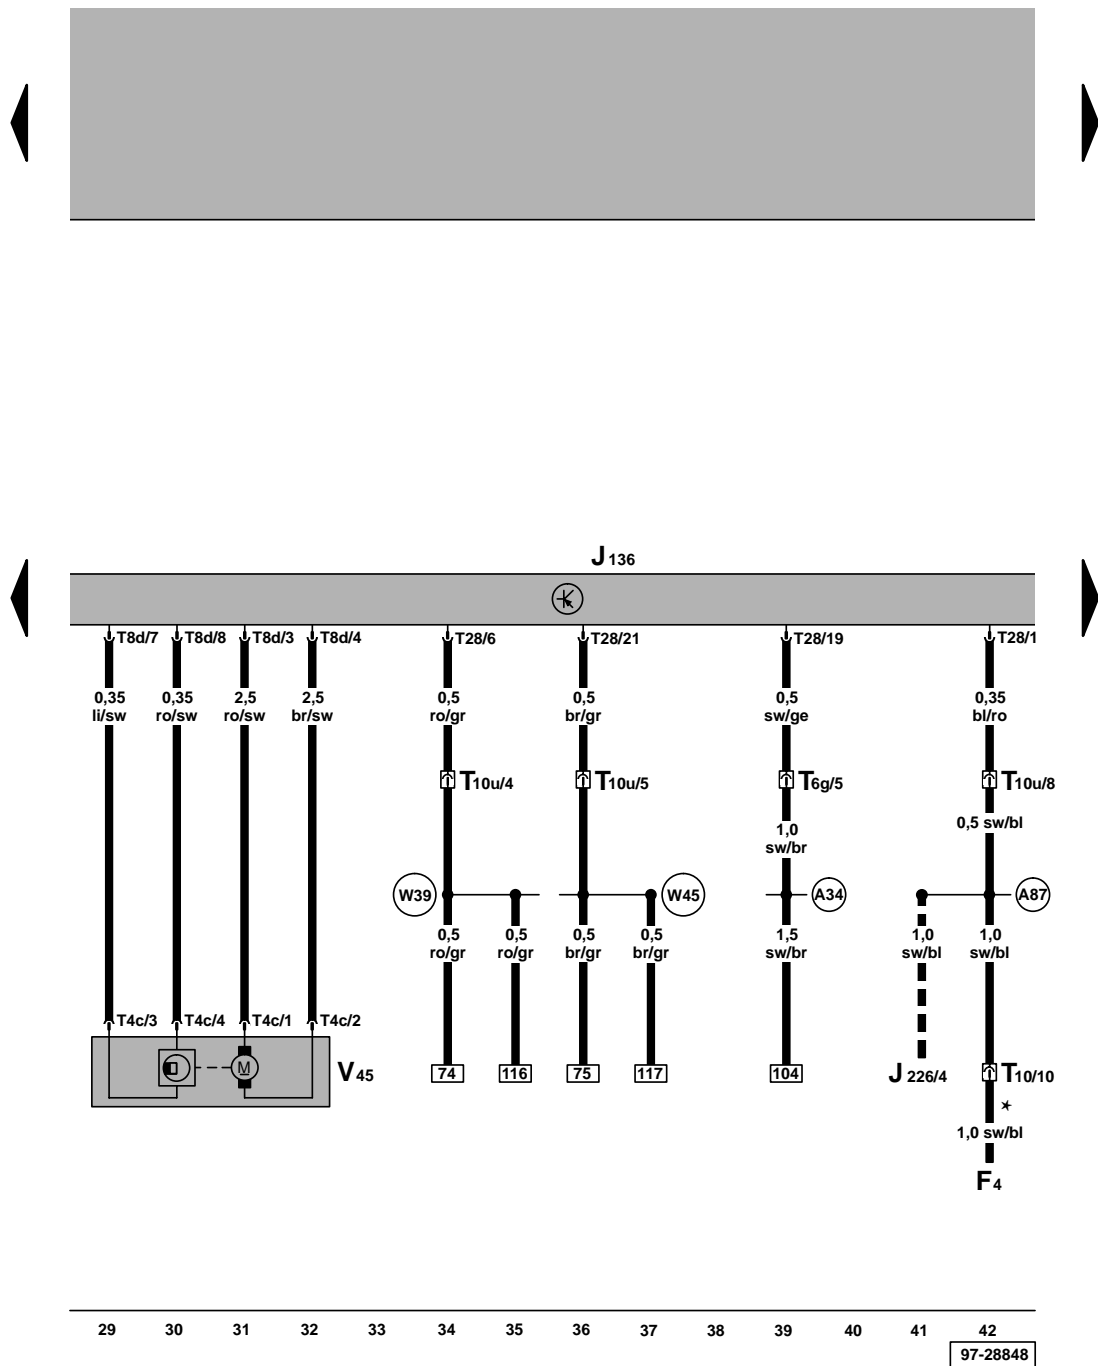

Seat adjustment (with memory) control unit, self-diagnosis connection

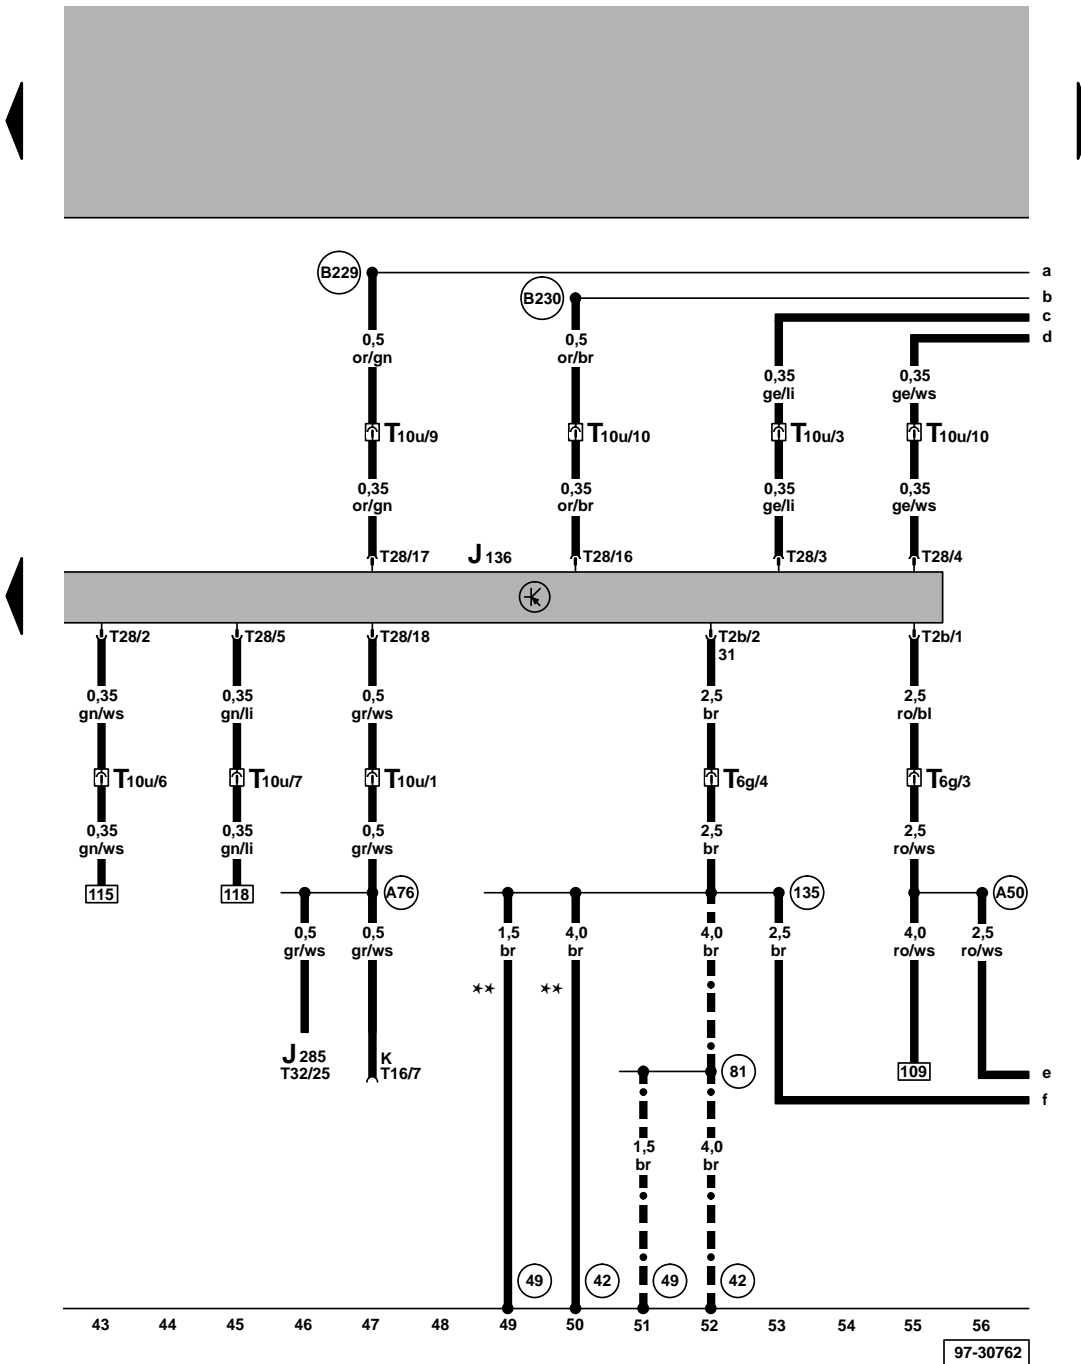

- J136 – Seat adjustment with memory control unit, under driver's seat
- J285 – Control unit with display in dash panel insert
- T2b – 2-pin connector
- T6g – 6-pin connector, red, under driver's seat
- T10u – 10-pin connector, brown, connector point left A-pillar
- T16 – 16-pin connector, in dash panel centre, self-diagnosis connection
- T28 – 28-pin connector
- T32 – 32-pin connector, blue


- (42) – Earth point, next to steering column
- (49) – Earth point, on steering column
- (81) – Earth connection -1-, in dash panel wiring harness
- (135) – Earth connection -2-, in dash panel wiring harness
- (A50) – Positive (+) connection (30a), in dash panel wiring harness
- (A76) – Connection (diagnosis wire K), in dash panel wiring harness
- (B229) – Connection (high bus), in interior wiring harness
- (B230) – Connection (low bus), in interior wiring harness

\*\* – From May 2000  
 -●- – Up to April 2000

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange

Seat adjustment front passenger's seat

- E64 - Longitudinal adjustment switch, front passenger's seat
- E65 - Front height adjustment switch, front passenger's seat
- E66 - Rear height adjustment adjustment switch, front passenger's seat
- E98 - Backrest adjustment switch, front passenger's seat
- T2c - 2-pin connector, black
- T4d - 2-pin connector, black, under front passenger's seat
- T4e - 2-pin connector, black, under front passenger's seat
- T4f - 2-pin connector, black, under front passenger's seat
- T4g - 2-pin connector, black, under front passenger's seat
- T6h - 6-pin connector, red, under front passenger's seat
- T8f - 8-pin connector
- V31 - Longitudinal adjustment motor, front passenger's seat
- V32 - Front height adjustment motor, front passenger's seat
- V33 - Rear height adjustment motor, front passenger's seat
- V46 - Backrest adjustment motor, front passenger's seat

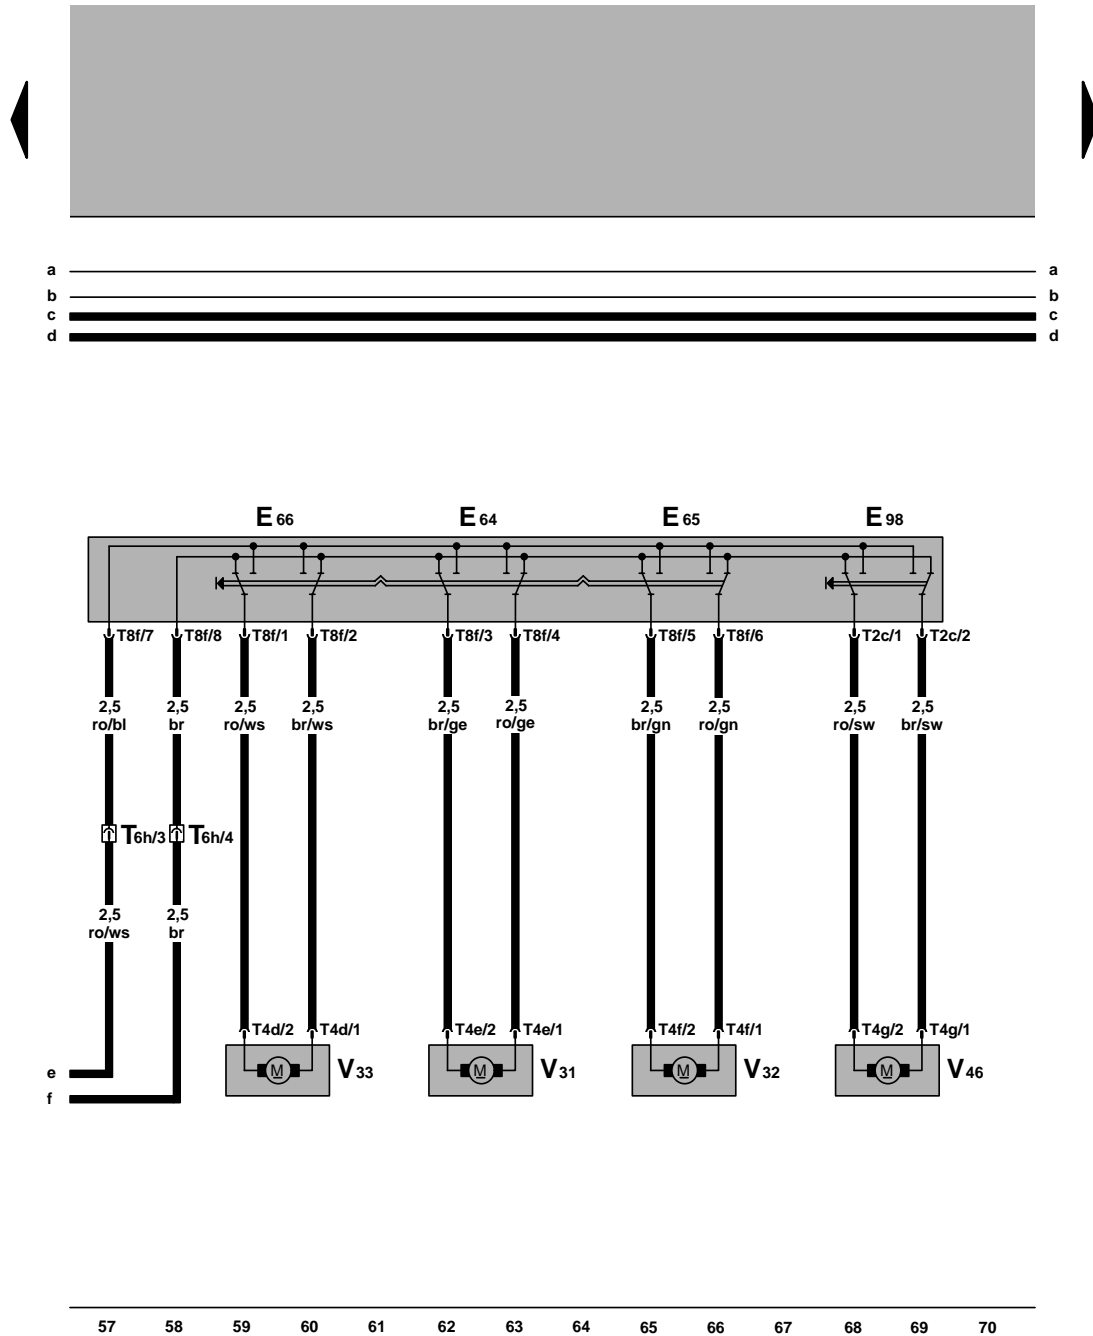


97-28652

Door control unit (driver's side), electrically adjustable exterior mirrors for driver's door

- F260 – Mirror folding system contact switch, driver's side
- J386 – Door control unit, driver's side
- T2 – 2-pin connector
- T8e – 8-pin connector
- T10i – 10-pin connector, black, connector point left A-pillar
- T10q – 10-pin connector, blue, connector point left A-pillar
- T12 – 12-pin connector, in driver's door
- T29 – 29-pin connector
- V17 – Mirror adjustment motor, driver's side
- V121 – Folding mirror motor, driver's side
- V149 – Mirror adjustment motor, driver's side
- Z4 – Heated exterior mirror, driver's side

- (267) – Earth connection -2-, in door wiring harness - driver's side
- (Z1) – Connection -2-, in mirror adjustment/heating wiring harness
- Fold in (retraction) function for some export countries only

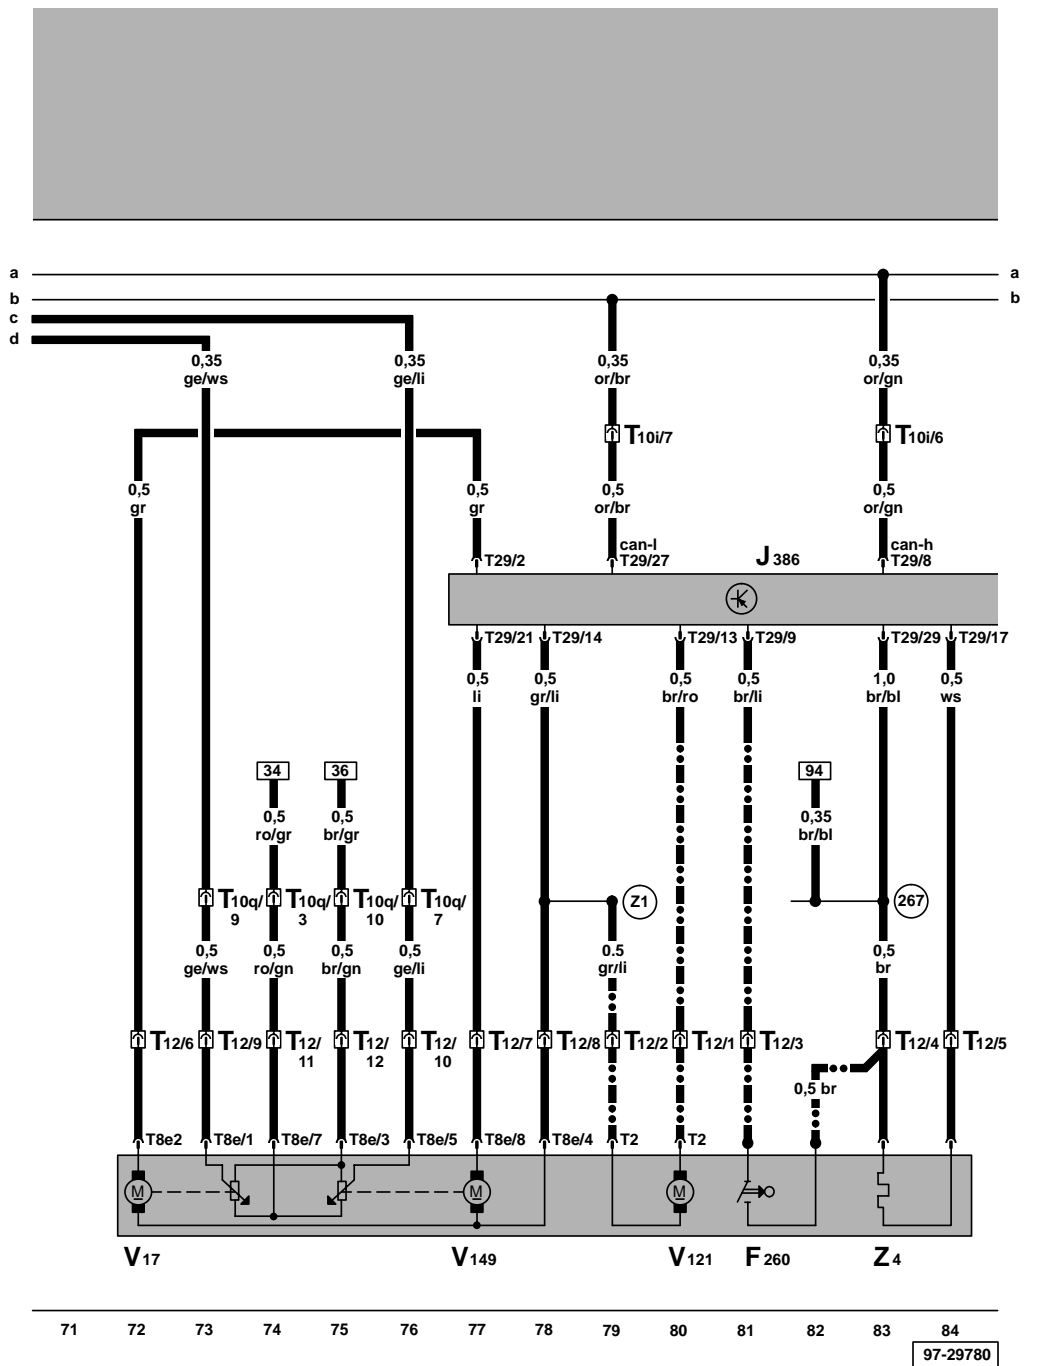

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange


Door control unit (driver's side), mirror adjustment switch, mirror fold system switch

- E20 - Switches and instruments, lighting control
- E43 - Mirror adjustment switch
- E48 - Mirror adjustment change-over switch
- E231 - Exterior mirror heating button
- E263 - Mirror fold system switch
- J386 - Door control unit, driver's side
- J393 - Convenience system central control unit
- L78 - Mirror adjustment switch illumination
- T6c - 6-pin connector
- T10i - 10-pin connector, black, connector point left A-pillar
- T10q - 10-pin connector, blue, connector point left A-pillar
- T10t - 10-pin connector
- T23 - 23-pin connector
- T29 - 29-pin connector

- (44) - Earth point, lower part of left A-pillar
- (A4) - Positive (+) connection (58b), in dash panel wiring harness
- (A20) - Connection (15a), in dash panel wiring harness
- (R51) - Connection (58b), in door wiring harness - driver's side


- \*\* - Up to April 2001
- \*\*\* - From May 2001
- Only models with separated mirror heating

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange

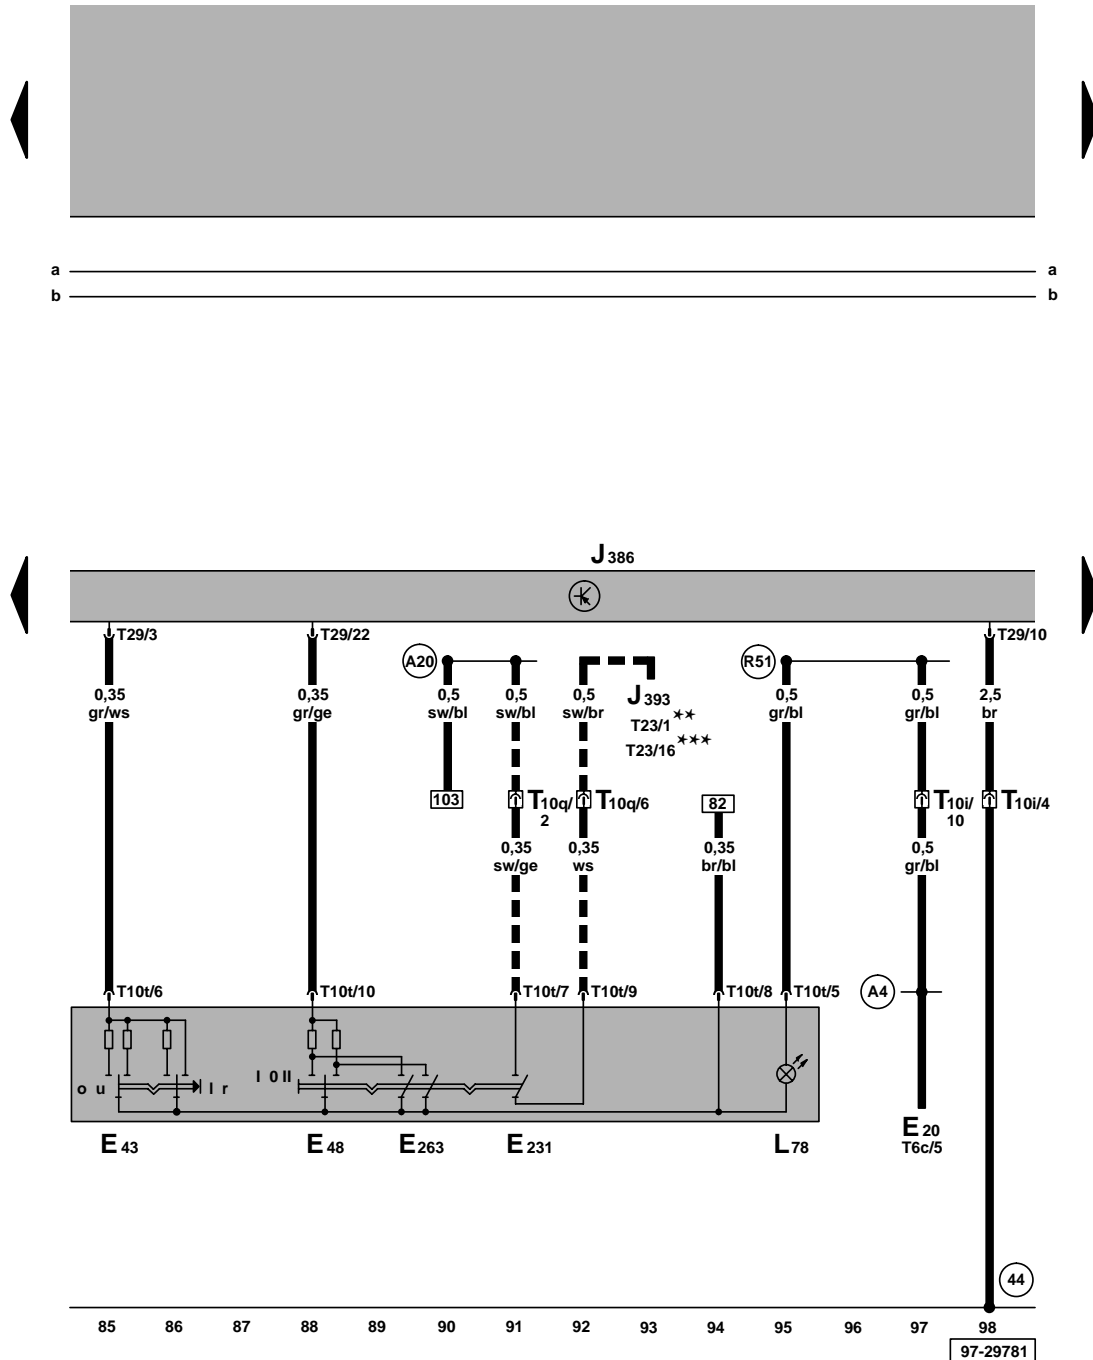



Door control unit (driver's side), door control unit (front passenger's side)

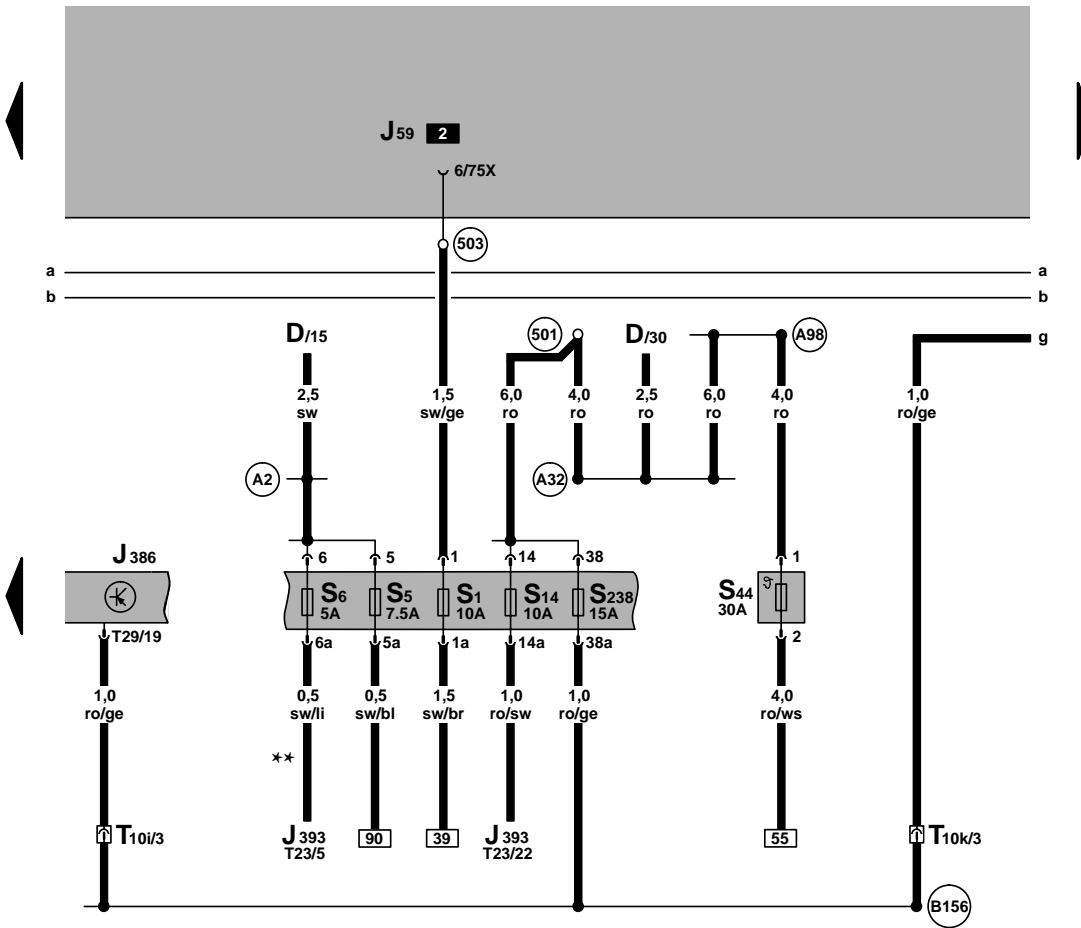


- D - Ignition/starter switch
- J59 - X contact relief relay
- J386 - Door control unit, driver's side
- J393 - Convenience system central control unit, behind dash panel, left
- S1 - Fuse in fuse box
- S5 - Fuse in fuse box
- S6 - Fuse in fuse box
- S14 - Fuse in fuse box
- S44 - Seat adjustment thermo-fuse 1, on position relay carrier above relay plate
- S238 - Fuse 38 in fuse box
- T10i - 10-pin connector, black, connector point left A-pillar
- T10k - 10-pin connector, black, connector point right A-pillar
- T23 - 23-pin connector
- T29 - 29-pin connector
- (501) - Screw connection -2- (30), on relay plate
- (503) - Screw connection (75X), on relay plate
- (A2) - Positive (+) connection (15), in dash panel wiring harness
- (A32) - Positive (+) connection (30), in dash panel wiring harness
- (A98) - Positive (+) connection-4-(30), in dash panel wiring harness
- (B156) - Positive (+) connection (30a), in interior wiring harness

\*\* - Up to April 2001

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange

Door control unit (front passenger's side), electrically adjustable exterior mirrors for front passenger's door

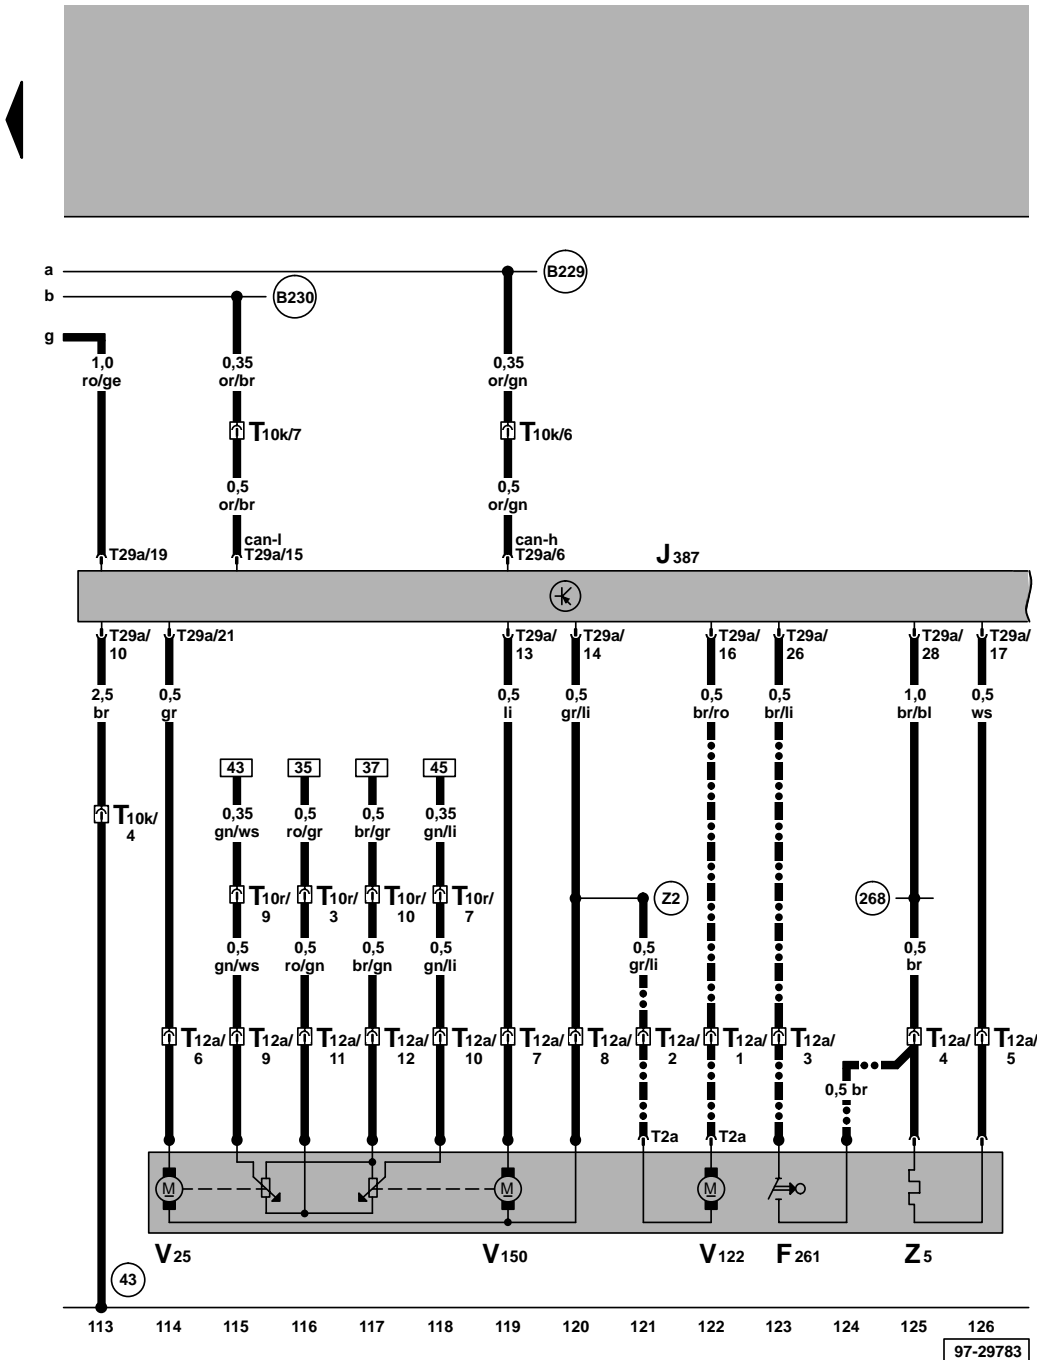

- F261 – Mirror folding system contact switch, front passenger's side
- J387 – Door control unit, front passenger's side
- T2a – 2-pin connector
- T10k – 10-pin connector, black, connector point right A-pillar
- T10r – 10-pin connector, blue, connector point right A-pillar
- T12a – 12-pin connector, in front passenger's door
- T29a – 29-pin connector
- V25 – Mirror adjustment motor, front passenger's side
- V122 – Folding mirror motor, front passenger's side
- V150 – Mirror adjustment motor, front passenger's side
- Z5 – Heated exterior mirror, front passenger's side

- (43) – Earth point, lower part of right A pillar
- (268) – Earth connection -2-, in door wiring harness - front passenger's side
- (B229) – Connection (high bus), in interior wiring harness
- (B230) – Connection (low bus), in interior wiring harness
- (Z2) – Connection -2-, in mirror adjustment wiring harness
- Fold in (retraction) function for some export countries only

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange