

DATA LIST/ACTIVE TEST

HINT:

By accessing the DATA LIST displayed by the hand-held tester, you can perform such functions as reading the values of switches and sensors without removing any parts. Reading the DATA LIST is the first step of troubleshooting and is one method to shorten labor time.

- (d) Connect the hand-held tester to the DLC3.
- (e) Turn the power switch on (IG).
- (f) Following the display on the tester screen, read the "DATA LIST".

1. DATA LIST FOR AIRBAG ECU ASSY

[System Selection Screen]

"1: DIAGNOSIS" – "1: OBD/MOBD" – "MODEL YEAR" – "MODEL SELECTION = PRIUS" – Select the option parts – "8: SRS AIRBAG" – "1: DATA LIST" – "ALL"

Item	Measurement Item/ Range (Display)	Normal Condition	Diagnostic Note
D SEAT POSITION	Seat position (Driver side)/ FORWARD: Seat position forward BKWARD: Seat position back FAIL: Failure detected	FORWARD/BKWARD	–
PASSENGER DETECT	Passenger detection/ NG: Indeterminate data NONE: Seat vacant DETECT: Seat occupied FAIL: Failure detected	NG/NONE/DETECT	–
D BUCKLE SW	Buckle switch (Driver side)/ ON: Seat belt fastened OFF: Seat belt not fas- tened NG: In determinate data	ON/OFF	–
P BUCKLE SW	Buckle switch (Passenger side)/ ON: Seat belt fastened OFF: Seat belt not fas- tened NG: In determinate data	ON/OFF	–
DISPLAY TYPE	Display type identification information/ LR: Display indicated by LH/RH DP: Display indicated by Driver/Passenger	DP	–
#CODES	Number of past DTC re- corded/ Min.: 0, Max.: 255	0	–