

## TAPE IS TANGLED DUE TO INCORRECT TAPE SPEED OR AUTO-REVERSE MALFUNCTION

### INSPECTION PROCEDURE

#### 1 CHECK FOR ANY FOREIGN OBJECT

(a) Check for any foreign objects.

- (1) Check that no foreign objects or defects are detected in the cassette tape player of the radio receiver assy.

**OK: No foreign objects or defects are detected.**

**NG** → REMOVE FOREIGN OBJECT

**OK**

#### 2 REPLACE CASSETTE TAPE WITH ANOTHER AND RECHECK(BELOW 90 MIN.)

(a) Replace the cassette tape with another one and recheck.


- (1) Replace the cassette tape with another normal one (90 minutes. or less) to see if the same trouble occurs again.

**OK: Malfunction disappears.**

**OK** → CASSETTE TAPE IS FAULTY

**NG**

#### 3 CLEAN HEAD AND CHECK OPERATION

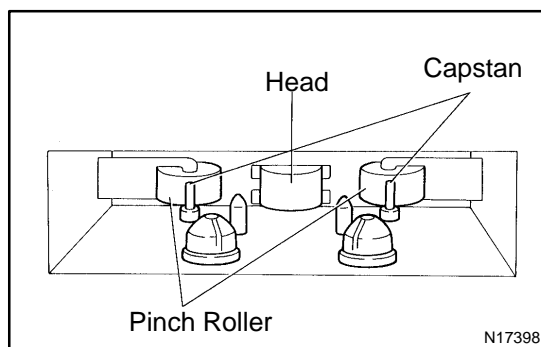

(a) Head cleaning

- (1) Raise the cassette door with your finger. Using a pencil or similar object, push in the guide.
- (2) Using a cleaning pen or cotton applicator soaked in cleaner, clean the head surface, pinch rollers and capstans.
- (3) Check if the same trouble occurs again.

**OK: Malfunction disappears.**

**NG** → REPLACE RADIO RECEIVER ASSY (SEE PAGE 67-5)

**OK**

**HEAD IS DIRTY**