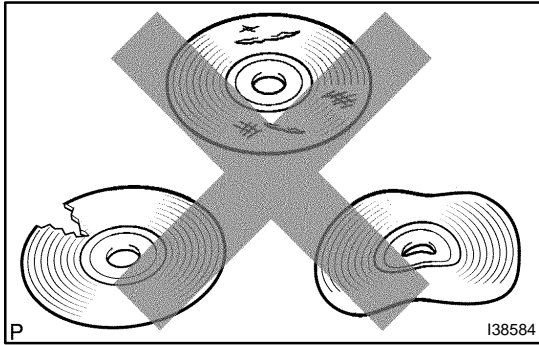


**MAP DISC CANNOT BE INSERTED****INSPECTION PROCEDURE****1 CHECK MAP DISC**

- (a) Check that the map disc is not deformed or cracked.  
**OK: No deformations or cracks appear on the map disc.**

**NG****REPLACE THE MAP DISC****OK****2 CHECK NAVIGATION ECU**

- (a) Check that the "PUSH" indicator near the disc slot comes on.  
**OK: It does not come on.**

**NG****PRESS THE EJECT SWITCH TO EJECT THE DISC****OK****PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
(SEE PAGE [05-1873](#))**