


## VOICE IS NOT RECOGNIZED

### INSPECTION PROCEDURE

#### 1 CHECK MAP DISC

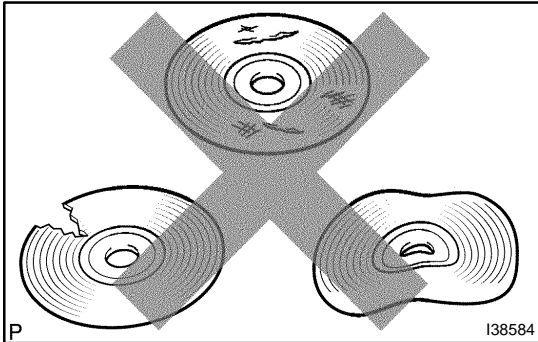


- (a) Check that the map disc is not deformed or cracked.  
**OK: No deformations or cracks appear on the map disc.**

**NG** → REPLACE MAP DISC

**OK**

#### 2 CHECK MAP DISC

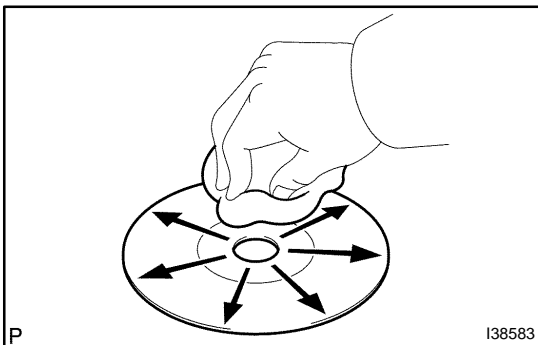

- (a) Check for dirt on the map disc surface.  
**OK: No dirt is on the map disc surface.**

HINT:

If dirt is on the map disc surface, wipe it with a soft cloth from inside to outside in a radial direction.

**NOTICE:**


Do not use conventional record cleaner or anti-static preservative.

**NG** → REPLACE CLEAN THE MAP DISC

**OK**

#### 3 NAVIGATION CHECK MODE(MICROPHONE CHECK)

- (a) Enter the "Microphone Check" mode (see page [05-1862](#))

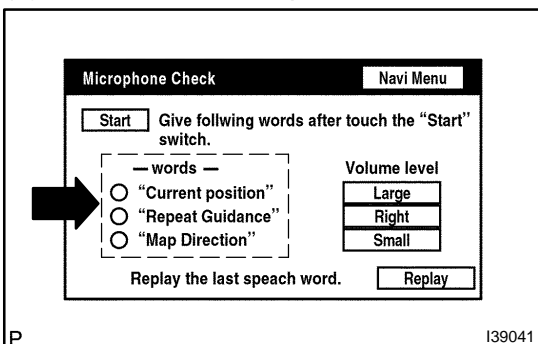

- (b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.  
**OK: All check items are recognized.**

**NG** → PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE [05-1873](#))

**OK**

**REPLACE NAVIGATION ECU (SEE PAGE [67-23](#))**