

FAIL-SAFE CHART

1. If the following conditions are detected while the cruise control is in operation, the system clears the stored vehicle speed in the hybrid vehicle control ECU and cancels the cruise control operation.

Vehicle Condition	Auto Cancel Condition	Re-operation Condition
CRUISE main indicator light blinks.	<ul style="list-style-type: none"> • There is an open or short in the stop lamp switch circuit. • Vehicle speed signal changes suddenly. 	<ul style="list-style-type: none"> • Push the cruise control main switch ON-OFF button "on" again.
CRUISE main indicator light blinks.	<ul style="list-style-type: none"> • There is a problem with the input circuit of the stop lamp switch circuit. 	<ul style="list-style-type: none"> • The indicator light blinks until the cruise control main switch ON-OFF button is pushed on again. • Constant speed control is prohibited until the power switch is turned off.
CRUISE main indicator light goes off.	<ul style="list-style-type: none"> • Vehicle speed is below the low speed limit (approx. 40 km/h (approx. 25 mph)) while driving with the cruise control on. • Vehicle speed is lower than the stored speed by approx. 16 km/h (approx. 9.9 mph) or more while driving with the cruise control on. 	<ul style="list-style-type: none"> • Push the cruise control main switch to -/RES.