

CUSTOMIZE PARAMETERS

1. BUZZER CANCEL SETTING

- (a) Check that the ODO display is on, and turn the power switch off and then on. If other display is on, change it to the ODO display.
- (b) Within 6 seconds, push and hold the ODO/TRIP switch for 10 seconds or more.
- (c) Following the table below, set the buzzer cancel setting.

Buzzer	Operation
Seat belt buzzers for driver's seat	Driver's seat buckle switch OFF → ON (Seat belt unfastened → fastened)
Seat belt buzzer for passenger seat	Passenger seat buckle switch OFF → ON (Seat belt unfastened → fastened)
A/T reverse buzzer	A/T R position → P position

HINT:

The ODO/TRIP display changes from "b-on" to "b-off", entering the cancel mode.

- (d) During the cancel mode, each time the ODO/TRIP switch is pushed, the setting is switched between*¹ b-on and *² b-off.

HINT:

*¹ b-on: Cancel is invalid

*² b-off: Cancel is valid

- (e) After the setting, the mode will be canceled by either not operating the switch for 10 seconds or more, or turning the power switch from on to off.

HINT:

The setting can be reset when reconnecting the battery connector or removing/installing the meter connector(Buzzer on).